



Acer Chromebook C740 Back Panel Replacement

Prerequisite Only

Written By: Flor De La Rosa



This document was generated on 2019-11-05 06:35:42 PM (MST).

INTRODUCTION

Prerequisite Only

TOOLS:

- iFixit Opening Tools (1)
- Phillips #0 Screwdriver (1)

PARTS:

- Acer Chromebook C740 Bottom Cover (1)

Step 1 — Back Panel



- Power down the Chromebook and disconnect the power adapter.

Step 2



- Place the chromebook bottom side up on a flat surface.
- Remove the thirteen 7 mm screws with a Phillips #0 screwdriver.

Step 3



- Insert the plastic opening tool into the slit near the hinges and pry upwards to lift the back panel.
- ⓘ Applying pressure may be necessary. A click indicates the panel is ready to come off.

To reassemble your device, follow these instructions in reverse order.