




Acer Chromebook C740 Solid State Drive Replacement

Replace the solid state drive (SSD) for the Acer Chromebook C740.

Written By: Flor De La Rosa

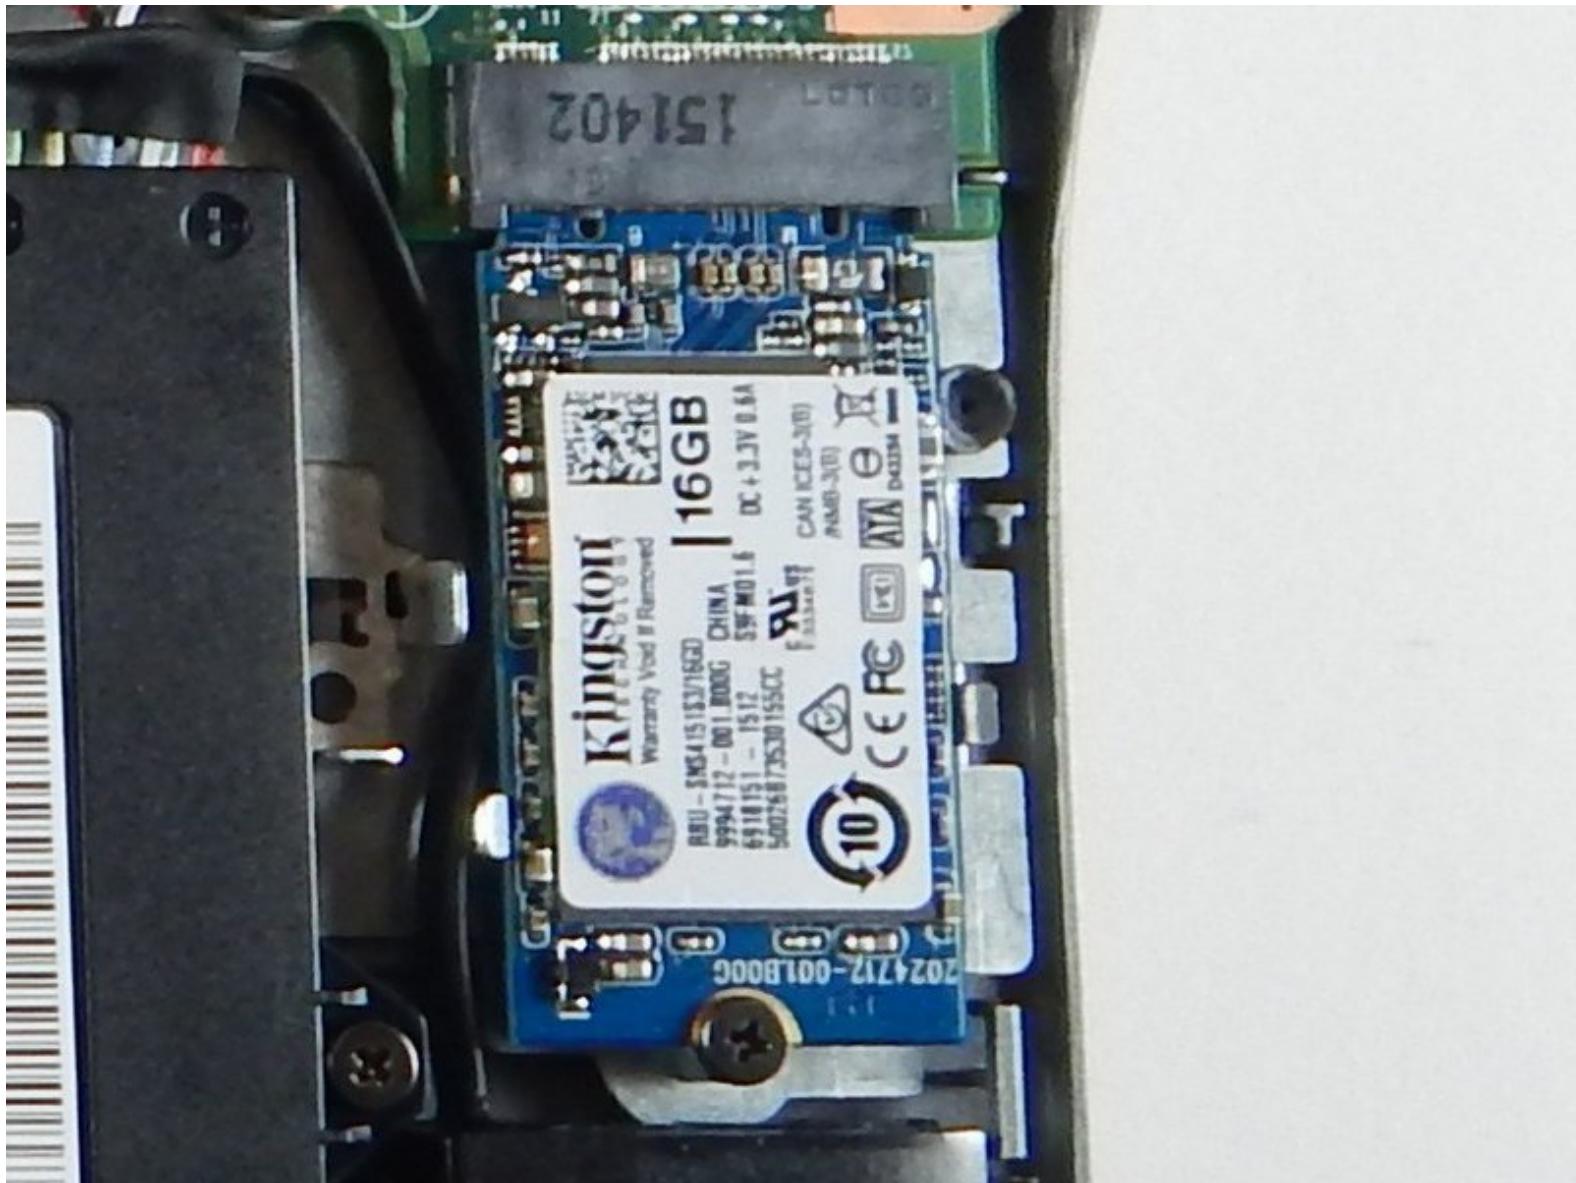

INTRODUCTION

The solid state drive replacement for the Acer Chromebook C740 requires removing the back panel and removing one screw. The solid state drive stores data from the laptop.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

PARTS:

- [Acer Chromebook C740/C720/C720P SSD Drive \(1\)](#)

Step 1 — Back Panel



- Power down the Chromebook and disconnect the power adapter.

Step 2




- Place the chromebook bottom side up on a flat surface.
- Remove the thirteen 7 mm screws with a Phillips #0 screwdriver.

Step 3




- Insert the plastic opening tool into the slit near the hinges and pry upwards to lift the back panel.
(i) Applying pressure may be necessary. A click indicates the panel is ready to come off.

Step 4 — Solid State Drive

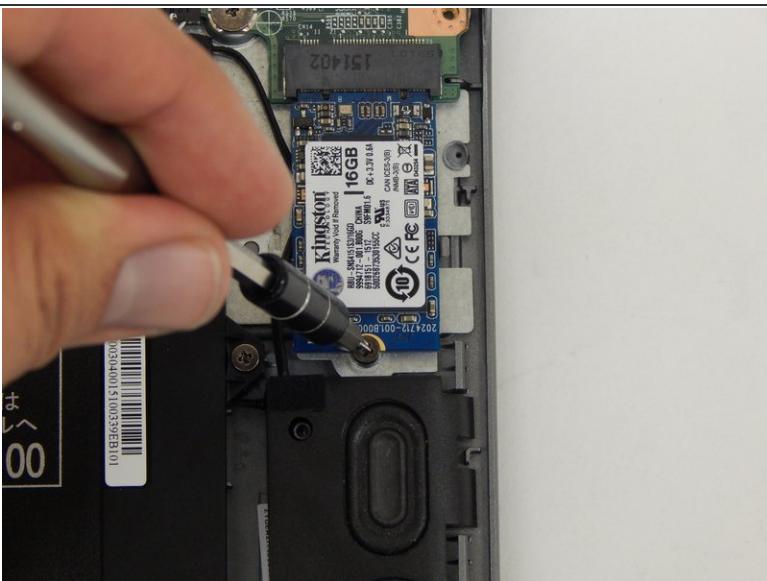

- Remove the 3.75 mm screw with a Phillips #0 screwdriver.

Step 5

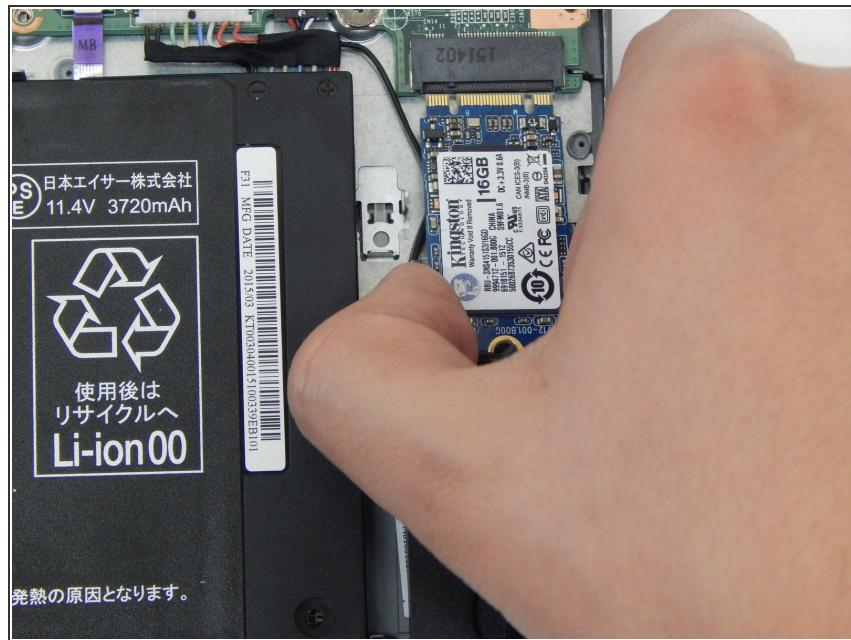

- Unplug the solid state drive.

To reassemble your device, follow these instructions in reverse order.