



# Acer Chromebook C740-C4PE LCD Screen Replacement

This guide will show you how to replace a LCD Screen on an Acer Chromebook C740-C4PE.

Written By: Sang Huynh



## INTRODUCTION

When the screen no longer functions like it should, it is best to replace it altogether with a new one. This guide will aid you in removing the screen frame, inside screws, and LCD screen.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)

### PARTS:


- [Acer Chromebook C740 LCD](#) (1)

## Step 1 — LCD Screen



- Power down the Acer Chromebook and disconnect the battery adapter.


## Step 2

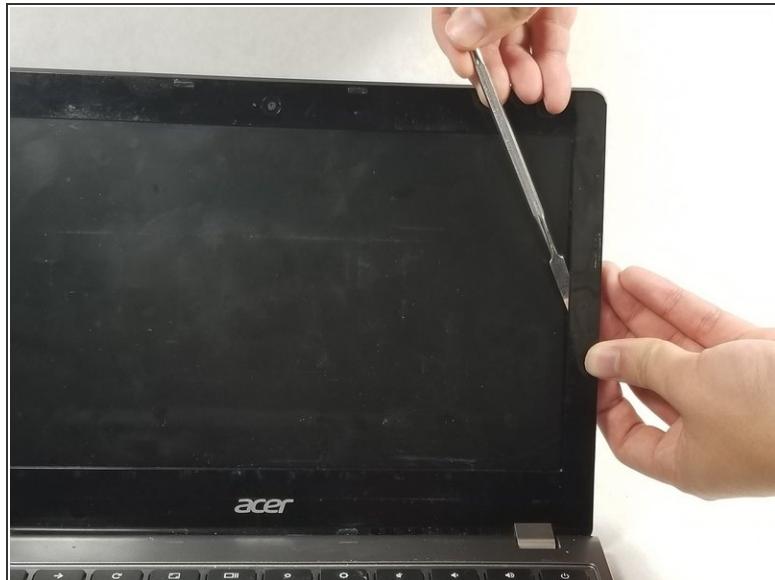

- Use a spudger to pry the black screen frame off.

*(i)* It is recommended to start from the top corner.

## Step 3

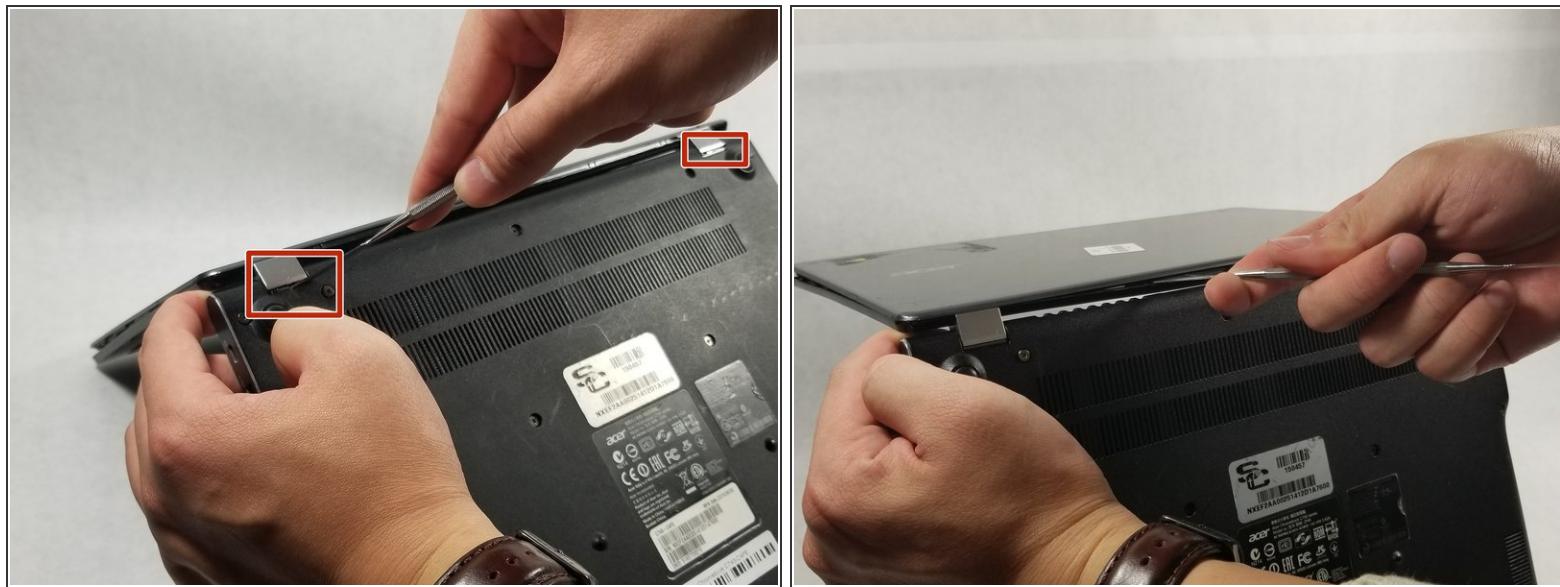

- Use the spudger to open the two hinges that connect the screen frame to the bottom of the Chromebook.
- Move the spudger along the bottom of the screen frame until you can pull the frame out entirely.

## Step 4



- Use a #0 Phillips screwdriver to unscrew the four 3.35 mm screws.

## Step 5



- Place the LCD screen on top of keyboard.
- Lift the tape that holds the back of the LCD screen to the connector, and unplug the connector.
- Remove the LCD screen and replace with the new one.

To reassemble your device, follow these instructions in reverse order.