



Acer Chromebook CB3-131-C3KD Battery Replacement

Battery replacement for Acer Chromebook CB3-131-C3KD.

Written By: Ashley Oxner



INTRODUCTION

A battery is a power supply that provides power to the Acer Chromebooks hardware. This guide will show you how to remove the battery properly.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS #0 Screwdriver](#) (1)

Step 1 — Battery



(i) Make sure you turn off the laptop before starting.

- Unscrew and remove the (11) eleven 4mm J0 head screws on the underside of the laptop using the JIS #0 screwdriver.


Step 2



- Use the plastic opening tool to remove the back cover.


⚠ Be careful not to damage the ribbon cable connecting the back cover to the laptop.

Step 3

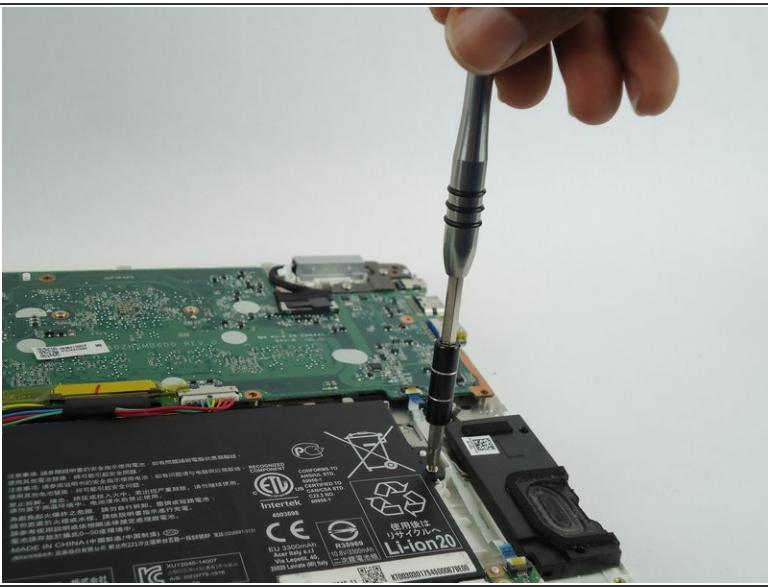

- Unscrew the (2) two 3mm J0 Phillips head screws that hold the battery in place.


Step 4

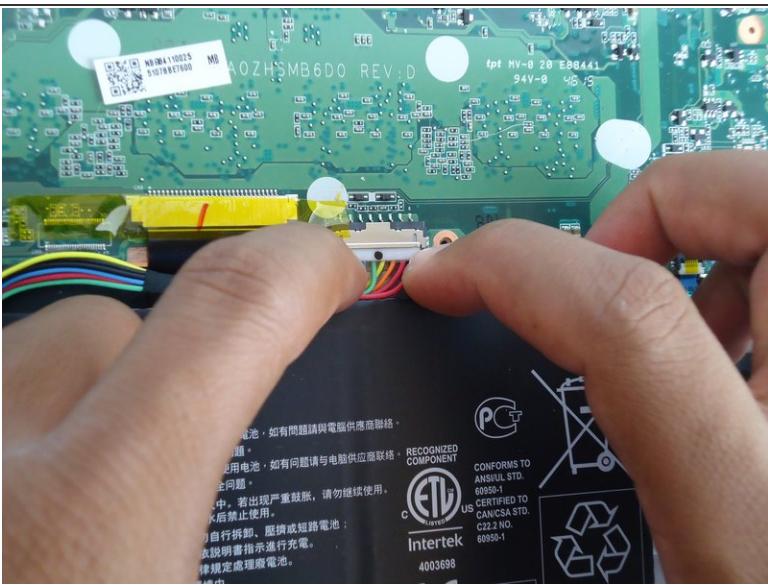

- Disconnect the battery from the motherboard.

⚠ Carefully disconnect the cable parallel to the board, not at an angle. Otherwise, you could damage the port.

Step 5

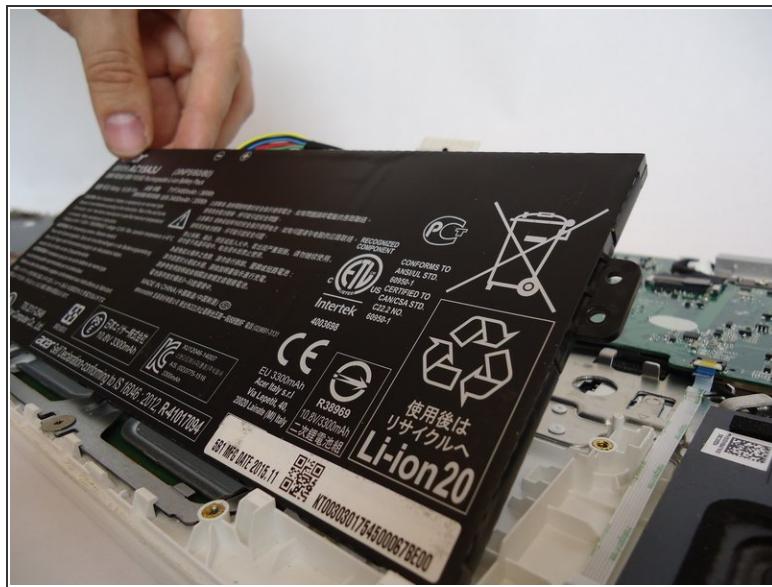

- Carefully lift the battery from one side, and then lift it out of the laptop.

To reassemble your device, follow these instructions in reverse order.