




# Acer Chromebook CB3-131-C3KD Keyboard Key Replacement

Explains and demonstrates how to carefully replace a key from the Acer Chromebook keyboard.

Written By: Johnathan

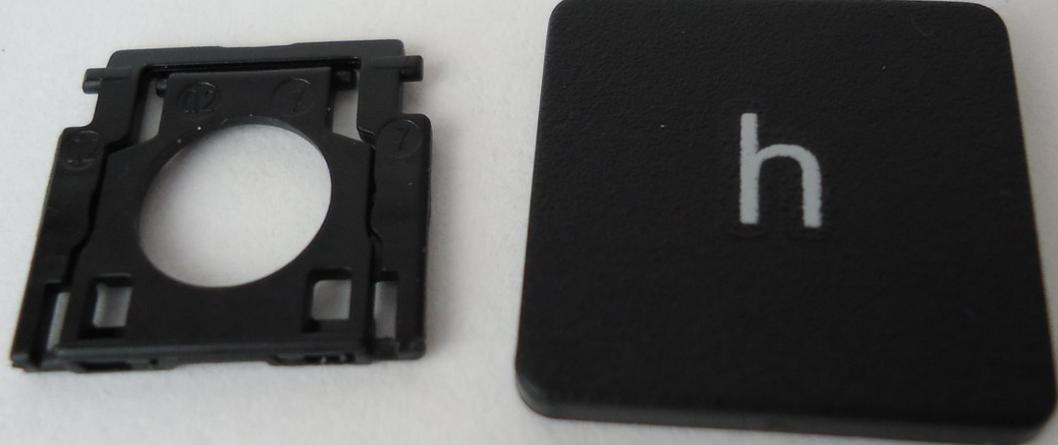


## INTRODUCTION

Use this guide to replace a key from the keyboard of your device.

### TOOLS:

- Flathead 3/32" or 2.5 mm Screwdriver (1)

## Step 1 — Keyboard Key

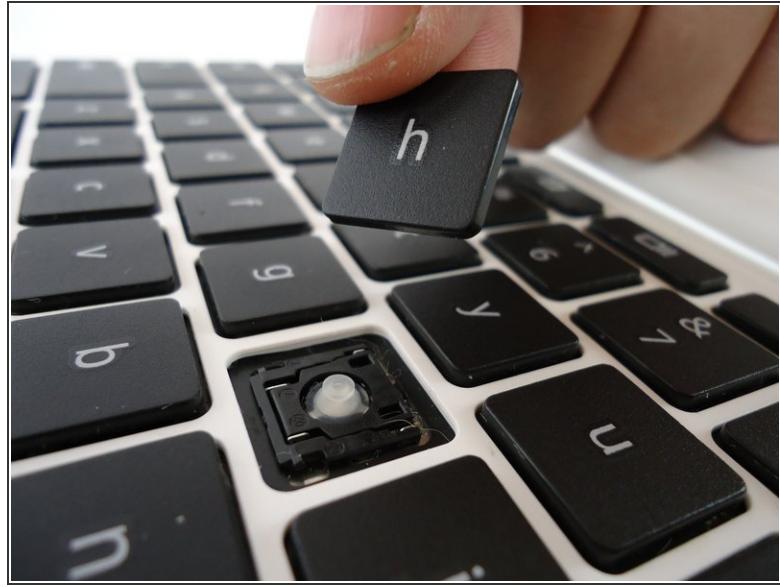

*(i)* Make sure you turn off the laptop before starting.

- Place the flat head screw driver under the key, but over the key clip retainer.

## Step 2




- Push down on one of the bottom corners of the key, so that the opposite diagonal corner rises and gives leeway.

 Carefully place the flat head screw driver under the raised corner.

- Carefully pry up from underneath the raised corner to raise the metal clips away from the key base.

## Step 3

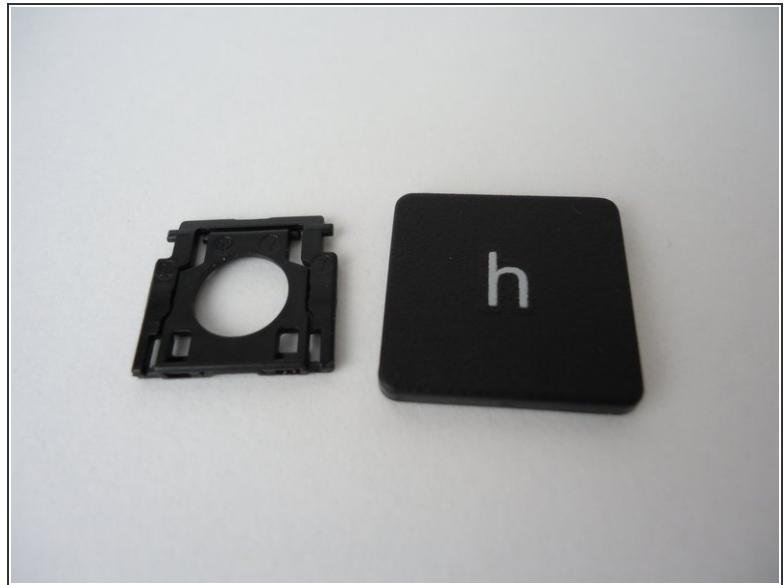

- Pry up from the top left and right corners of the retainer subsequently.
- Remove clip retainer.

To reassemble your device, follow these instructions in reverse order.