



Acer Chromebook CB3-131-C3KD Speakers Replacement

Acer Chromebook CB3-131-C3KD Speakers replacement guide.

Written By: Johnathan



INTRODUCTION

Use this guide to replace the speakers in your device.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS #0 Screwdriver](#) (1)

Step 1 — Battery



(i) Make sure you turn off the laptop before starting.

- Unscrew and remove the (11) eleven 4mm J0 head screws on the underside of the laptop using the JIS #0 screwdriver.


Step 2



- Use the plastic opening tool to remove the back cover.


⚠ Be careful not to damage the ribbon cable connecting the back cover to the laptop.

Step 3

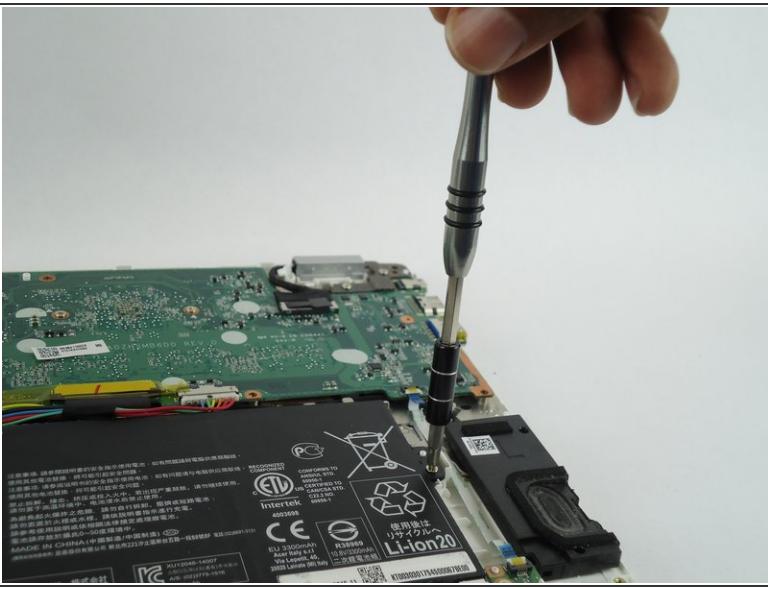

- Unscrew the (2) two 3mm J0 Phillips head screws that hold the battery in place.

Step 4

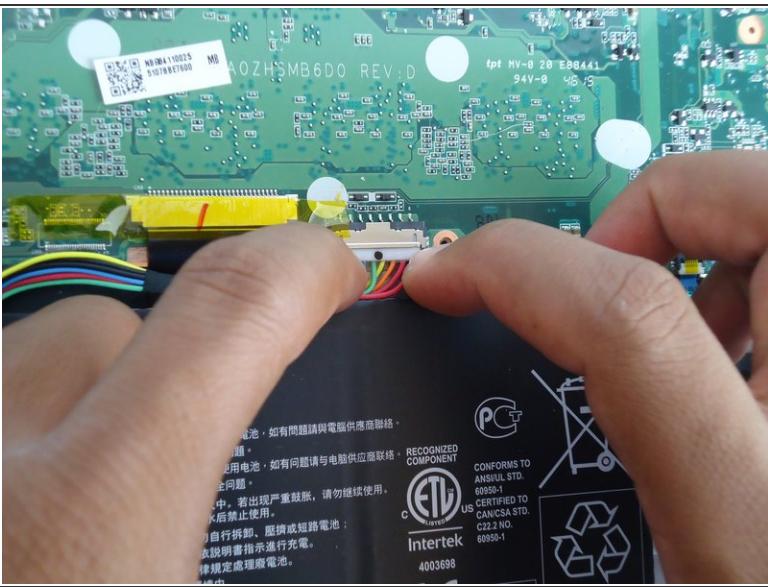

- Disconnect the battery from the motherboard.


⚠ Carefully disconnect the cable parallel to the board, not at an angle. Otherwise, you could damage the port.

Step 5





- Carefully lift the battery from one side, and then lift it out of the laptop.

Step 6 — Speakers

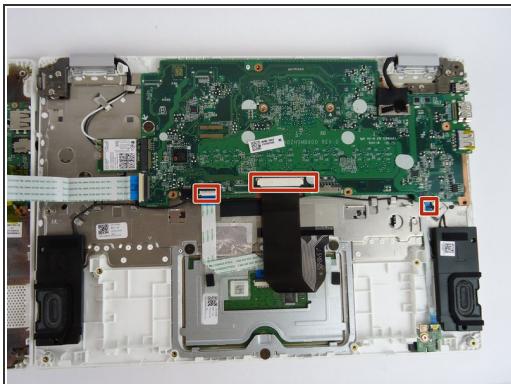




- Disconnect the three ribbon cables from the motherboard.

Step 7

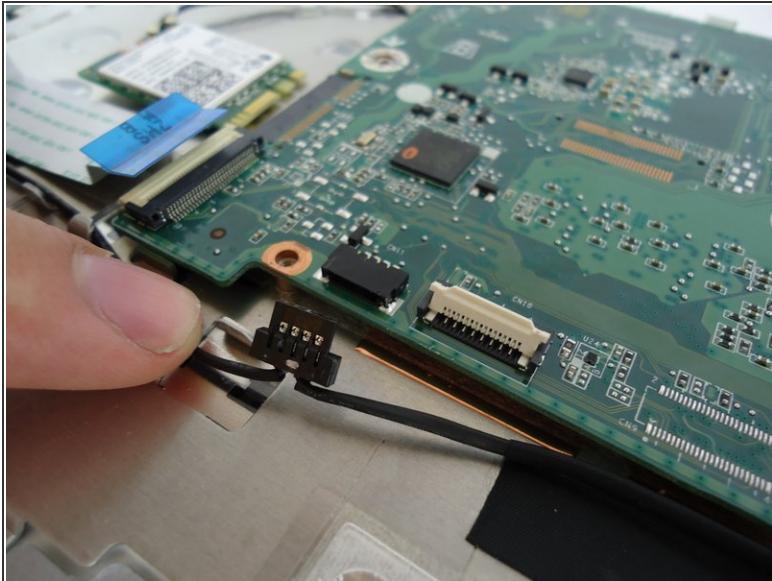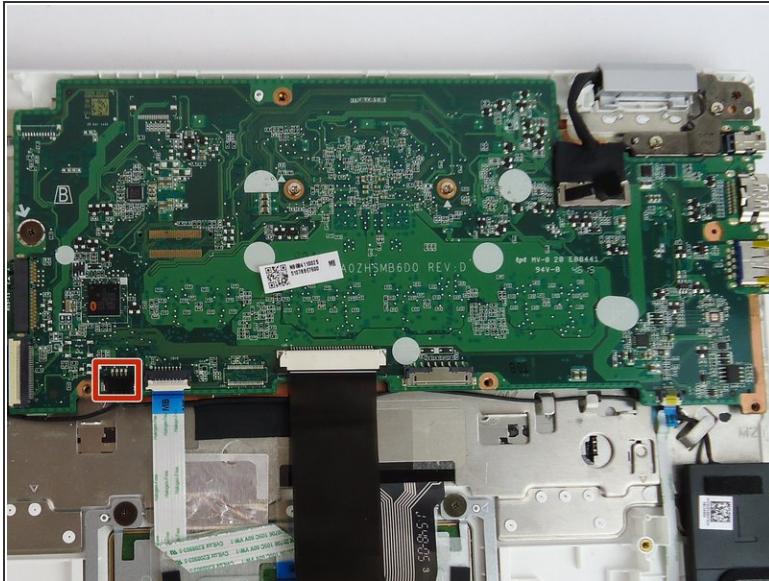


- Unplug the cable by putting both thumbs on each tab and unlocking the cable by pushing the tabs away.

Step 8

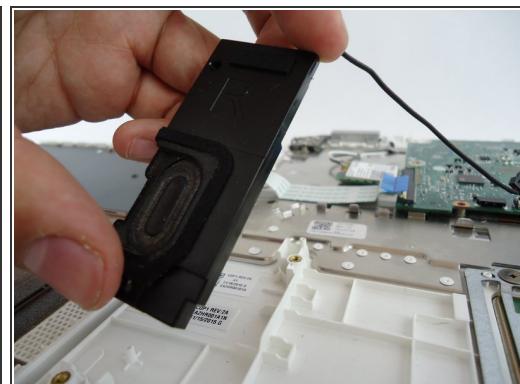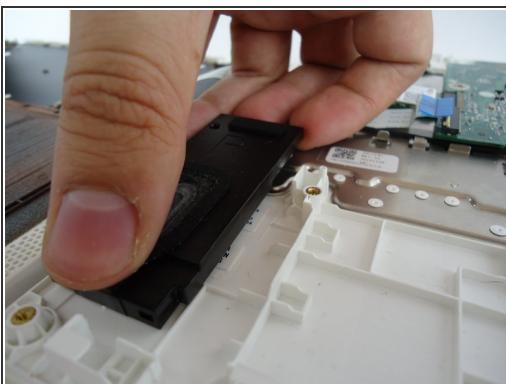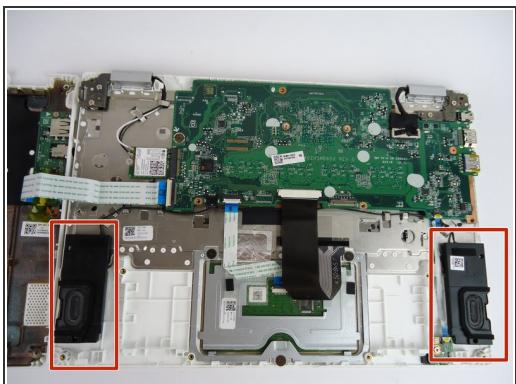

- Remove speakers by placing index finger on top and thumb on bottom of the speakers.
- Peel speakers away from the base that is connected by an adhesive.

Step 9

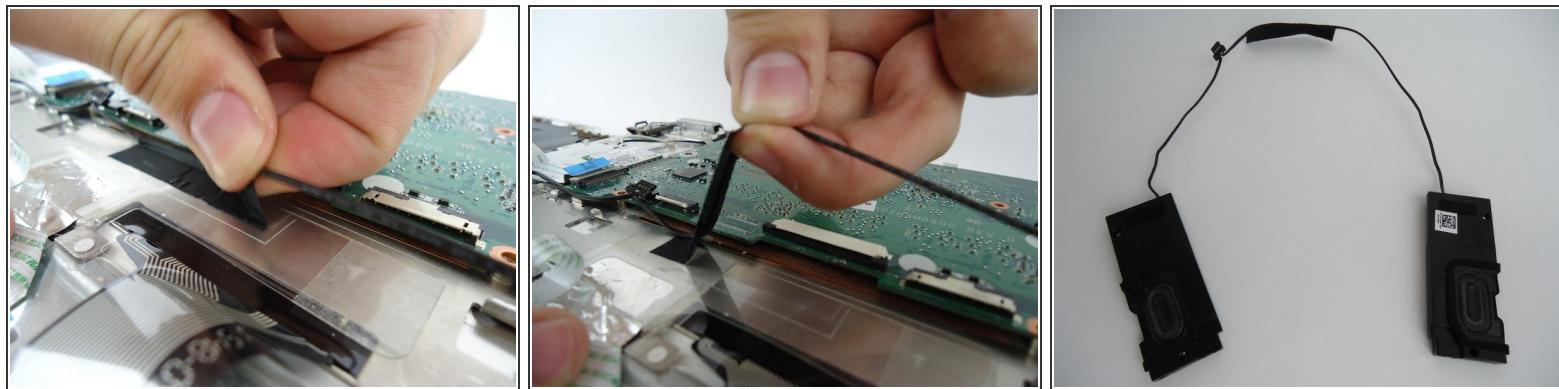

- Peel the black cord connecting the two speakers together away from the Velcro located at the midpoint between the two speakers.
- Remove speakers from laptop.

To reassemble your device, follow these instructions in reverse order.