



# Acer Chromebook CB5-571-C5XU Battery Replacement

This guide will show you how to replace the battery on the Acer Chromebook CB5-571-C5XU.

Written By: Kenneth Bowers




## INTRODUCTION

The battery supplies power to the laptop. The battery may need to be replaced if the laptop is a few years old, as batteries will start to lose their life after being used for a few years.

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Bottom Case

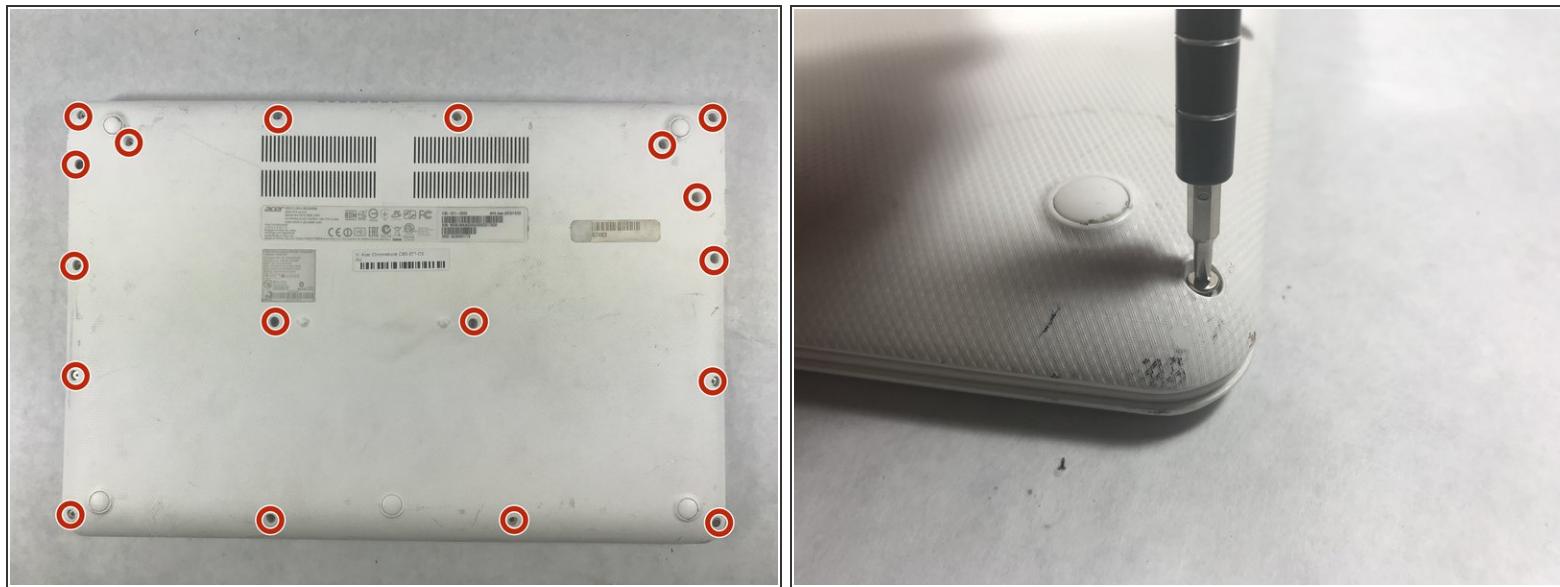


- Remove the following eighteen screws using a Phillips #0 screwdriver.
- ★ Remember to have a small bowl or container nearby to place the screws in, so none of the screws get lost.
- ⚠ Make sure the Chromebook is unplugged and shut down, so no files are lost and there is no risk of electrocution.

## Step 2

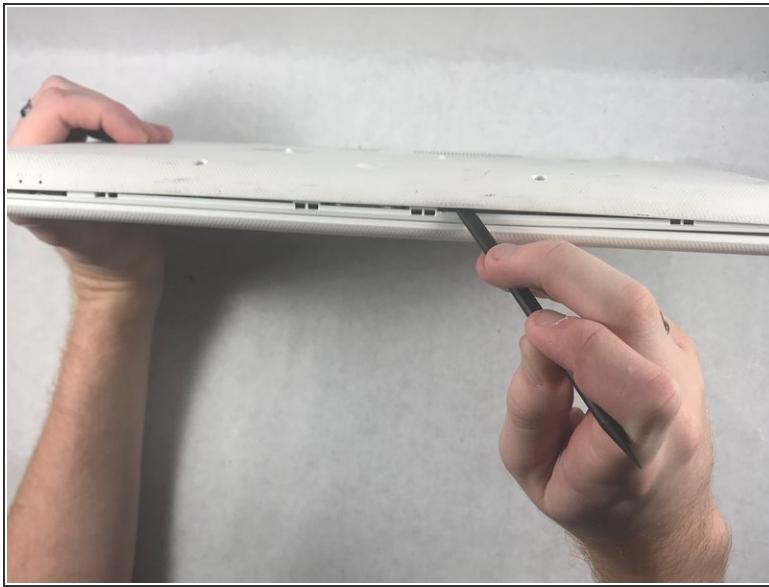

- Using the flat side of the spudger, pry open the bottom case of the laptop.
- Working from the front to the back, where it connects to the screen, proved to be the easiest way of popping the case off.


## Step 3 — Battery

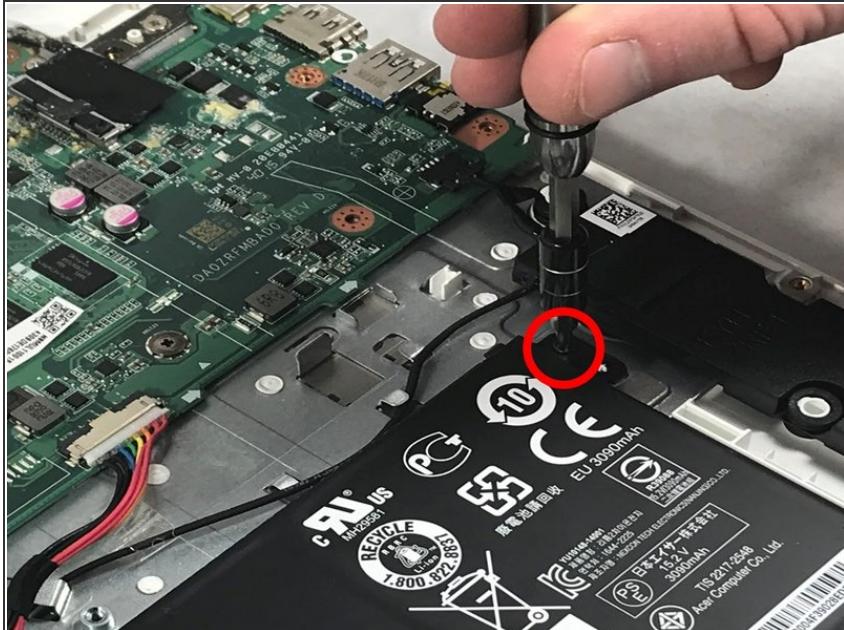

- Using a Phillips #0 screwdriver, unscrew the screw on right side of the battery placement.

- Be careful not to lose the screw and have a small container nearby to place it in.

## Step 4

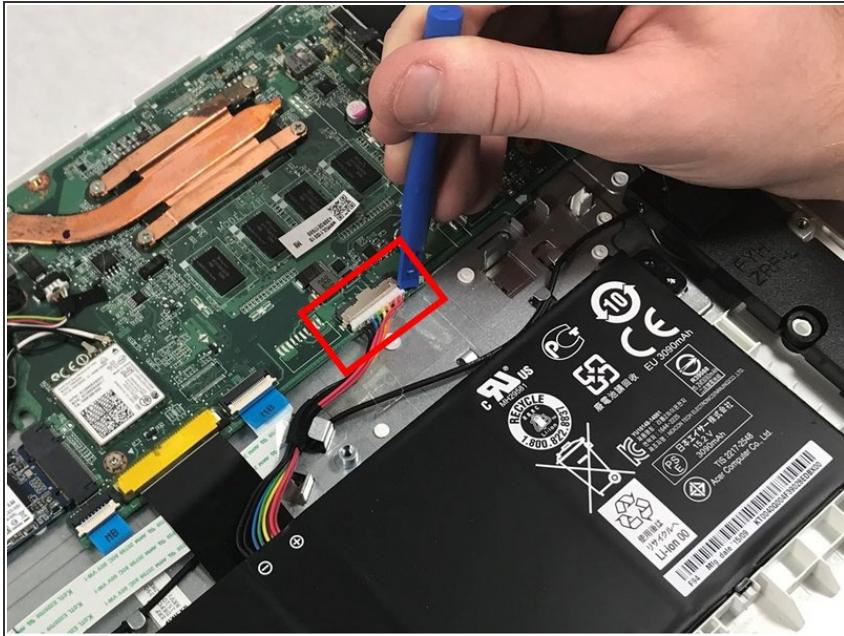

- Using a plastic opening tool, disconnect the wires connecting the battery to the motherboard.

## Step 5



- Gently lift the battery out and remove it from the laptop casing.

To reassemble your device, follow these guidelines in reverse order.