




Acer Chromebook CB5-571-C5XU Bottom Case Replacement

This guide will help users understand how to take off the bottom case to access the inside of the device.

Written By: Erin Moffatt

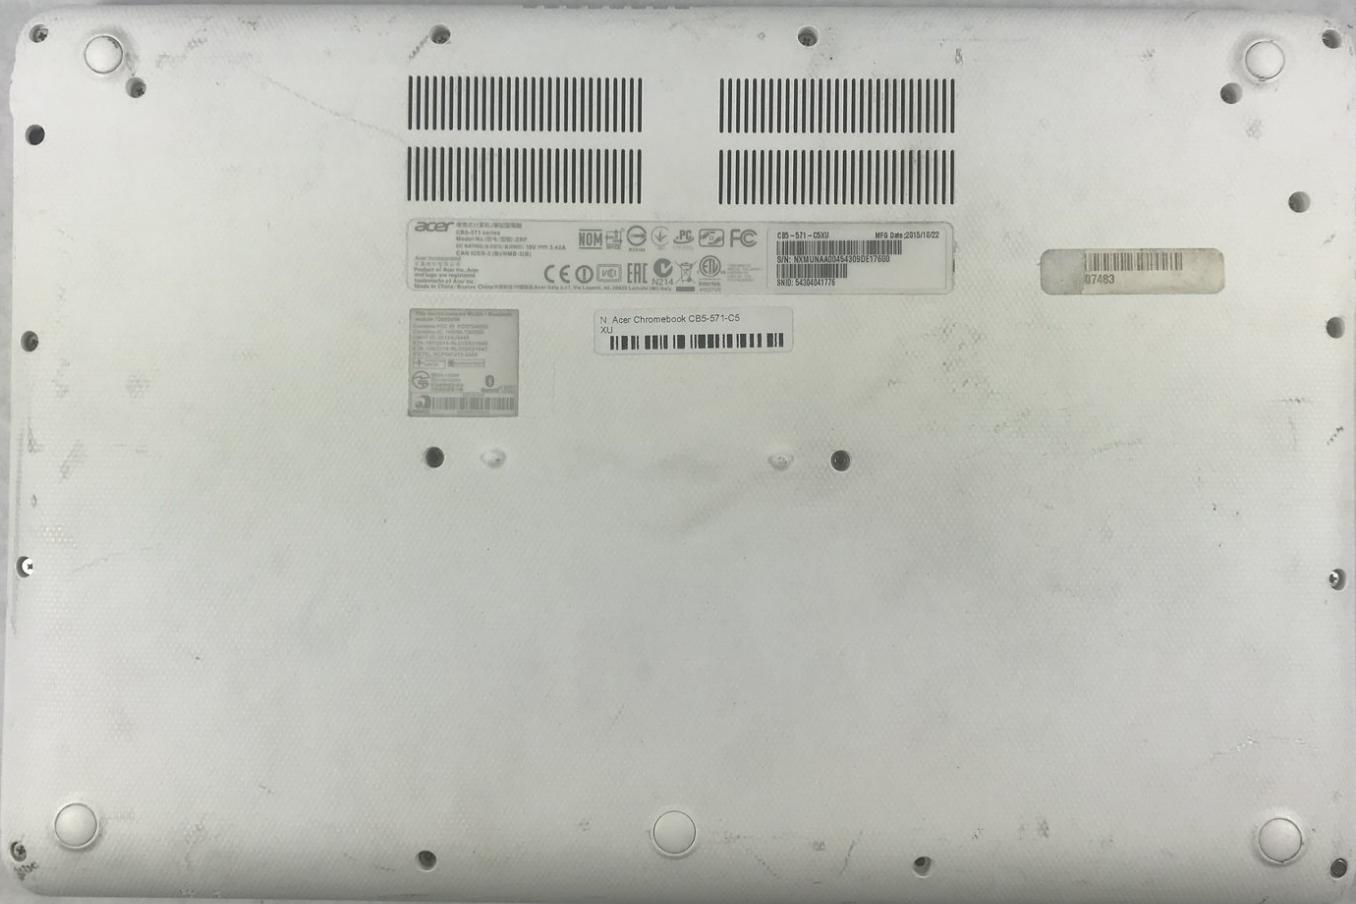

This document was generated on 2019-09-17 01:42:15 PM (MST).


INTRODUCTION

This guide will help users understand how to take off the bottom case to access the inside of the device.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Bottom Case

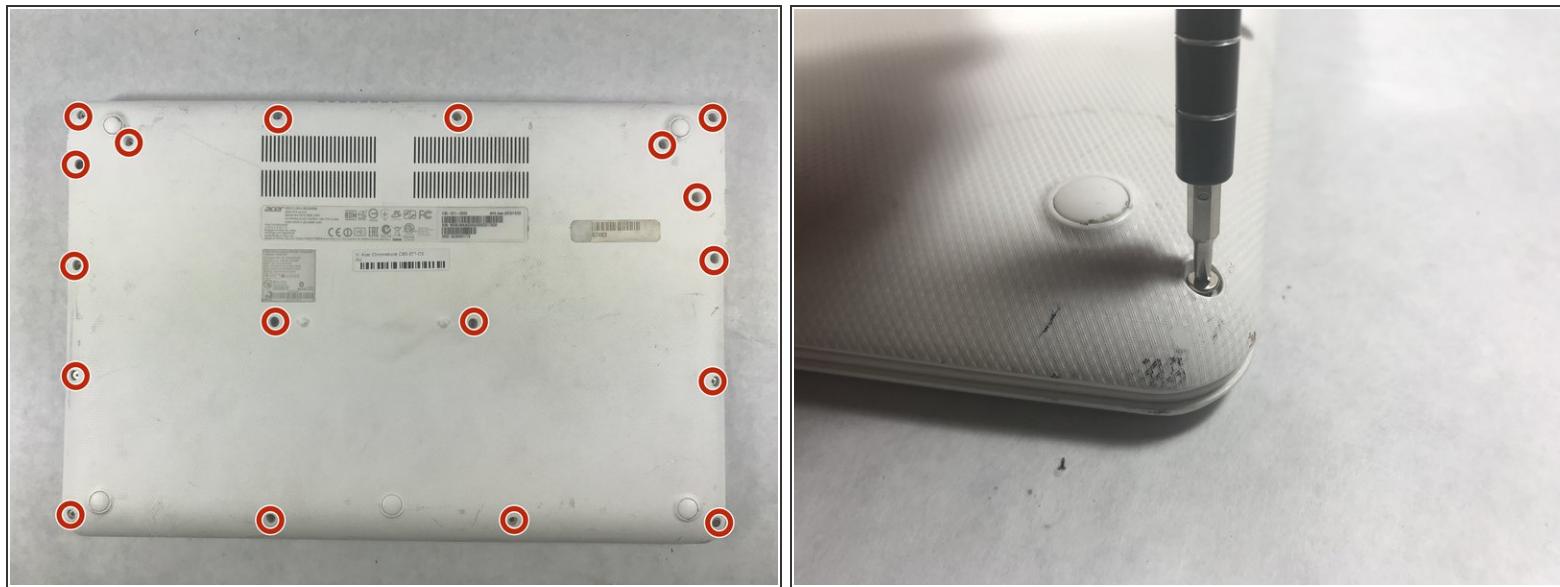

- Remove the following eighteen screws using a Phillips #0 screwdriver.
- ★ Remember to have a small bowl or container nearby to place the screws in, so none of the screws get lost.
- ⚠ Make sure the Chromebook is unplugged and shut down, so no files are lost and there is no risk of electrocution.

Step 2

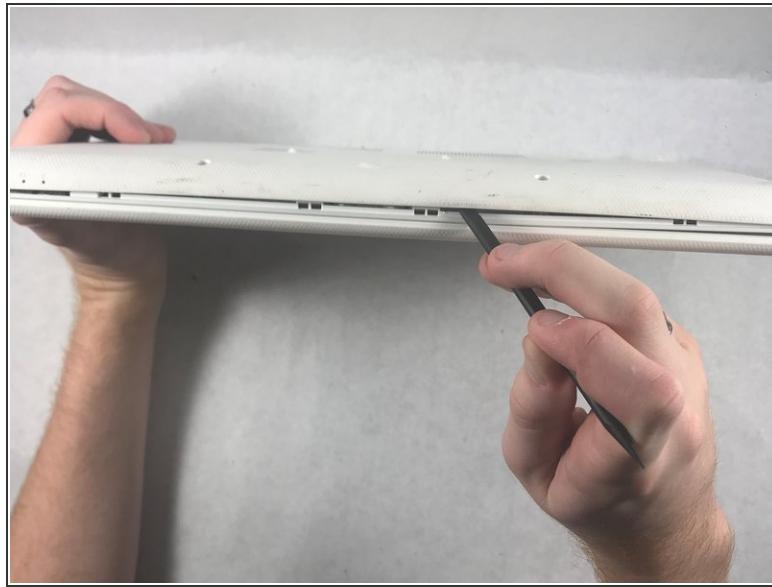

- Using the flat side of the spudger, pry open the bottom case of the laptop.
- Working from the front to the back, where it connects to the screen, proved to be the easiest way of popping the case off.

To reassemble your device, follow these instructions in reverse order.