




# Acer Chromebook R11 Battery Replacement

Here's how to replace the battery in your Acer Chromebook R11!

Written By: Jermaine Hannans

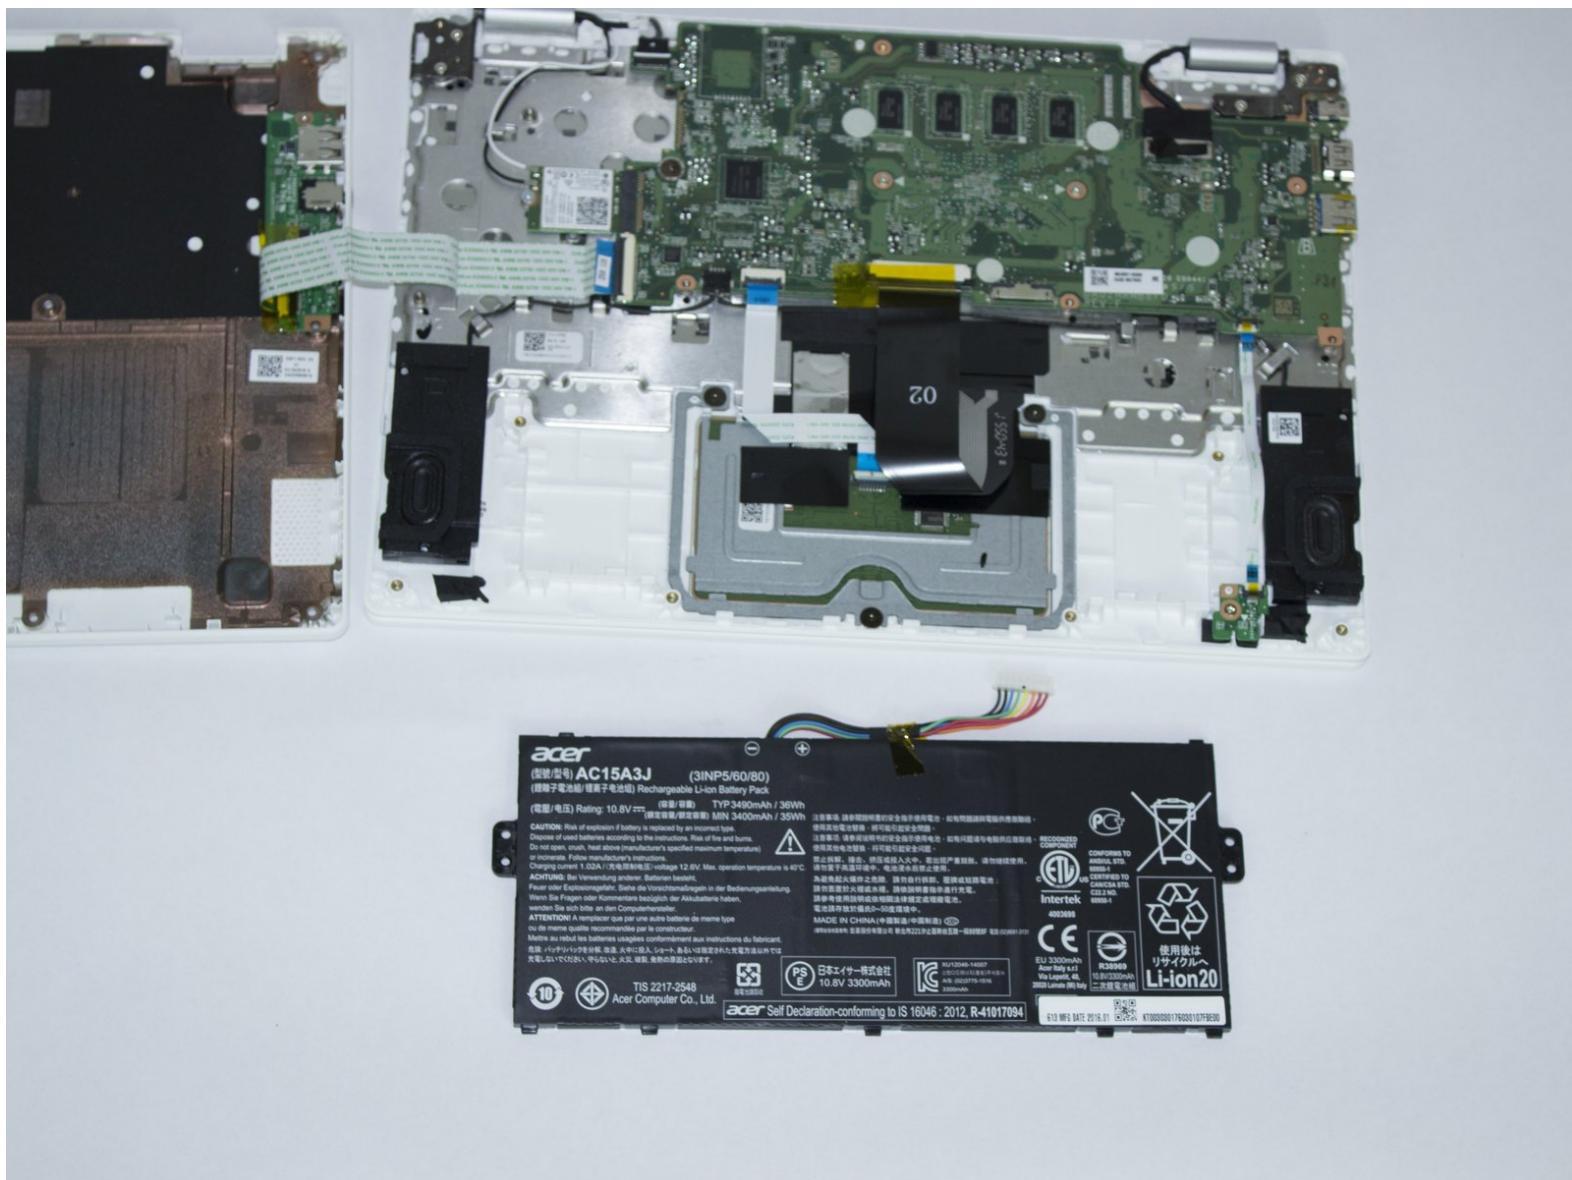

This document was generated on 2019-10-11 10:26:23 AM (MST).

## INTRODUCTION

Having battery issues? Here's how to replace it!

To avoid generating static between you and the device, you should wear a rubber bracelet. Not doing so could potentially damage your device.

### TOOLS:

- JIS Driver Set (1)

### PARTS:

- Acer Chromebook CB5-132T-C1LK Lower Case (1)

## Step 1 — Battery



- The back cover of the R11 is held into place using 11 screws.
- To remove, use a screwdriver appropriate for a JIS 1 screw.

## Step 2



- Battery is located in the bottom half of the computer.
- Unscrew the two screws holding the battery in place. There is one on each side of the battery.
- To remove, use a screwdriver appropriate for a JIS 1 screw.

## Step 3



- Slide out the ribbon that is connecting the battery to the motherboard.
- There are 7 wires leading to it, and each is a different color of the rainbow.
- Disconnect the keyboard ribbon located at bottom center of motherboard.

## Step 4



- Remove the battery by pulling upwards.

To reassemble your device, follow these instructions in reverse order.