


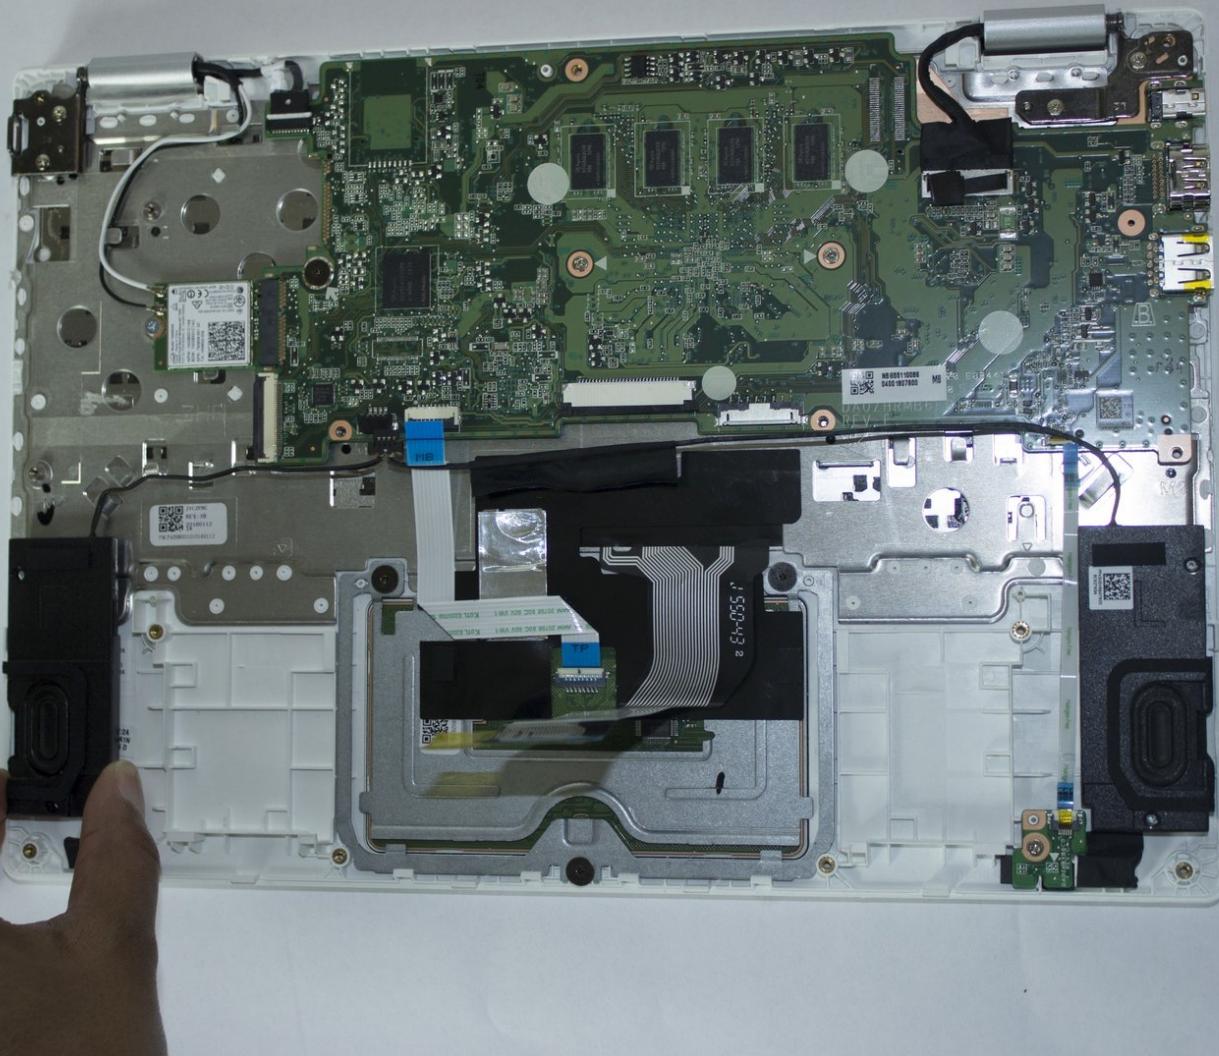

Acer Chromebook R11 Speakers Replacement

Written By: Victoria May



 **TOOLS:**

- [JIS Driver Set \(1\)](#)

 **PARTS:**

- [Acer Chromebook CB5-132T-C1LK Speakers \(1\)](#)

Step 1 — Battery



- The back cover of the R11 is held into place using 11 screws.
- To remove, use a screwdriver appropriate for a JIS 1 screw.

Step 2



- Battery is located in the bottom half of the computer.
- Unscrew the two screws holding the battery in place. There is one on each side of the battery.
- To remove, use a screwdriver appropriate for a JIS 1 screw.

Step 3




- Slide out the ribbon that is connecting the battery to the motherboard.
- There are 7 wires leading to it, and each is a different color of the rainbow.
- Disconnect the keyboard ribbon located at bottom center of motherboard.

Step 4




- Remove the battery by pulling upwards.

Step 5 — Speakers

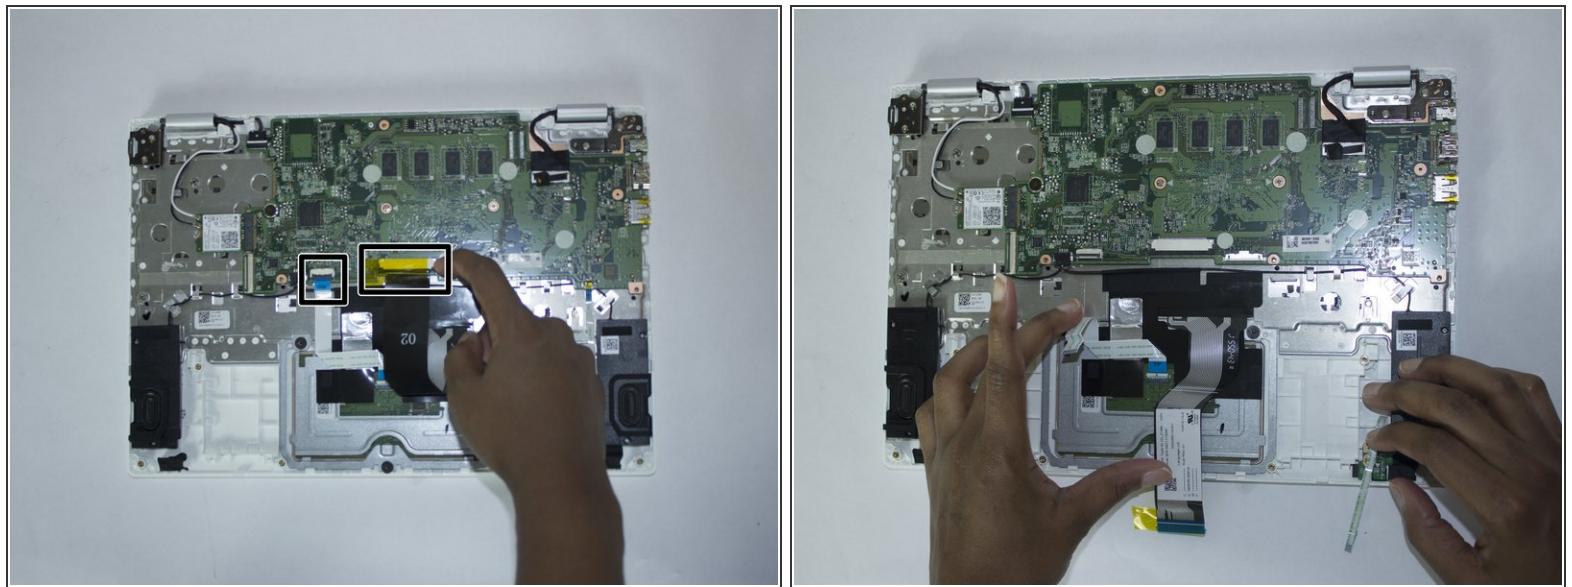

- Slide out black ribbons connecting speakers to motherboard
 - Connected on lower left-hand side of motherboard
 - When removing wires, remove gently with respect to metal clips along wires that are holding them in place.
- Slide out white ribbon connecting keyboard to motherboard

Step 6

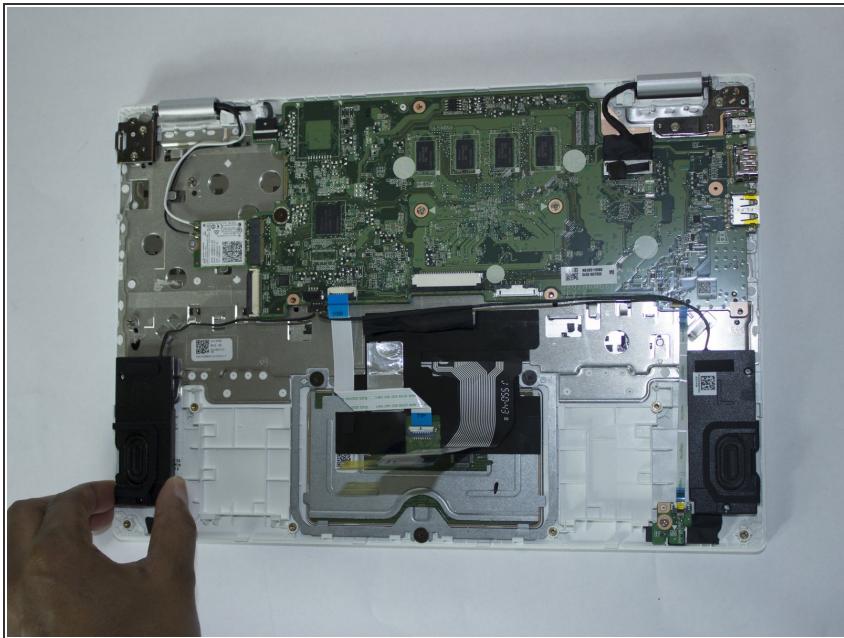

- Gently pull speakers upwards
- Adhesive is below it

To reassemble your device, follow these instructions in reverse order.