



# Acer Chromebook Spin 15 CP315-1H-P1K8

## Display Screen Replacement

How to replace the display screen on the Acer Chromebook Spin 15 CP315-1H-P1K8.

Written By: Evan Costa




## INTRODUCTION

This guide will go through how to replace the touch screen display of the Acer Chromebook Spin 15 CP315-1H-P1K8. Make sure to be careful when replacing the screen, the glass could shatter under pressure.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)


## Step 1 — Back Cover

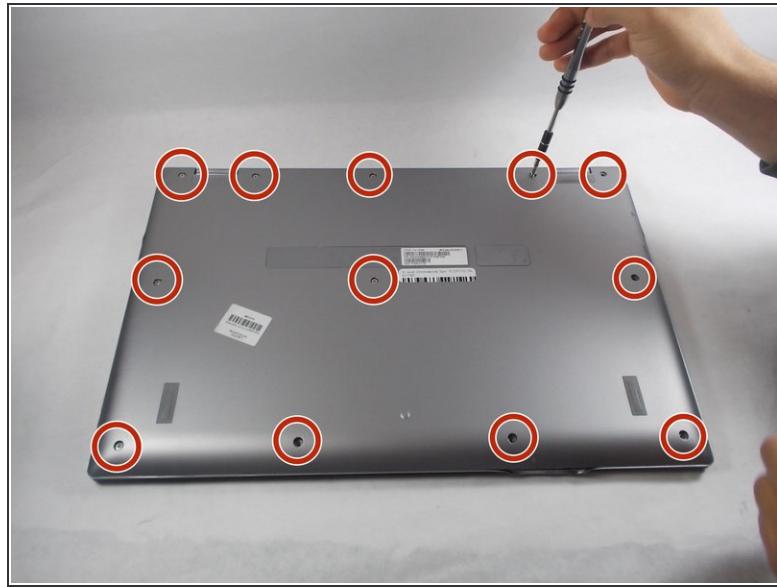

 Make sure the device is fully powered off.

- Flip the computer over so that the back is facing up.
- Remove the twelve 6mm Phillips #1 screws from the bottom of the laptop.

## Step 2

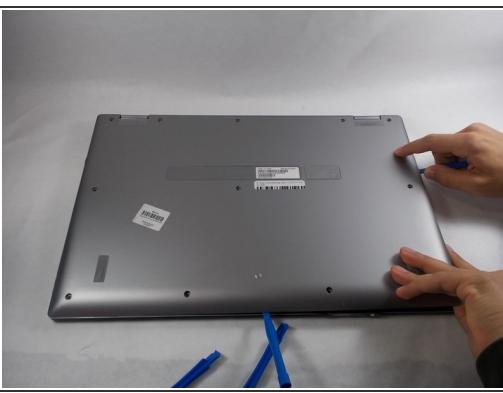

- Use the iFixit opening tools as wedges to pry the back of the laptop off.



 Go slow, making sure not to snap the plastic. With enough of a gap made, you can use your hand to finish taking off the back.

## Step 3 — Display Screen



- Remove the five 6mm Phillips #1 screws from the hinges on either side of the laptop.

## Step 4

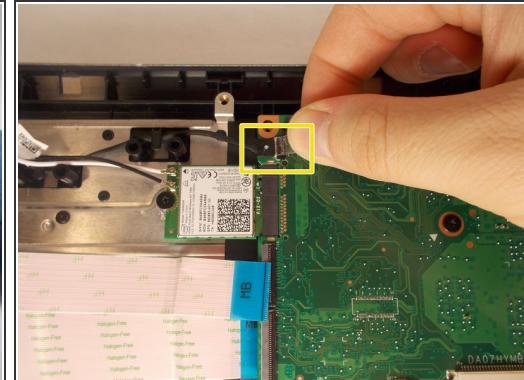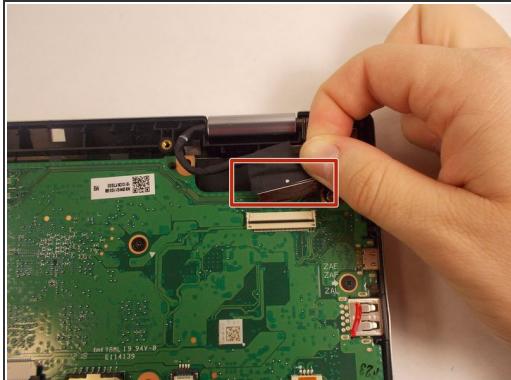

- Unplug the camera/microphone ribbon cable from the circuit board.
- Remove the single 3mm Phillips #1 screw from the Intel core.
- Unplug the cable from the circuit board.

## Step 5



- Use the plastic opening tool, create a gap between the back and front of the display.
- Lift the front out with your hands.

To reassemble your device, follow these instructions in reverse order.