




Acer E5-571-54FL Battery Replacement

This guide will help you remove or replace the primary battery in the Acer E5-571-54FL. It will also be used in other repair guides.

Written By: Aaron Weissman

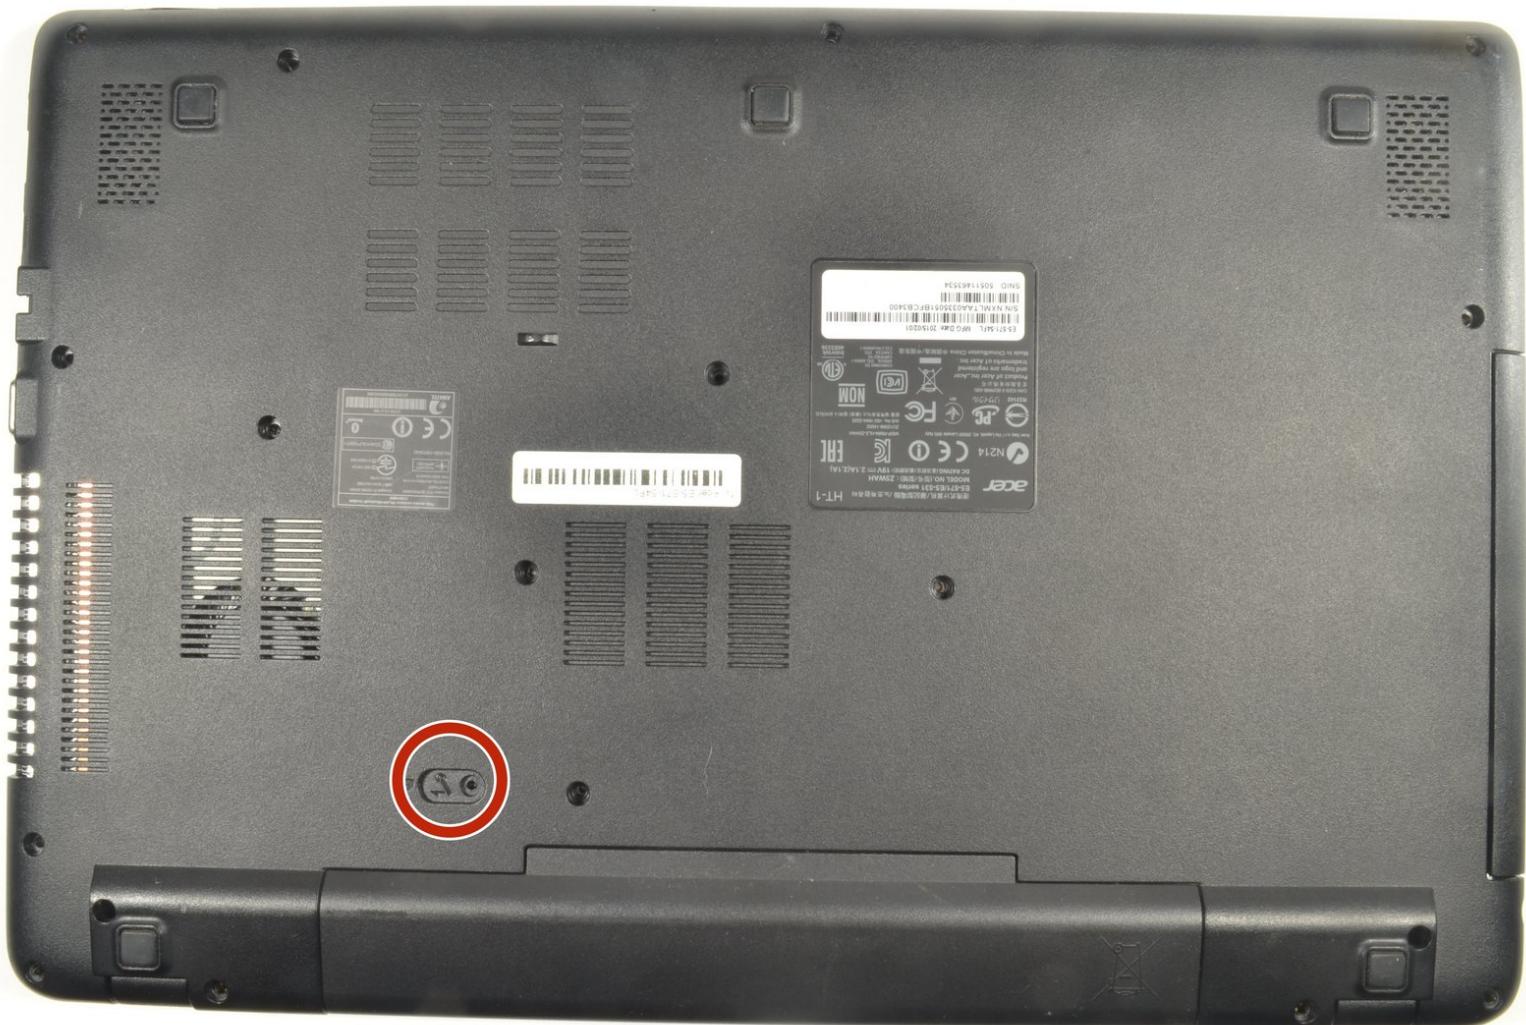

INTRODUCTION

There are a few reasons to remove the battery. It may not hold a charge and needs to be replaced or it may need to be removed to do other work on the computer. This easy to follow guide will show you how to safely remove the battery without damage to the connections.

TOOLS:

- Phillips #0 Screwdriver (1)



PARTS:

- Acer Aspire E5-571 Replacement Battery (1)

Step 1 — Battery



⚠ Ensure the laptop is powered down prior to beginning.

- Turn the laptop over with the battery closest to your body.
- The battery release is just above the left side of the battery.

Step 2



- Insert a small tipped screwdriver or similar tool into the release.
- Gently slide the release all the way to the left.

(i) You should hear a sound after the slide is all the way left. This lets you know the battery has disengaged.

Step 3



- With your hands on each end of the battery, carefully pull towards your body to remove.

To reassemble your device, follow these instructions in reverse order.