




# Acer Iconia A100 Battery Replacement

A Battery replacement guide for the Acer Iconia tablet A100.

Written By: Omar Acosta

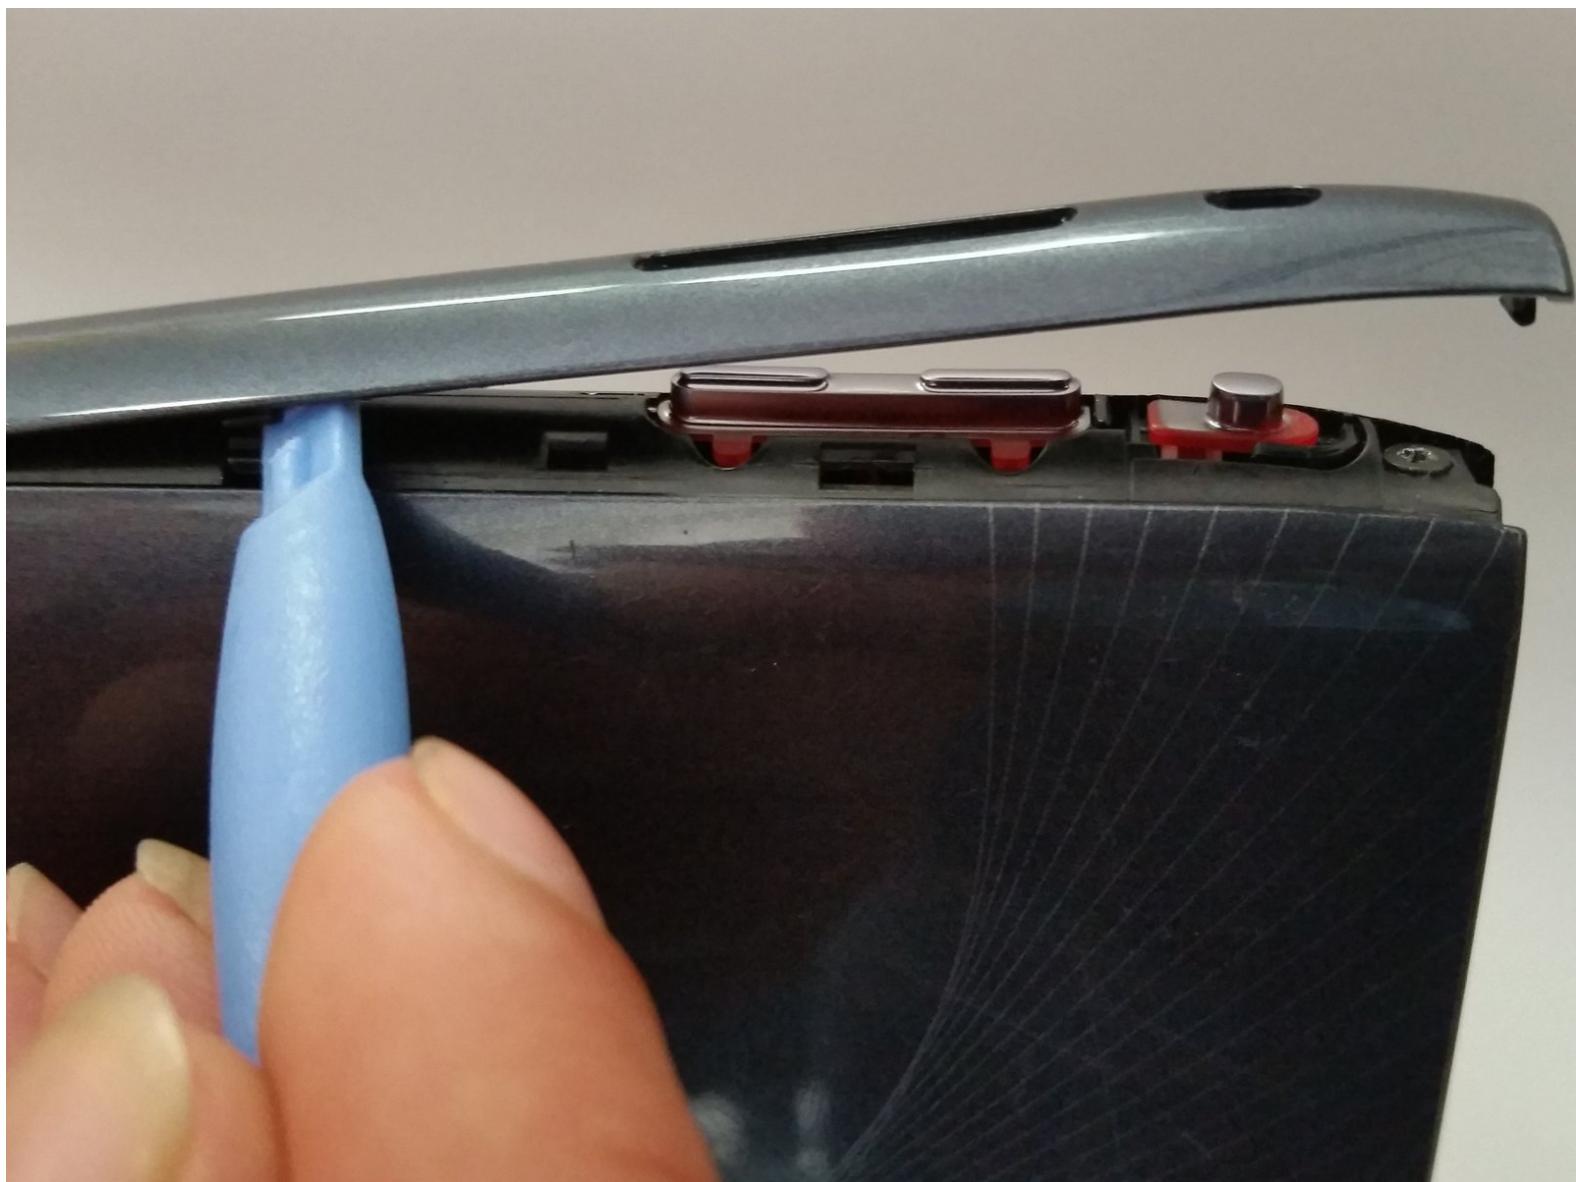

## INTRODUCTION

A step-by-step guide that illustrates the necessary precautions for replacing a battery for the Acer Iconia A100 tablet.


### **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

### **PARTS:**

- [4mm philips screws](#) (1)

## Step 1 — Battery

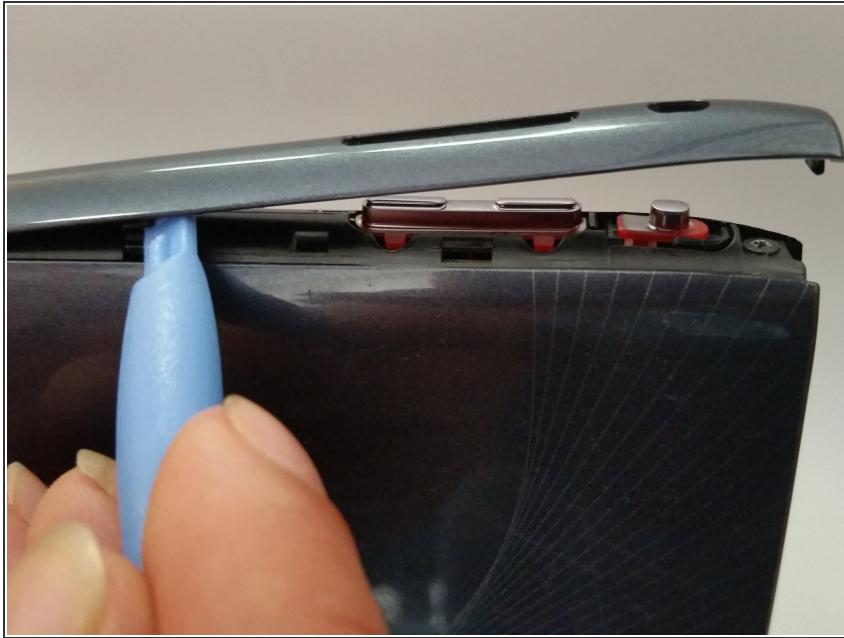

- Start at any side of the tablet.
- Begin to take apart the tablet ,with a plastic opening tool, along the sides of the tablet.
- Work your way around the tablet.

***i*** There are four side pieces in total.

## Step 2



- Placed on each end of the tablet are 4mm Philips screws.
- Unscrew the 4mm Phillips screws with a Phillips #00 Screwdriver.


***star*** There are five 4.0mm screws in total (including the 4mm Phillips screw at the bottom of the tablet).

## Step 3



- Carefully separate the back piece from the device using a plastic opening tool.
- Remember to open along the entire perimeter of the tablet.

## Step 4

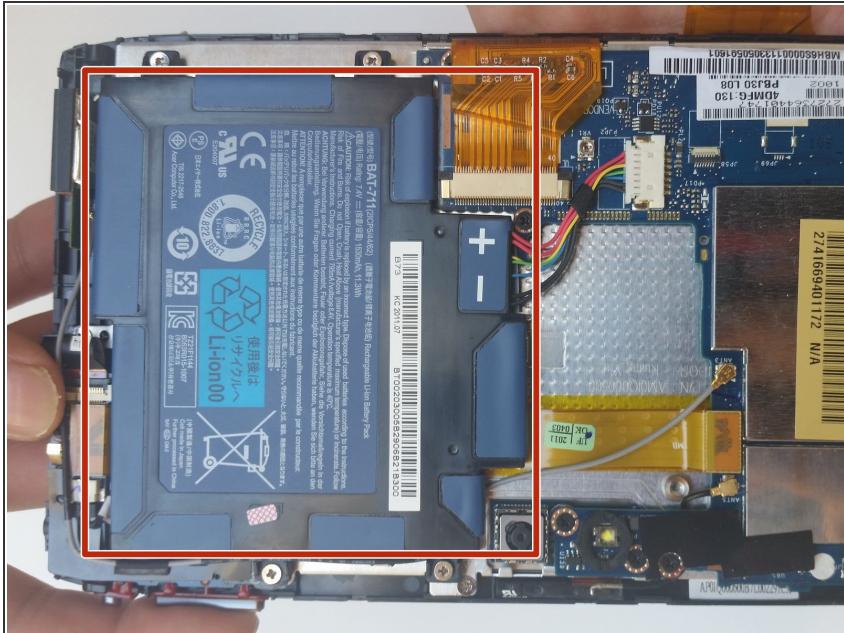

- Turn the tablet over to locate the battery.
- Locate the large blue and black object at the bottom of the tablet with the plus and minus sign.



## Step 5



- Unscrew the 4mm screws located around the battery.

- There are five in total.

## Step 6

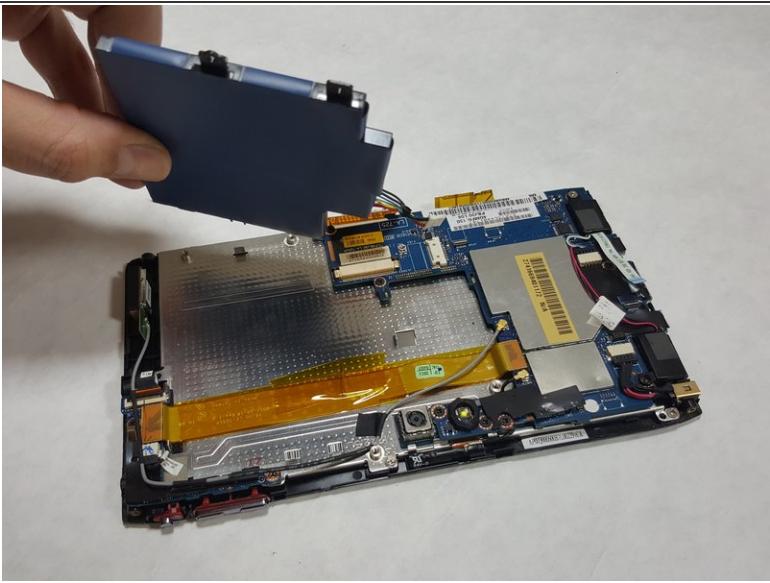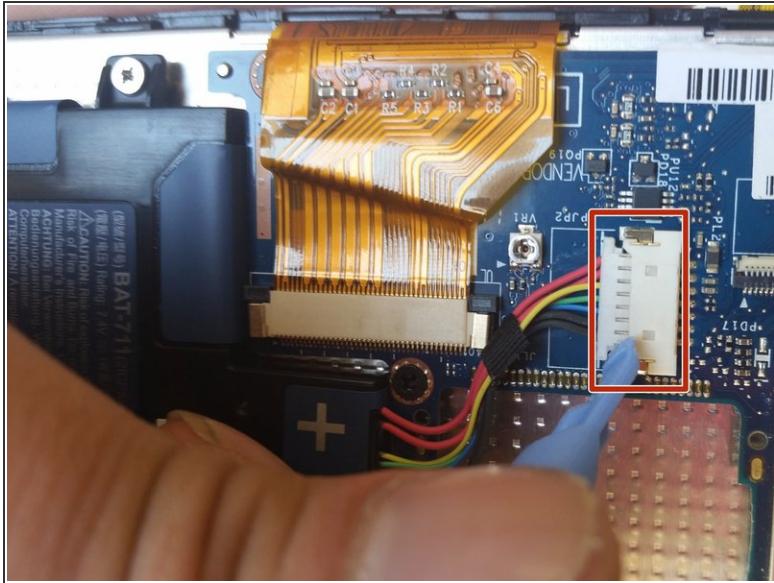

- Locate the battery cables and the tip of a plastic spudger or opening tool to gently push the connector head out of its socket.
- Use your fingers or the flat edge of a plastic opening tool to lift the battery up and off of the device.

**⚠** Be sure to not have any water around the device while removing the battery.

**⚠** Be sure to be cautious while removing the battery and remove carefully; avoid ripping the wires attached to the battery.

To reassemble your device, follow these instructions in reverse order.