




Acer Iconia A110 Front Facing Camera Replacement

Follow these steps to replace the front facing camera for your Acer Iconia A110 tablet.

Written By: Andrea


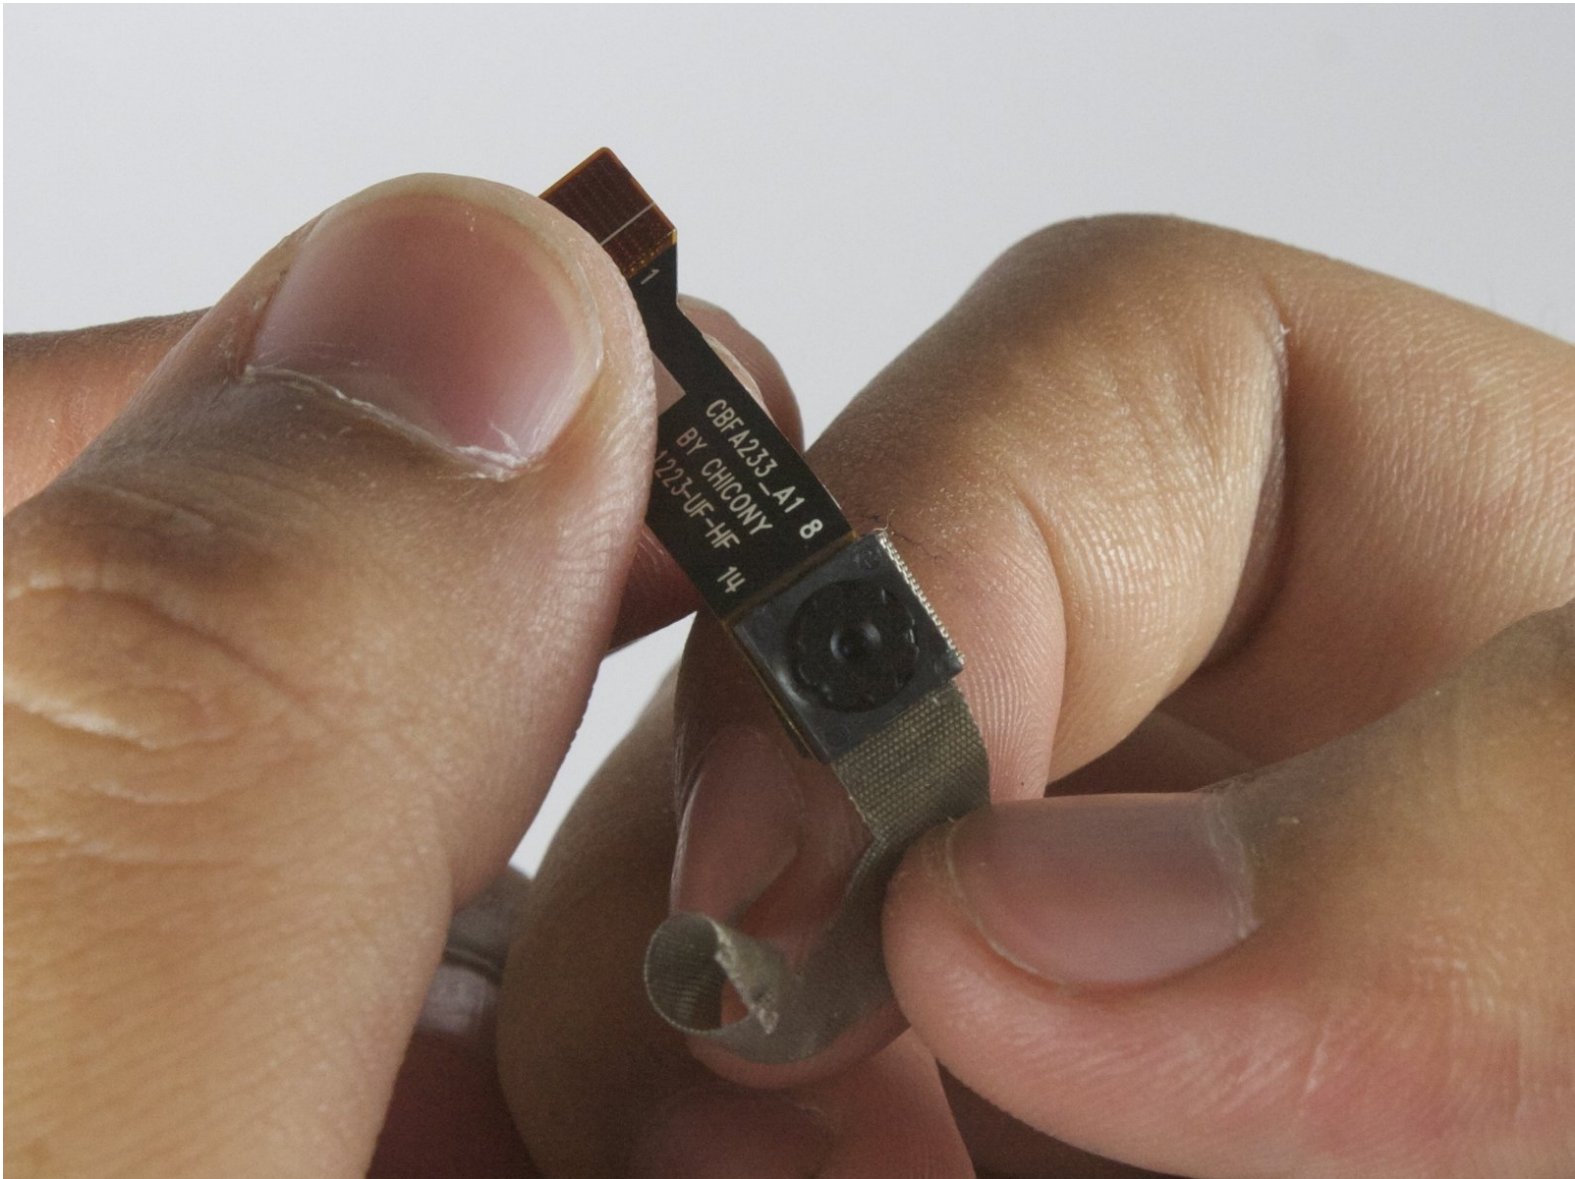




TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)
- [Phillips #00 Screwdriver](#) (1)


Step 1 — Battery

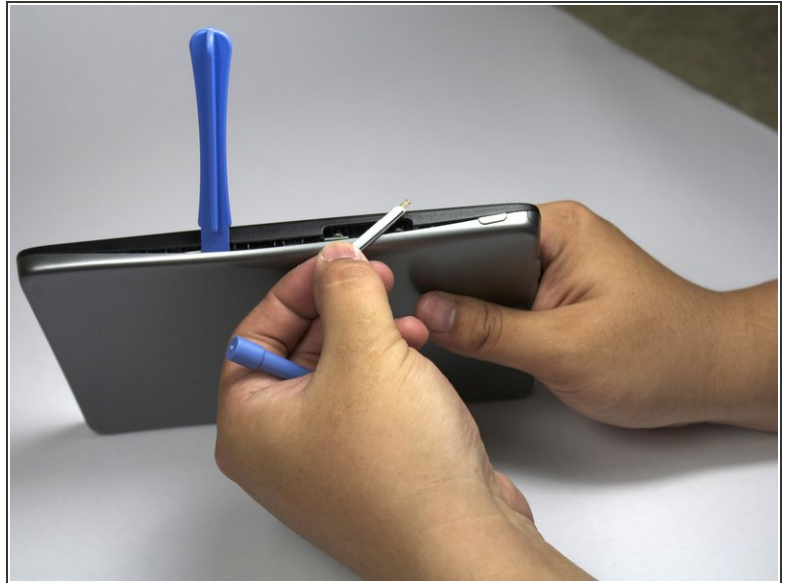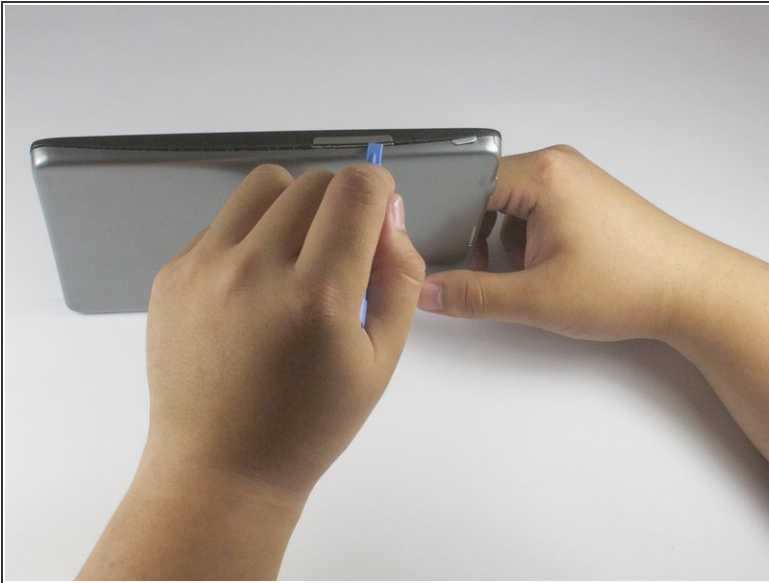

 Before taking apart your tablet, make sure the device is powered off.


- Pry open the right side of case with the plastic opening tool. If necessary, keep a tool lodged into the side to keep the case from closing.
-  During this process, the volume button and/or power button may fall out.

Step 2

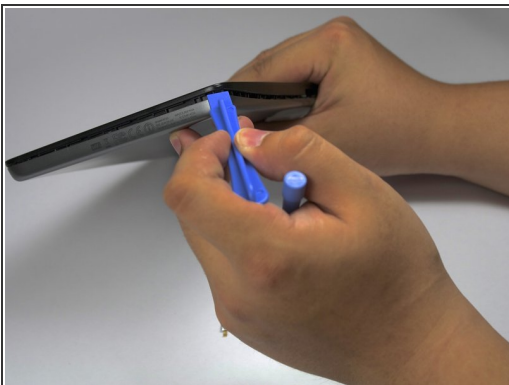


- Pry open the left side of the case with a plastic opening tool. The backside of the tablet should now separate completely from the front.

Step 3

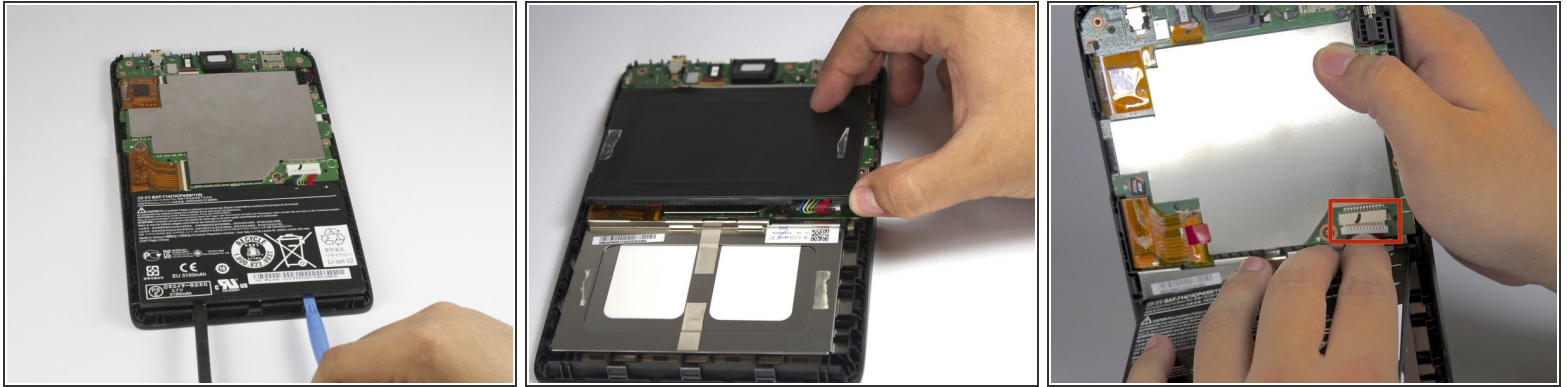

- Using the plastic opening tool and spudger, carefully pry up the battery from the case.
- i** You should hear the adhesive ripping as you do this.
- Once the battery is no longer adhered to the case, detach the dongle that connects the battery to the motherboard.



Step 4 — Speaker

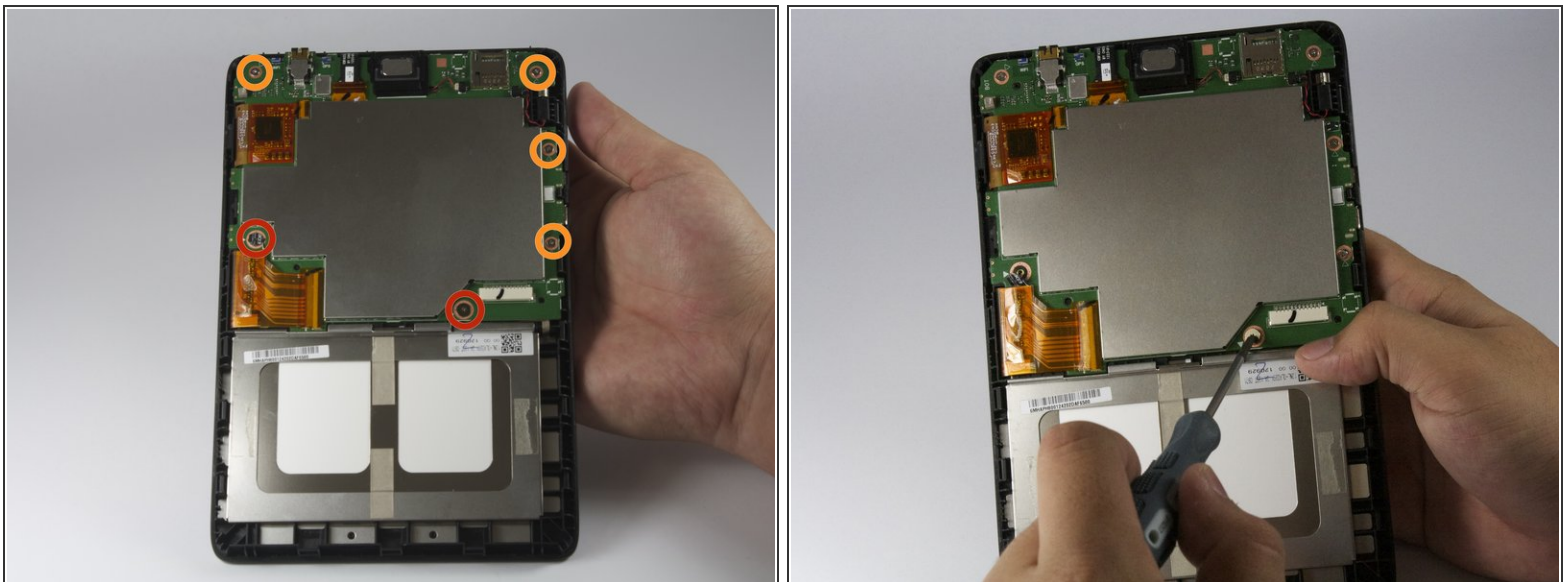

- With the Phillips #00 screwdriver, remove the following screws securing the motherboard to the back panel:
 - Two 2.0 mm screws (with the bigger head)
 - Four 2.5 mm screws (with the smaller head)

This document was generated on 2019-09-18 03:25:18 PM (MST).

Step 5

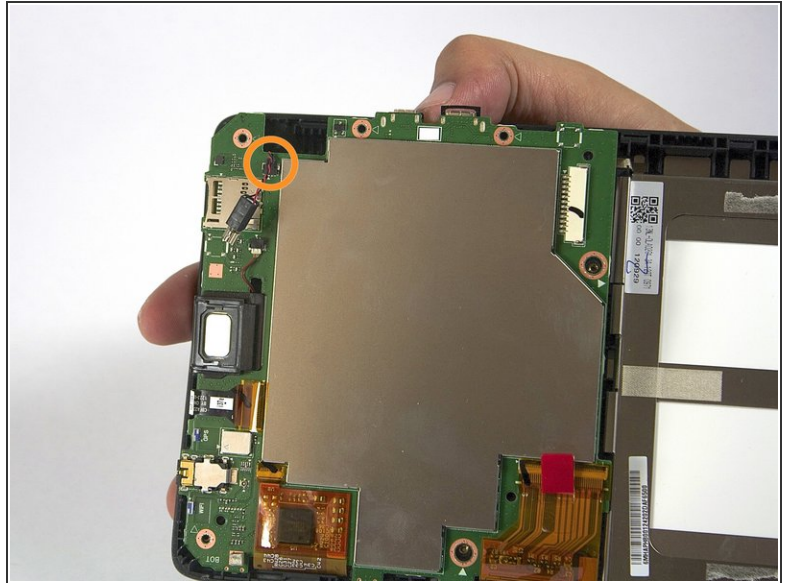
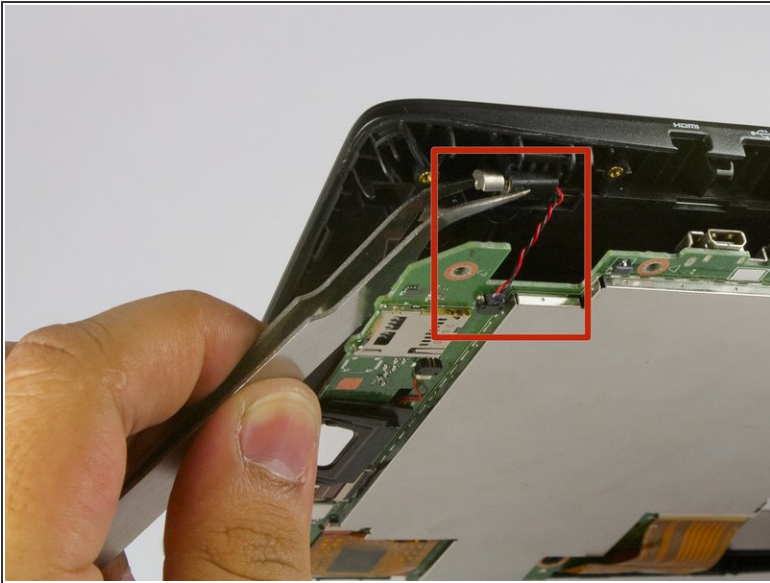


- On the top right side of the motherboard, is the vibration motor. With tweezers, carefully pull the vibration motor out from underneath the motherboard.

⚠ The vibration motor is still connected to the motherboard by a small wire connection, so be careful not to rip the wire out.


- With your fingers, carefully disconnect the cable securing the vibration motor to the motherboard. Set aside.

Step 6

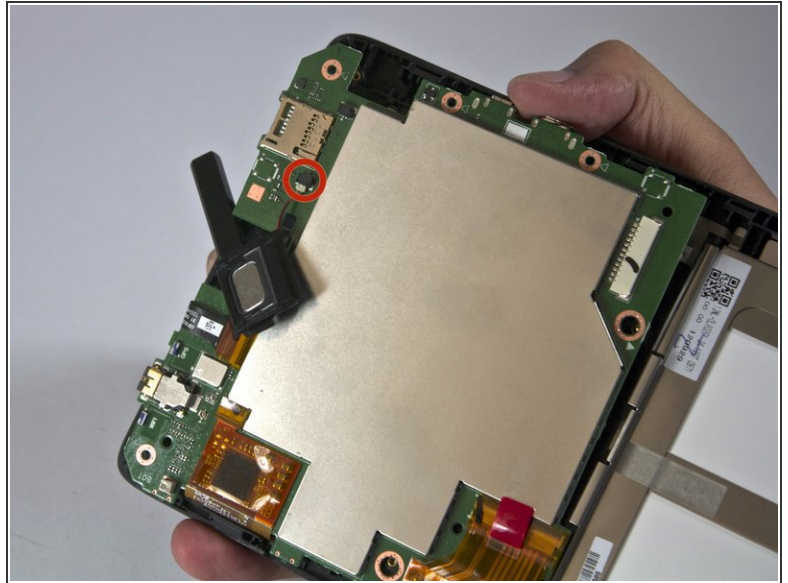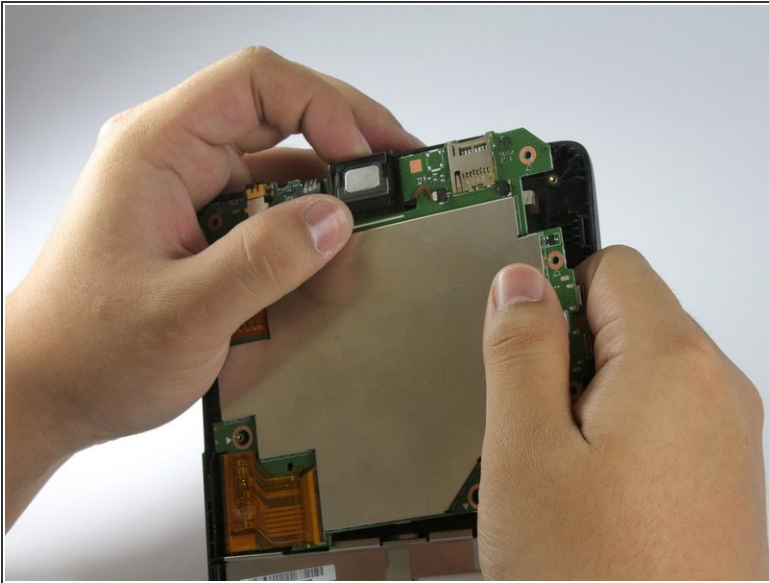


- The speaker located on the top of the motherboard should easily slide out. Take note that there is still a wire connected, so do so carefully.
- With your fingers, slowly pull out the wire connecting the speaker to the motherboard.

Step 7 — Motherboard

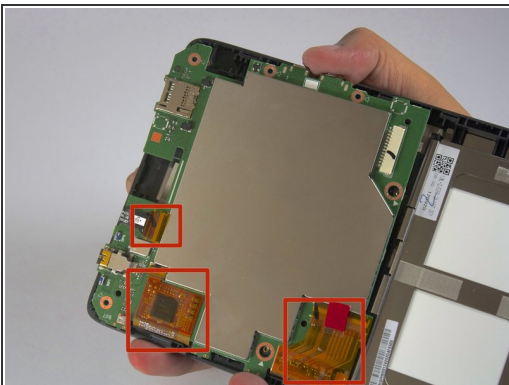


- The next step is to pull out the ribbon cables connected to the motherboard.
 - Each ribbon cable has a sticker covering it; peel it off with tweezers.
 - Use tweezers to pull out the ribbon cable.
- ⚠ Make sure to pull the ribbon cable horizontally, not vertically to avoid tearing the ribbon

Step 8

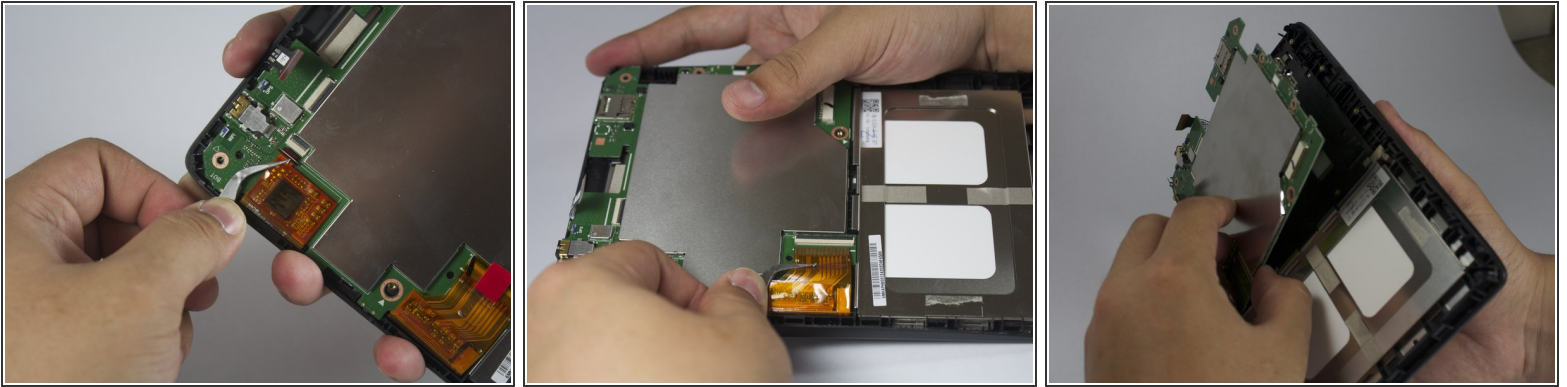

- After all ribbon cables are disconnected, move them out of the way, and the motherboard should fall out easily.

Step 9 — Front Facing Camera

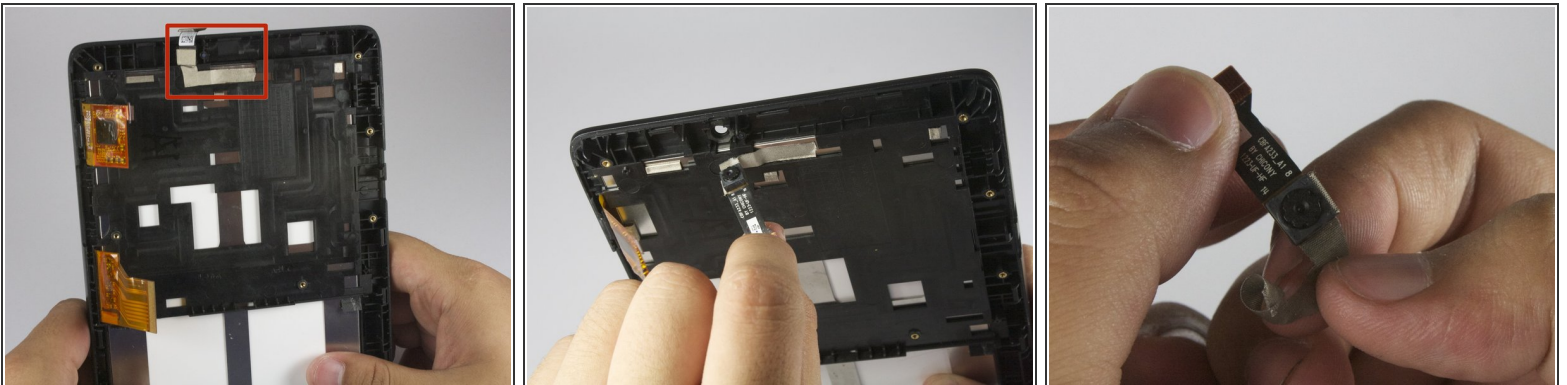

- Carefully gripping the top of the camera connection cord, slowly pull down to remove the sticky tape from the tablet.

To reassemble your device, follow these instructions in reverse order.