




Acer Iconia B1-710 Camera Replacement

How to replace the camera on your Acer Iconia B1-710

Written By: Ryan Weber

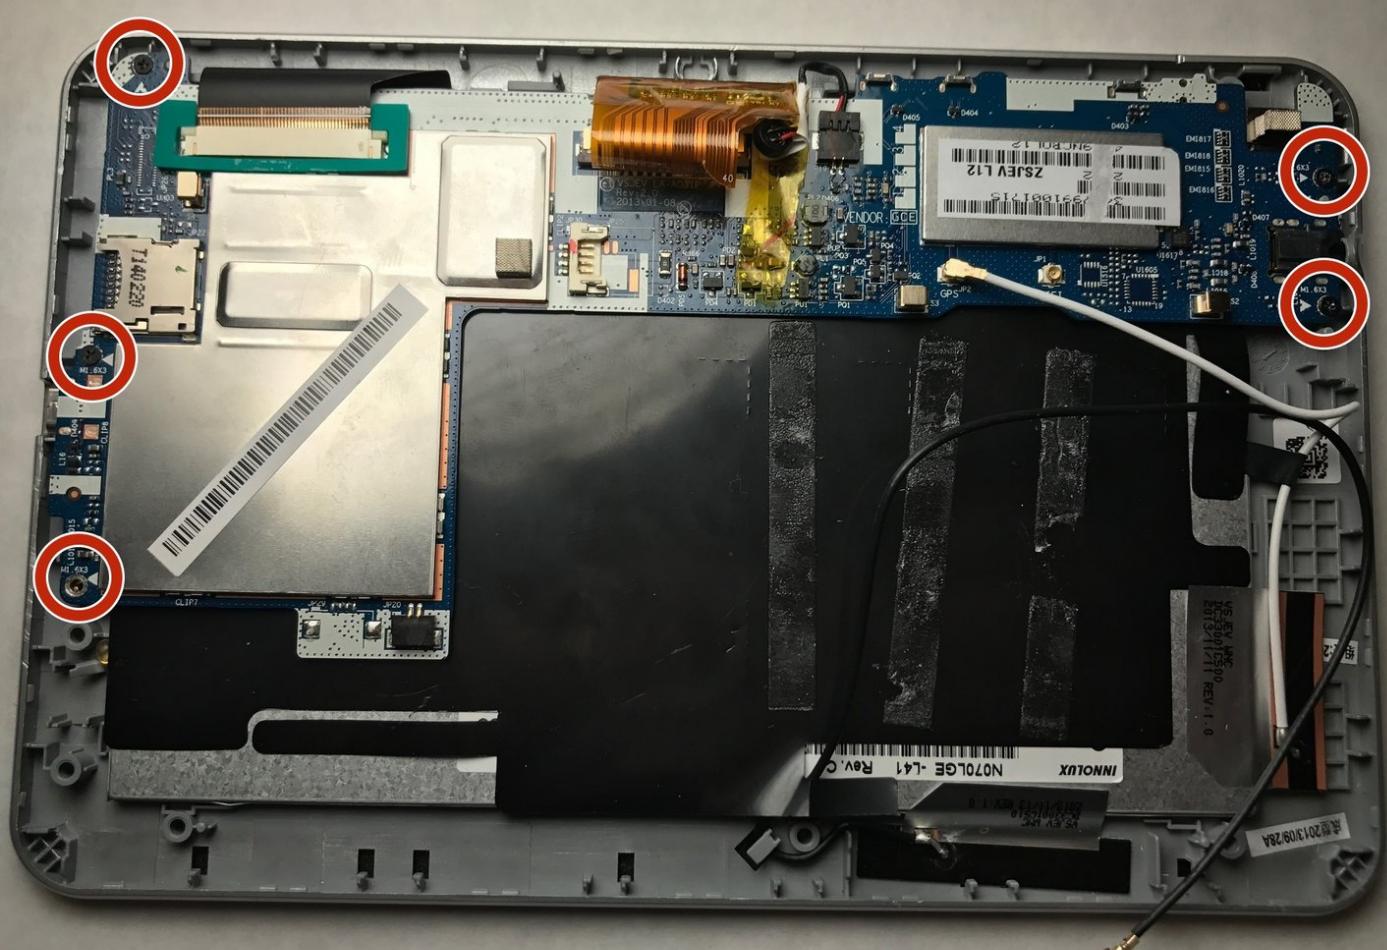


INTRODUCTION

How to remove and replace the camera on your Acer Iconia B1-710 tablet

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Metal Spudger](#) (1)


Step 1 — Battery

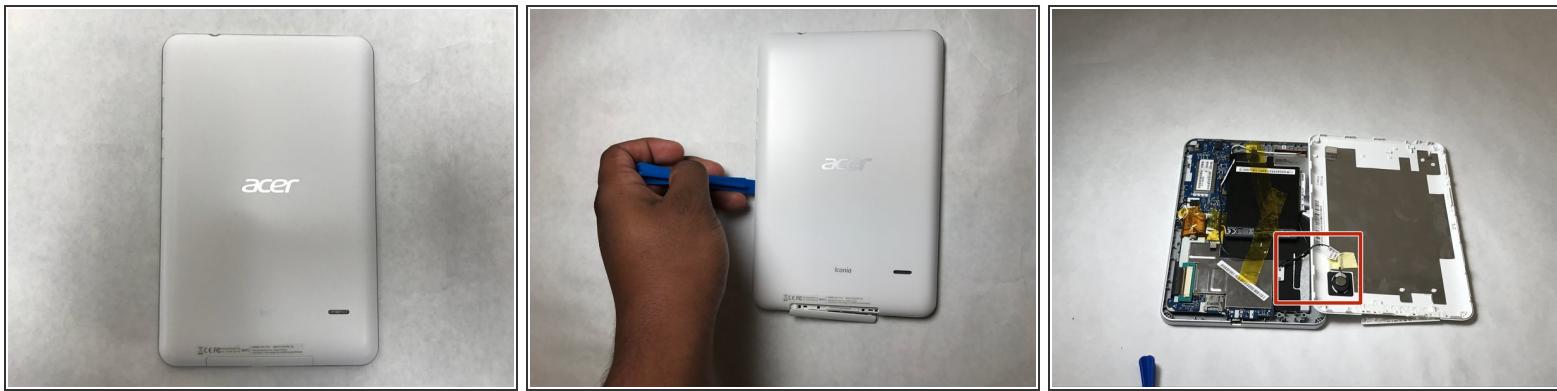

- Open back cover by prying casing off.

 Careful to not pull pieces apart aggressively. There is a wire that could break.

Step 2

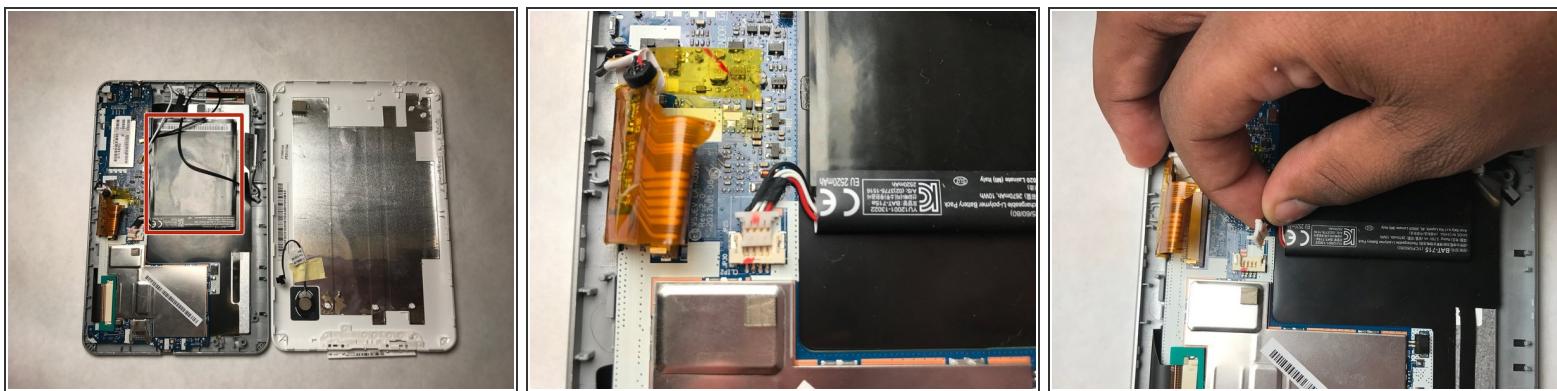

- Unplug the battery from the motherboard.


Step 3



- Take the battery out.

(i) The battery is lightly glued in, so there may be some difficulty getting it out.



Step 4 — Camera

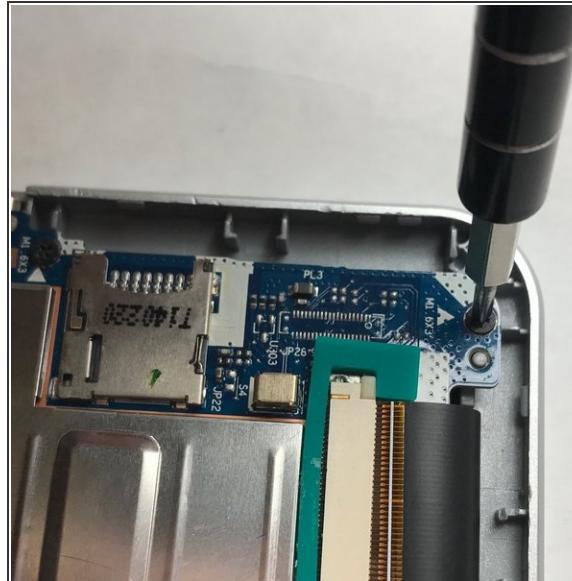

- Unscrew the 5 3mm #000 Phillips head screws



(i) Keep the screws in a safe place after taking them out

Step 5

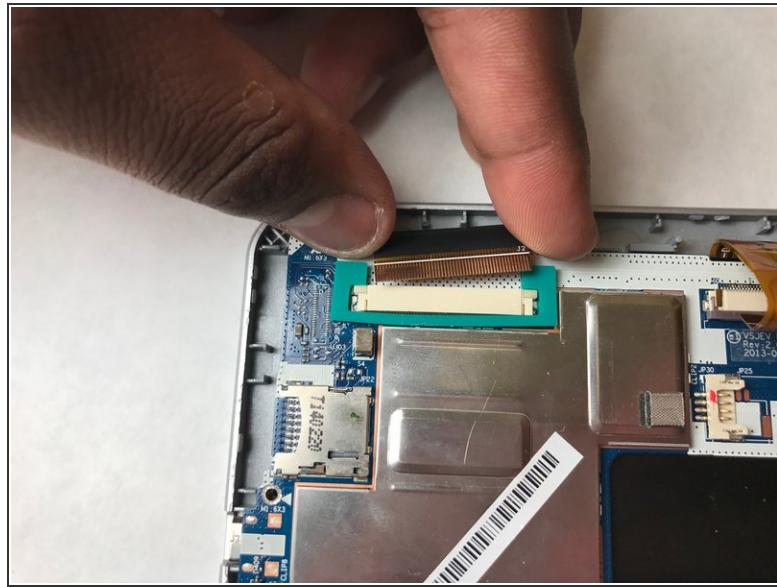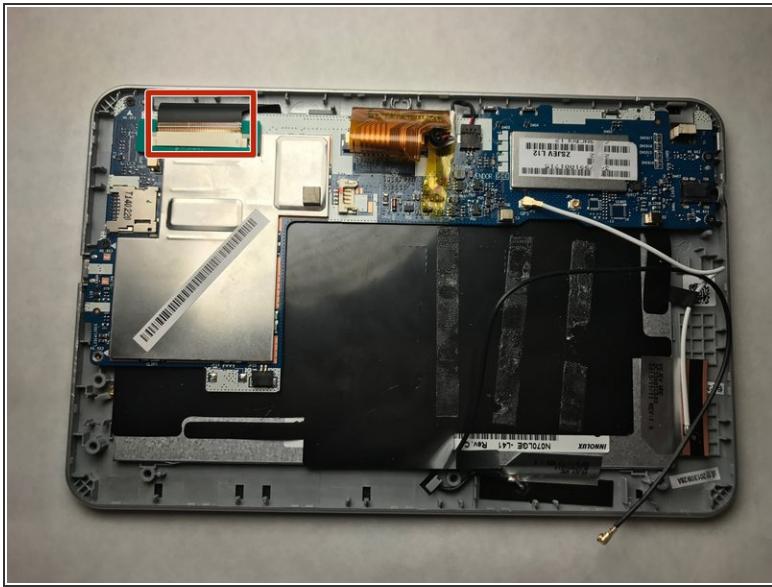

- Unplug the LCD


Step 6

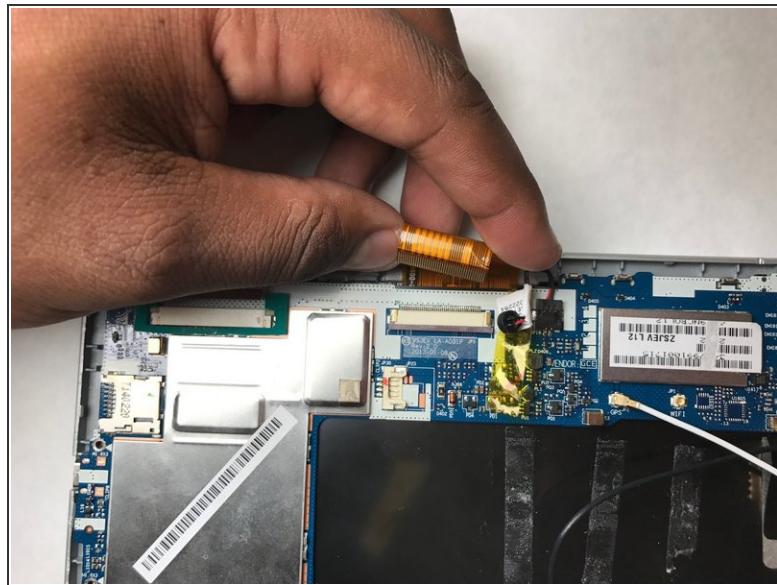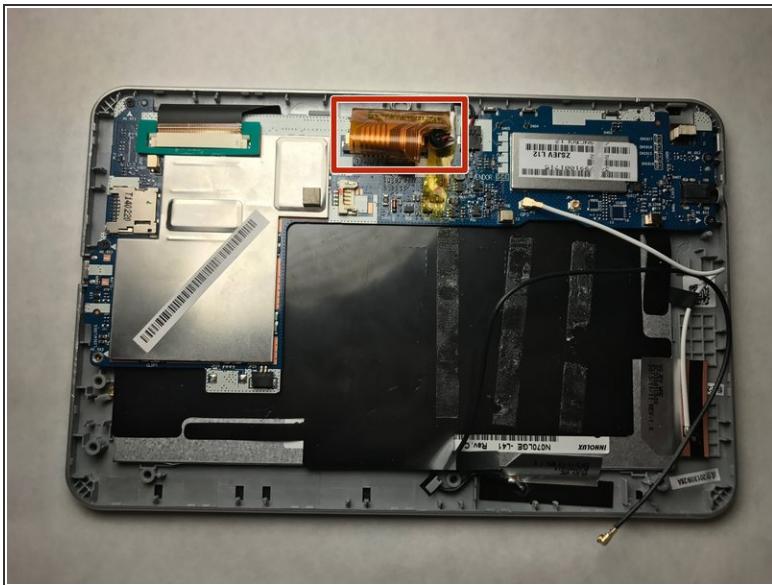

- Unplug the orange strip


⚠ This piece can tear easily

Step 7

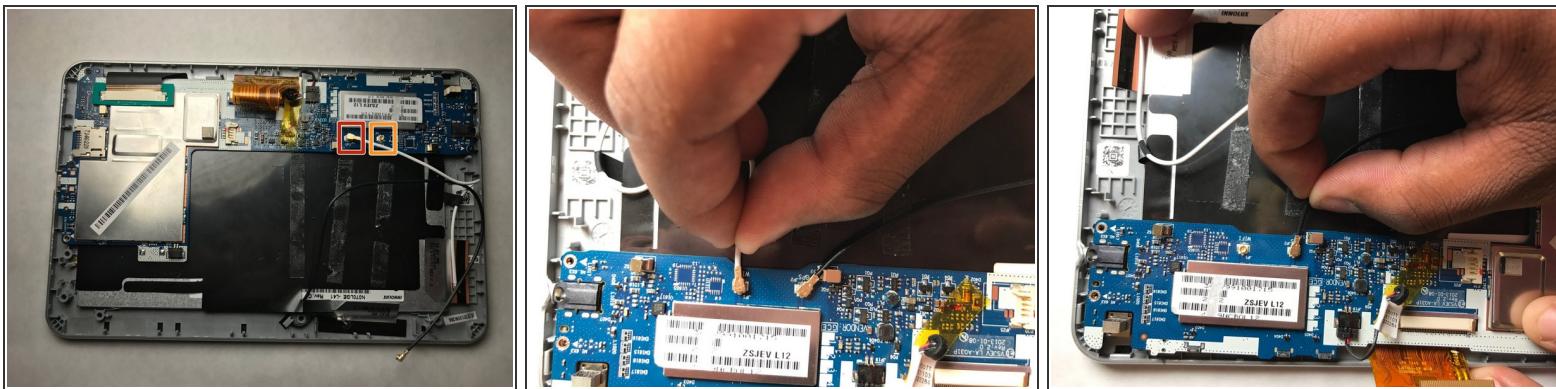


- Unplug the white wire
- Unplug the black wire

Step 8

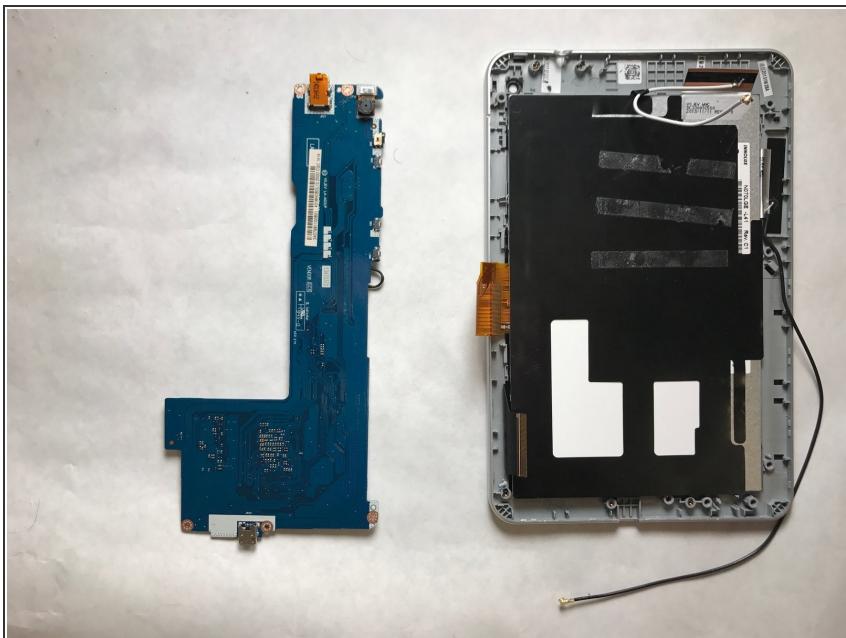

- Remove the mother board

Step 9

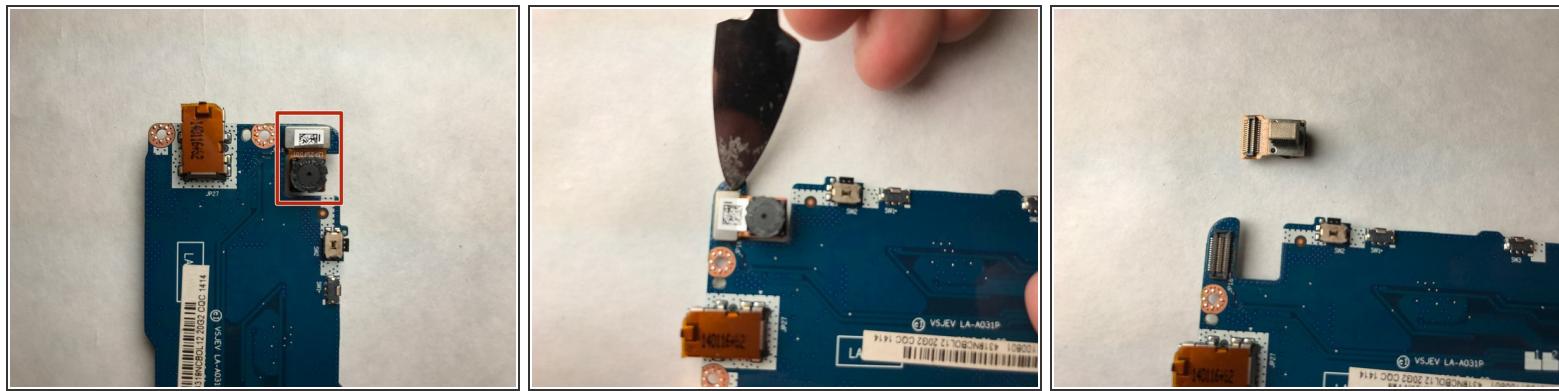

- Remove the camera with the metal spludger

 Careful to not damage the plug in

To reassemble your device, follow these instructions in reverse order.