




Acer Iconia B1-710 Screen Replacement

Learn to take apart the Acer Iconia B1-710 to replace the screen.

Written By: Ryan Weber

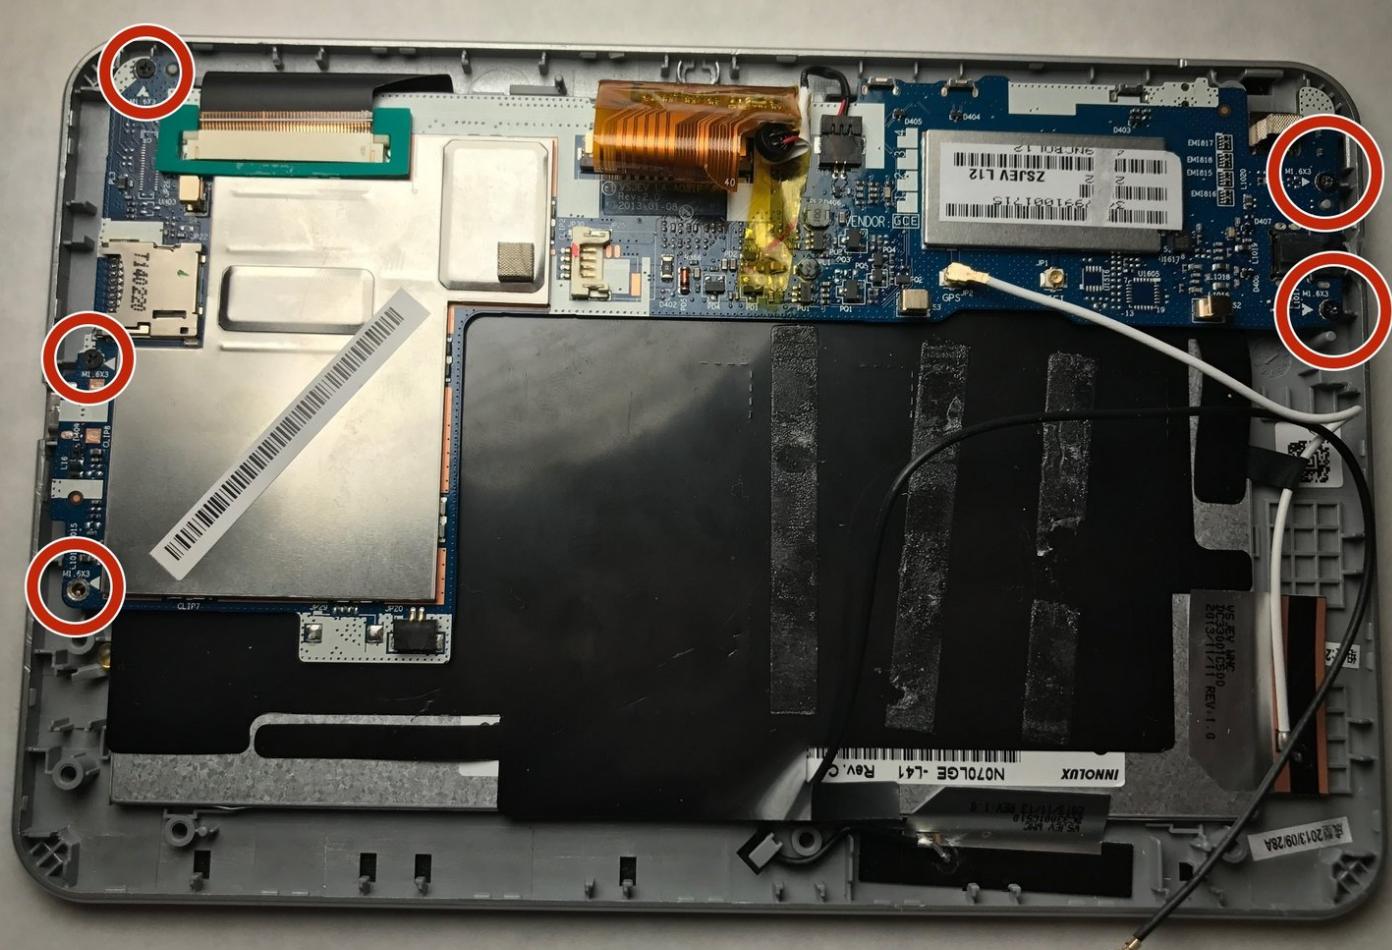

INTRODUCTION

Replace the screen on your Acer Iconia B1-710.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Metal Spudger](#) (1)


Step 1 — Battery



- Open back cover by prying casing off.

 Careful to not pull pieces apart aggressively. There is a wire that could break.

Step 2

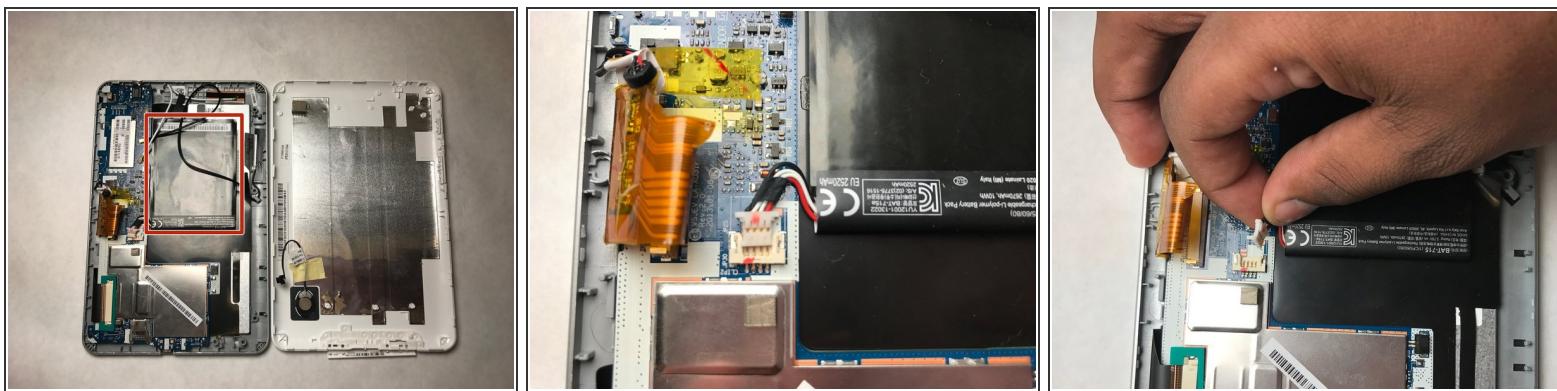



- Unplug the battery from the motherboard.

Step 3




- Take the battery out.
- (i)* The battery is lightly glued in, so there may be some difficulty getting it out.

Step 4 — Screen

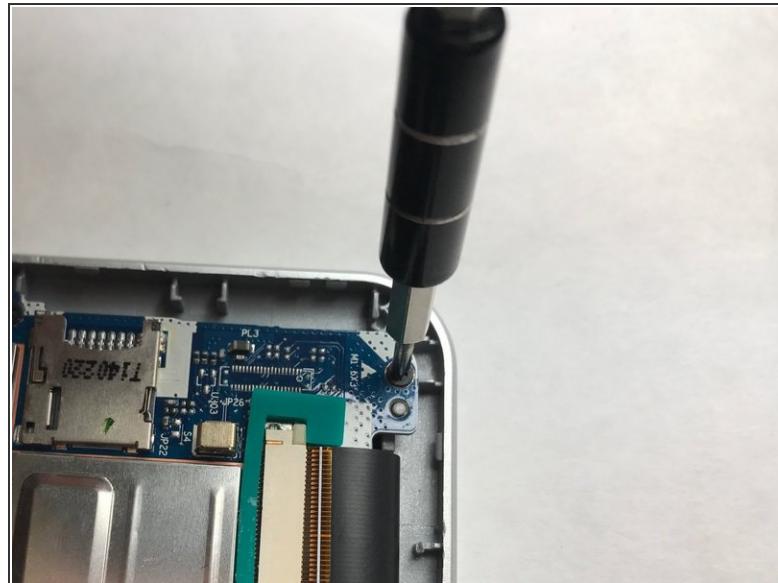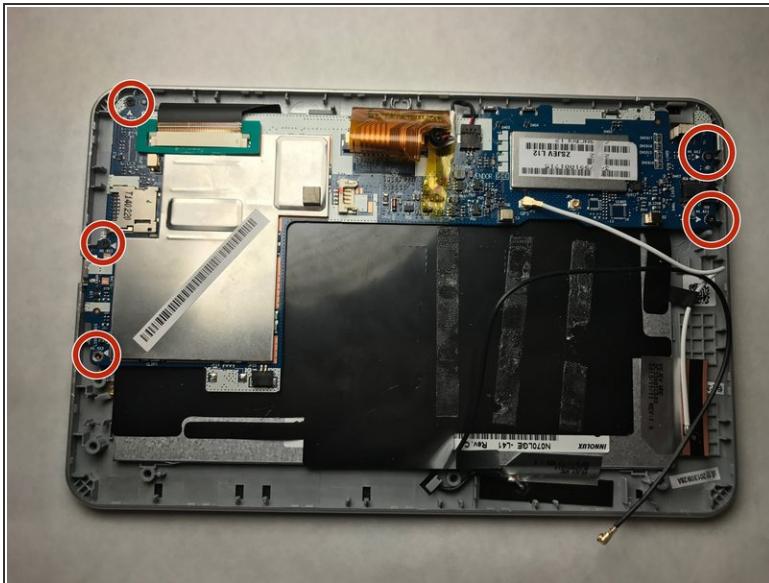



- Unscrew all five 3 mm #000 Phillips screws.

Step 5

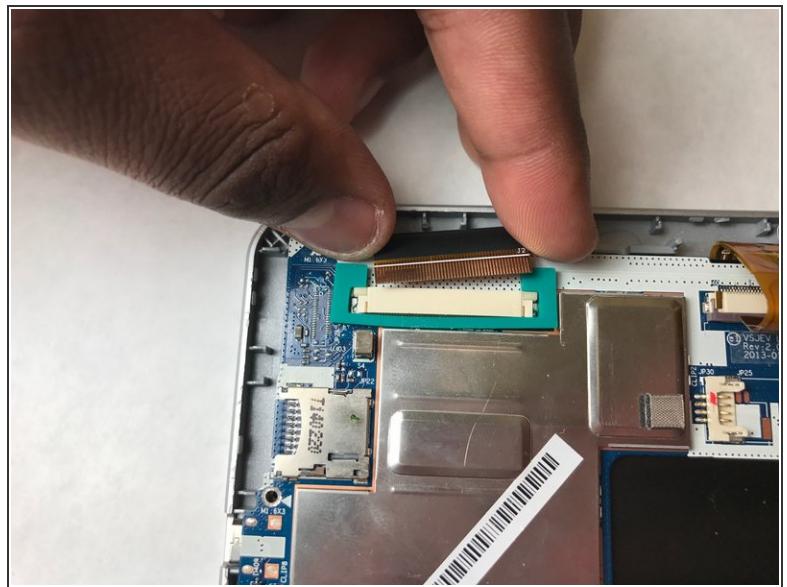


- Unplug the LCD ribbon.

Step 6

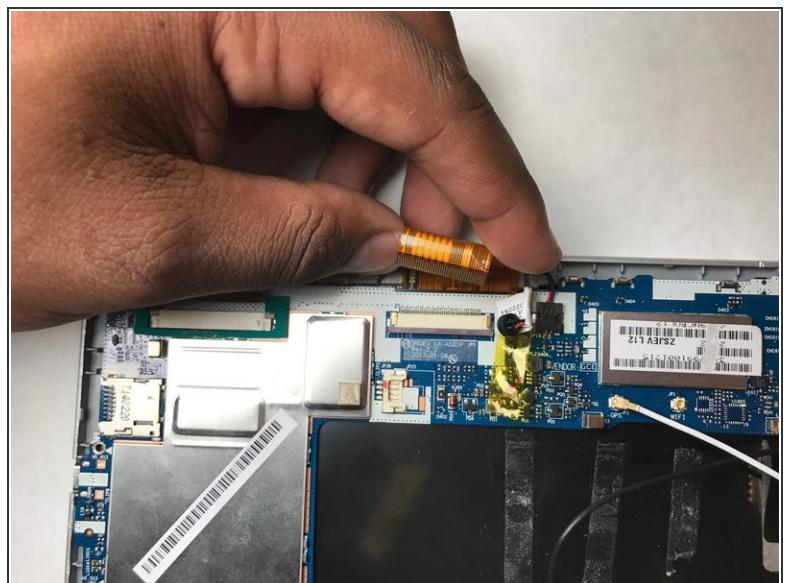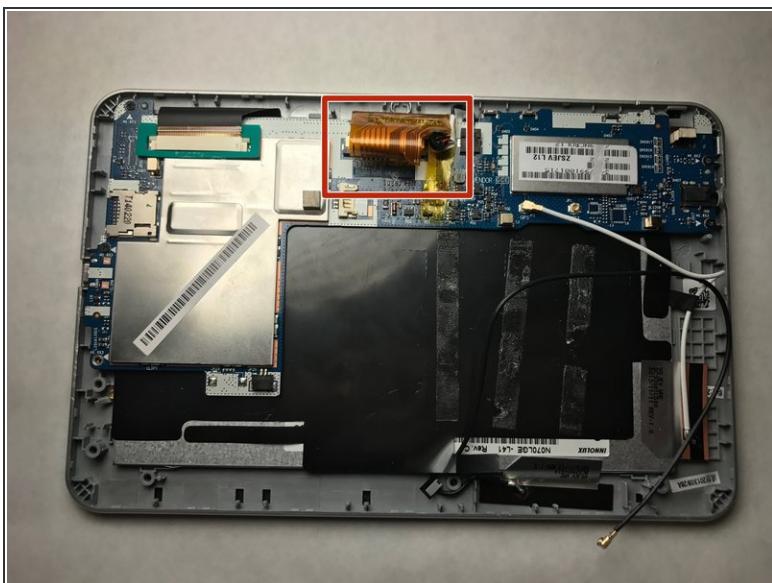


- Unplug the orange ribbon.

Step 7

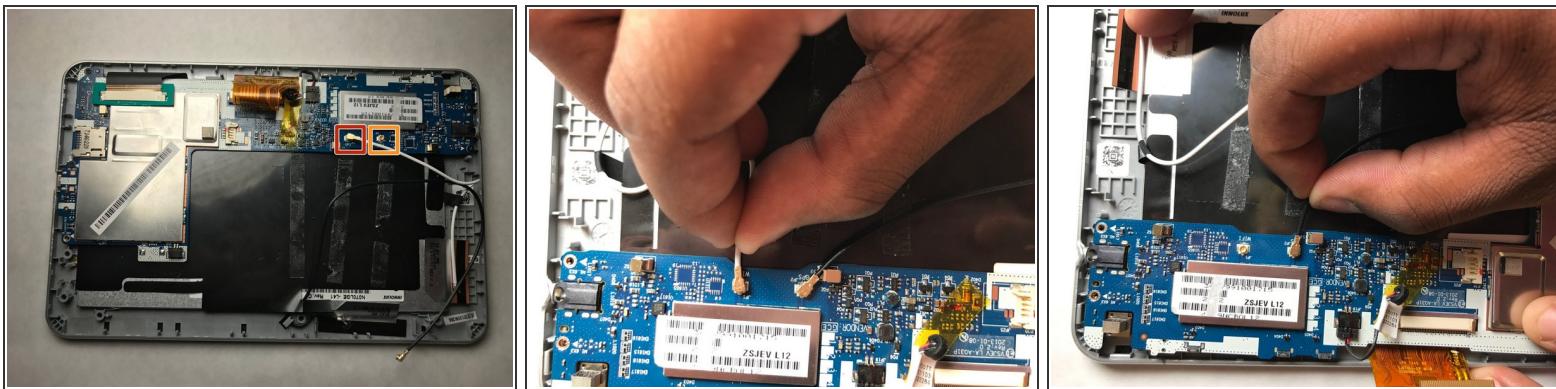

- Unplug the white wire from the motherboard.
- Unplug the black wire from the motherboard.

Step 8

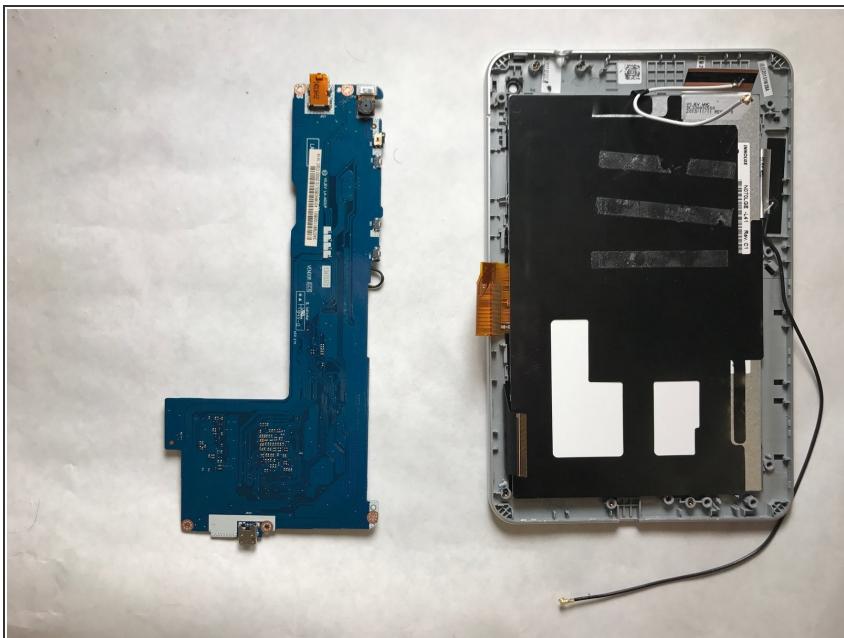

- Pull the motherboard off of the tablet.

Step 9



- Use a blow dryer to melt the glue holding the LCD display in place.
- *(i)* Patience is key. It will take a few minutes to melt the glue.

Step 10




- Peel the LCD display.

! This piece is fragile and needs to be peeled with care.

! Parts may be hot.


Step 11

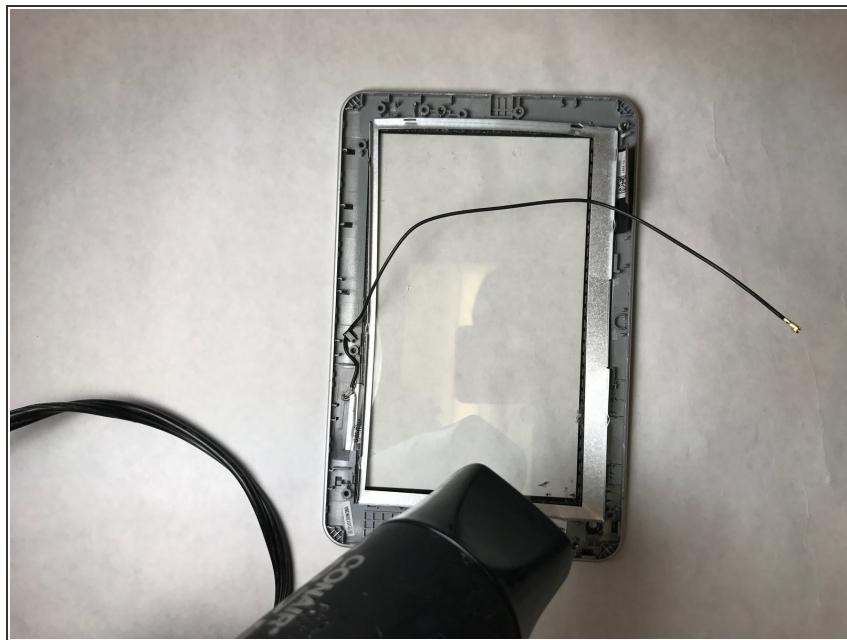

- Use a blow dryer to melt the glue from the thin metal frame.

⚠ This piece is metal and will become hot during this process.

Step 12

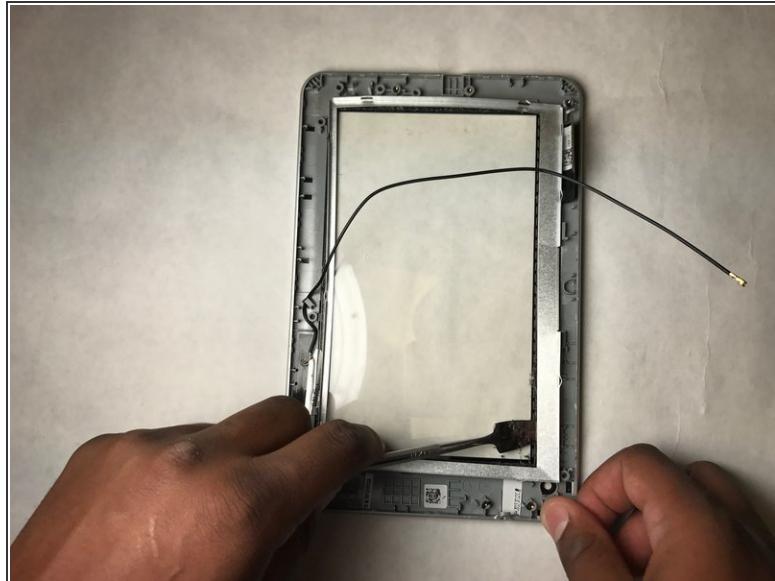

- Peel off the thin metal frame.

⚠ Be careful not to bend the frame as it is very thin.

Step 13



- Use a blow dryer to melt the glue between the metal frame and the screen.

 The frame will get hot.

Step 14



- Peel the frame from the screen.

 Be careful when peeling the screen or it may sustain further damage.

To reassemble your device, follow these instructions in reverse order.