




# Acer Iconia B1-711 Audio Jack Connector Replacement

## Acer Iconia B1-711 Audio Jack Connector Replacement

Written By: ZFix

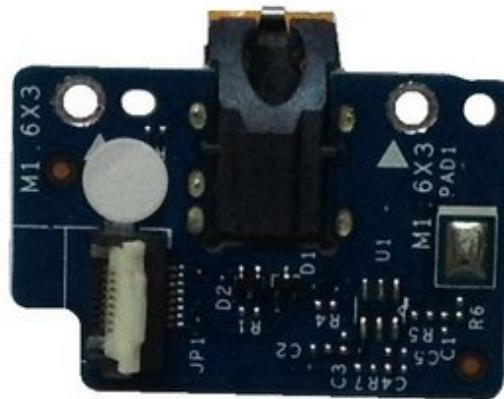

## INTRODUCTION

If you have a problem with the Audio Jack Connector, in this manual we will show you how to change it.


**Please SUBSCRIBE to my channel ↴**

[video: <https://www.youtube.com/watch?v=8-djJ2aXa60>]

### **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Back Cover

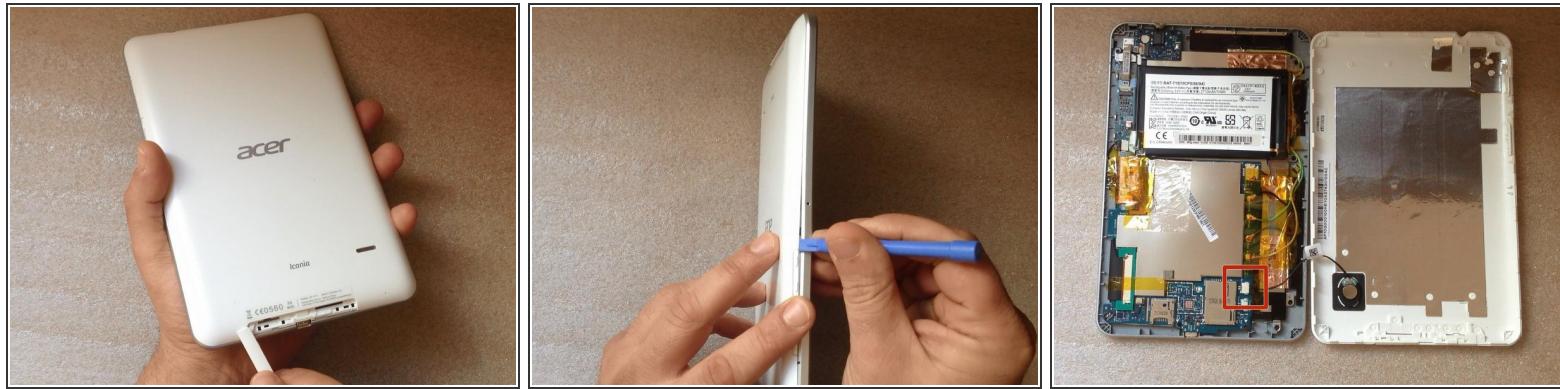

- Switch-off the tablet.
- Remove any SIM and/or Memory Card.
- Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.

! When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.

- Disconnect the Loudspeaker cable from the Logic board.


## Step 2



**⚠** Before doing anything, disconnect the battery.

**★** [\*\*Please SUBSCRIBE to my channel\*\*](#) ↗

## Step 3 — Audio Jack Connector

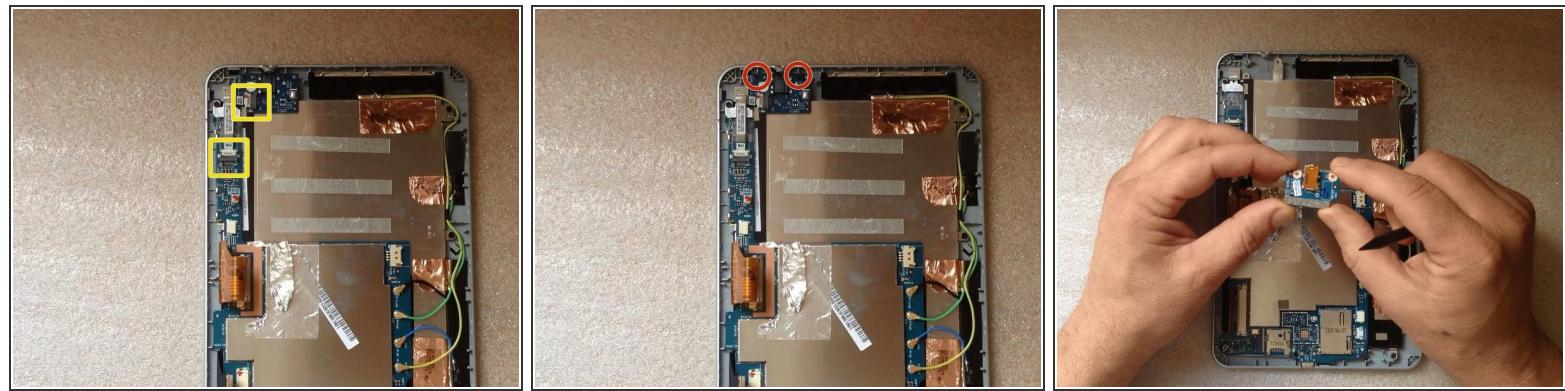

- Disconnect and remove the Audio Jack Board flex cable.
- Unscrew 2x Philips screws
- Remove the board with the Audio Jack Connector.
- .
- [\*\*Please SUBSCRIBE to my channel\*\*](#) ↴

To reassemble your device, follow these instructions in reverse order.