



Acer Iconia B1-711 Back Cover Replacement

Acer Iconia B1-711 Back Cover Replacement

Written By: ZFix



INTRODUCTION

How to remove the Back / Rear cover to replace it.


[Please SUBSCRIBE to my channel ↴](#)

[video: <http://youtu.be/8-djJ2aXa60>]

TOOLS:

- iFixit Opening Tools (1)

Step 1 — Back Cover

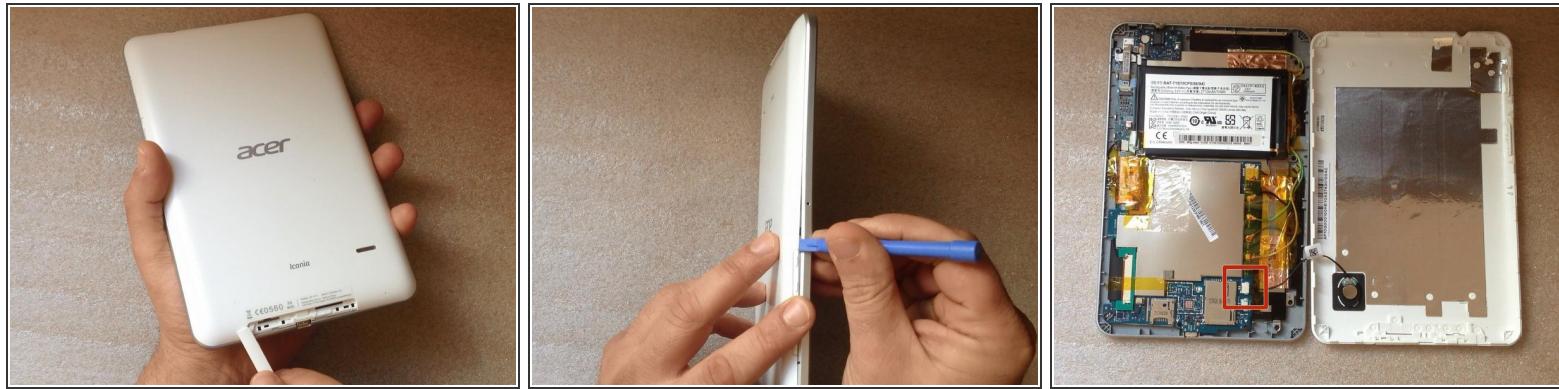

- Switch-off the tablet.
- Remove any SIM and/or Memory Card.
- Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.

! When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.

- Disconnect the Loudspeaker cable from the Logic board.

Step 2



⚠ Before doing anything, disconnect the battery.

★ [Please SUBSCRIBE to my channel](#) ↗

To reassemble your device, follow these instructions in reverse order.