



Acer Iconia B1-711 Battery Replacement

Acer Iconia B1-711 Battery Replacement

Written By: ZFix



INTRODUCTION

In this manual we will show you how to open the tablet's back cover and change the Battery.


[Please SUBSCRIBE to my channel ↴](#)

[video: <http://youtu.be/8-djJ2aXa60>]

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

Step 1 — Back Cover

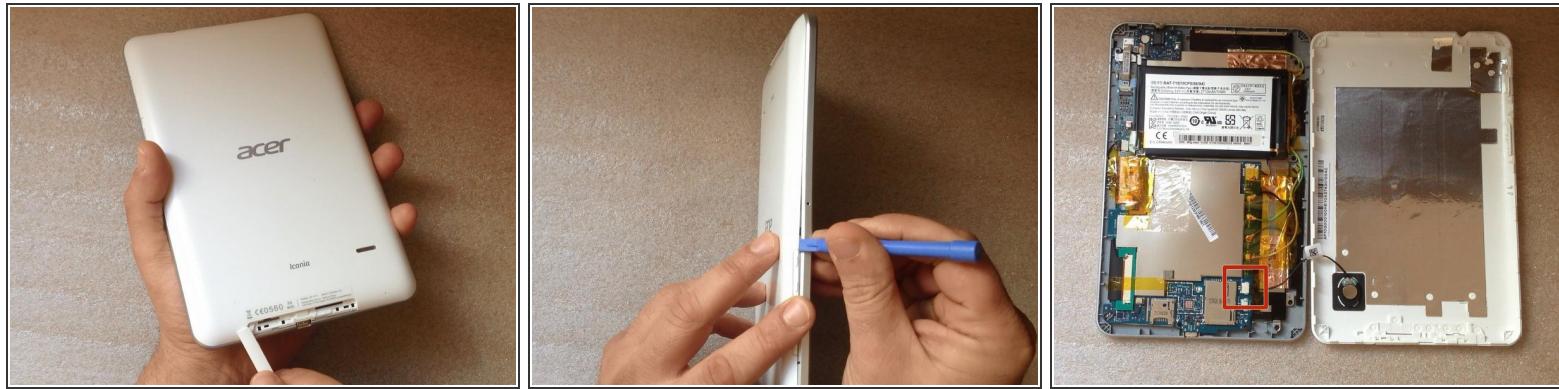

- Switch-off the tablet.
- Remove any SIM and/or Memory Card.
- Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.

! When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.

- Disconnect the Loudspeaker cable from the Logic board.



Step 2



⚠ Before doing anything, disconnect the battery.

⭐ Please [SUBSCRIBE](#) to my channel ↗

Step 3 — Battery

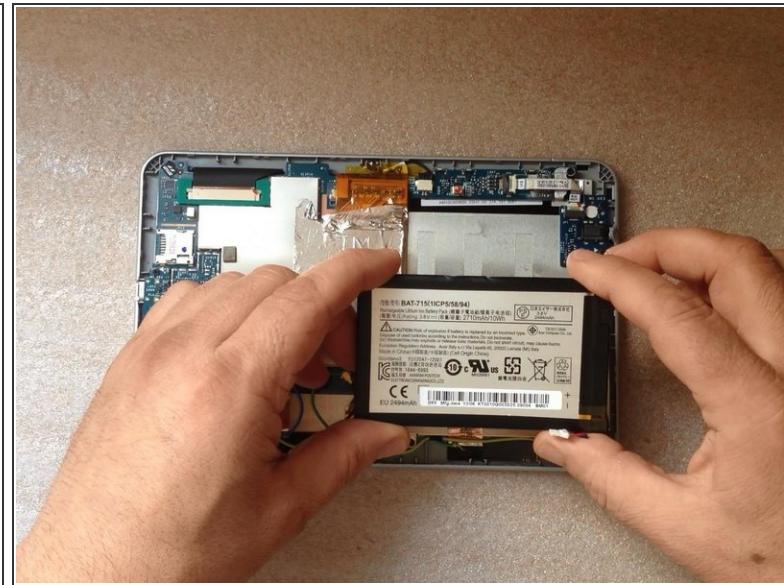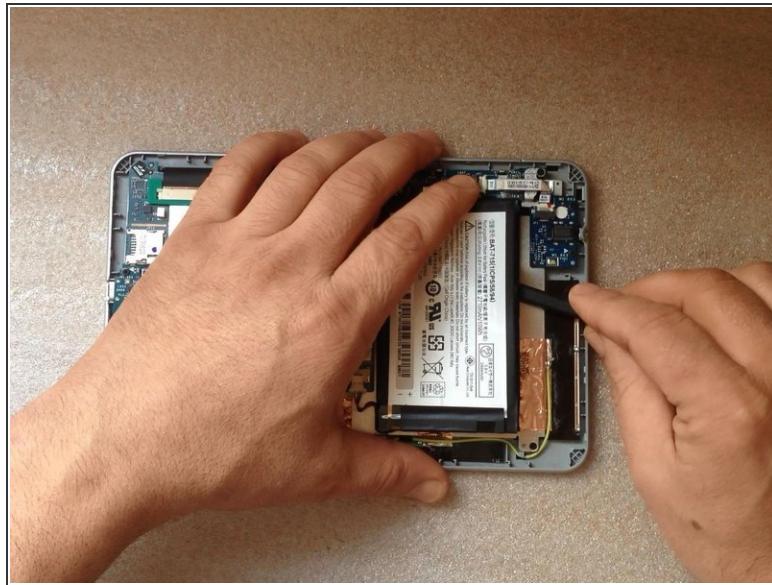

- With a long plastic tool like a spudger, unstick the battery from the metal LCD shield.
- Lithium Ion Battery Pack - 3.8V, 2710mAh

 [**Please SUBSCRIBE to my channel** ↗](#)

To reassemble your device, follow these instructions in reverse order.