



Acer Iconia B1-711 Camera Replacement

Acer Iconia B1-711 Camera Replacement

Written By: ZFix



INTRODUCTION

This guide will show you how to open the tablet and remove / replace the camera.

[Please SUBSCRIBE to my channel ↴](#)

[video: <http://youtu.be/8-djJ2aXa60>]

TOOLS:

- [Spudger](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Back Cover



- Switch-off the tablet.
- Remove any SIM and/or Memory Card.
- Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.

 When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.

- Disconnect the Loudspeaker cable from the Logic board.


Step 2



⚠ Before doing anything, disconnect the battery.

★ [Please SUBSCRIBE to my channel](#) ↗

Step 3 — Camera

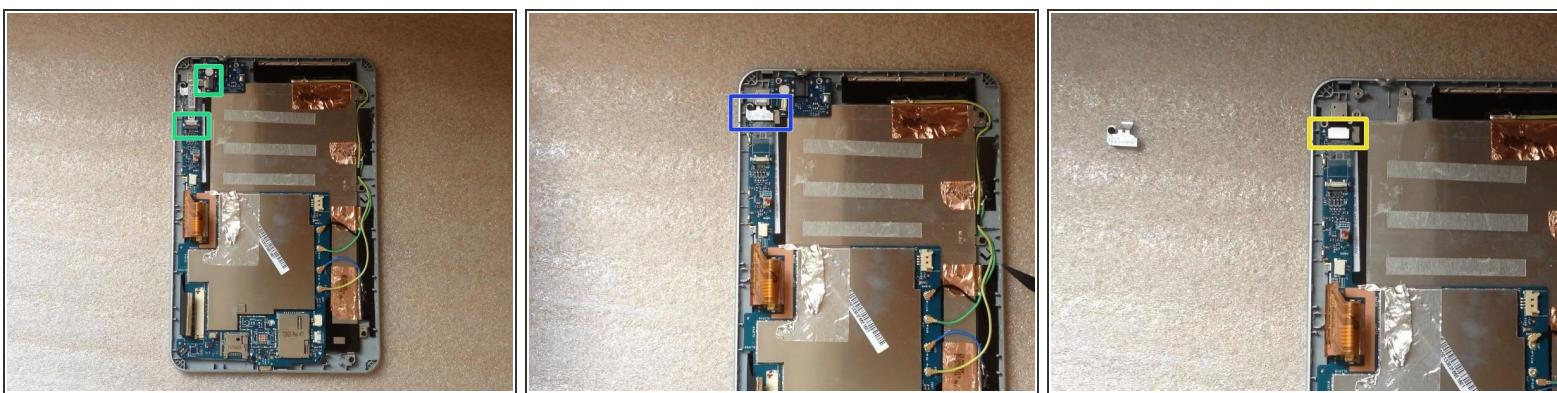

- Remove the Audio jack flex cable.
- Remove the metal plate which is placed on the camera connector.
- Disconnect the camera flex cable.

Step 4



- Remove the camera.
- [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.