



Acer Iconia B1-711 Microphone Replacement

Acer Iconia B1-711 Microphone Replacement

Written By: ZFix



INTRODUCTION

Follow this manual if you want to change a not working microphone.


[Please SUBSCRIBE to my channel ↴](#)

[video: <https://www.youtube.com/watch?v=8-dJ2aXa60>]

TOOLS:

- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Back Cover

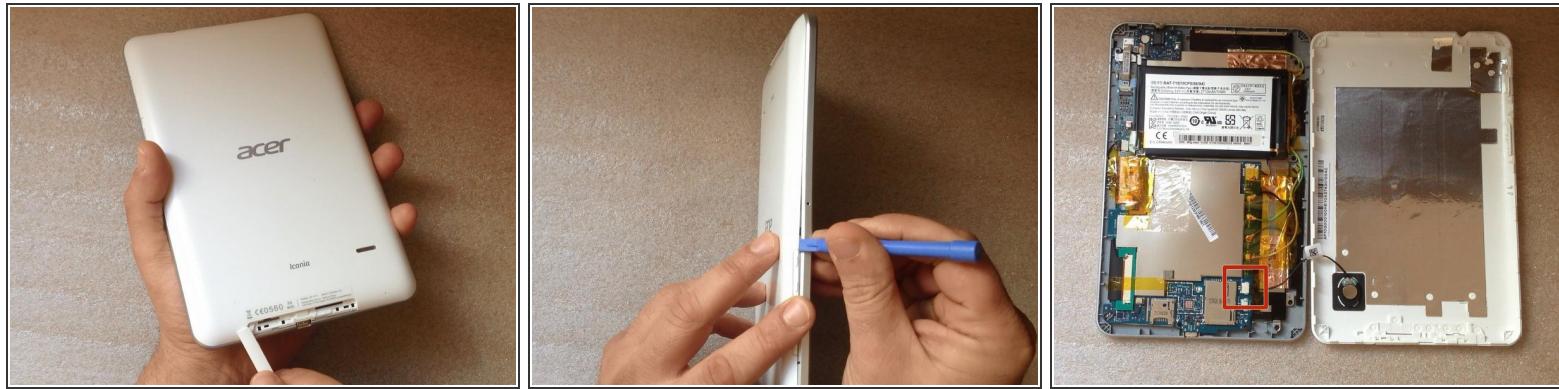

- Switch-off the tablet.
- Remove any SIM and/or Memory Card.
- Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.

⚠ When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.

- Disconnect the Loudspeaker cable from the Logic board.


Step 2



⚠ Before doing anything, disconnect the battery.

⭐ [Please SUBSCRIBE to my channel ↗](#)

Step 3 — Microphone

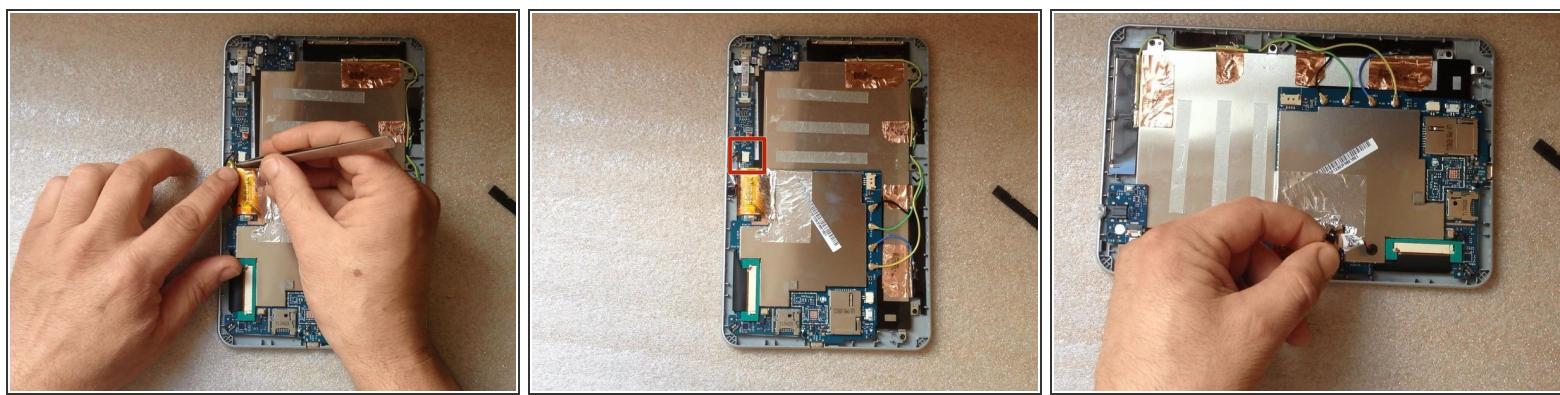

- Remove the tape from the microphone.
- Disconnect the Microphone wires and remove the Microphone.

⭐ [Please SUBSCRIBE to my channel ↗](#)

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-23 02:54:10 PM (MST).

