



# Acer Iconia Tab 8 A1-840 Buttons Replacement

Replace the volume and power buttons

Written By: taylerdurtschi



## INTRODUCTION

The volume and power button are assembled to the inside panel of the device. Both buttons will need to be replaced as they are combined into one piece.

### TOOLS:

- [iFixit Opening Tools \(1\)](#)

## Step 1 — Back Panel



- Power off the device
- Remove any cables that might be connected to your device
- Make sure the device is placed on a flat surface with the display screen facing up

## Step 2



- Wedge the plastic opening tool in between the display screen and back panel


Do not apply too much pressure in order to avoid cracking the screen

## Step 3



- Carefully separate the display from the back panel

## Step 4 — Buttons

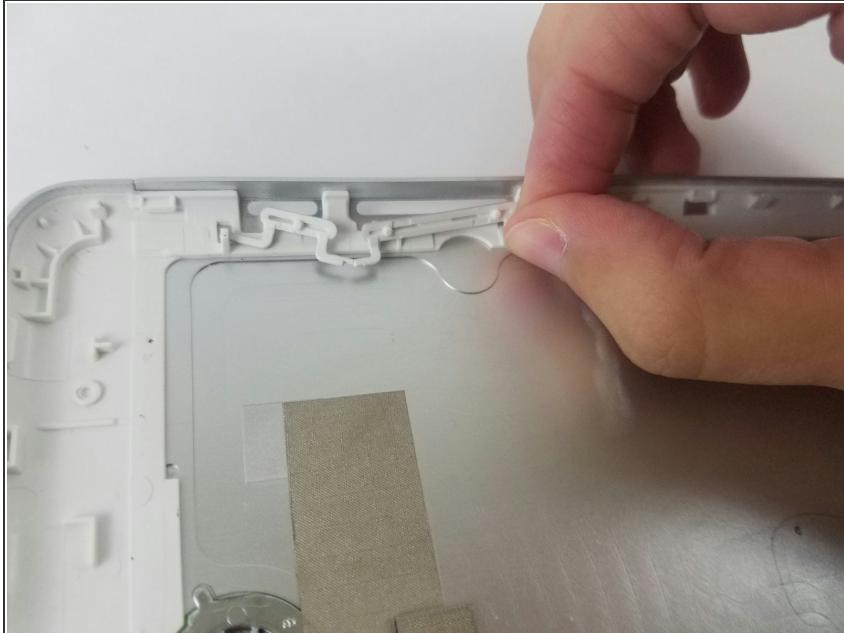

- Remove the buttons from the back panel using your fingers.

To reassemble your device, follow these instructions in reverse order.