



Acer Iconia Tab 8 A1-840 Front Camera Replacement

This simple guide will assist you in the replacement of the defective front facing camera on your tablet.

Written By: Claire Posadas



This document was generated on 2019-10-12 03:52:49 PM (MST).

INTRODUCTION

In order to replace the camera you'll have to first remove the back cover. The camera is one of the easiest components to replace once the cover is removed.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Heavy-Duty Spudger](#) (1)
- [Precision Tweezers Set](#) (1)

Step 1 — Back Panel



- Power off the device
- Remove any cables that might be connected to your device
- Make sure the device is placed on a flat surface with the display screen facing up

Step 2



- Wedge the plastic opening tool in between the display screen and back panel

Do not apply too much pressure in order to avoid cracking the screen

Step 3



- Carefully separate the display from the back panel

Step 4 — Front Camera



- Use the spudger to lift the the black flap.

Step 5



- Use the ESD safe precision tweezers to pull the connector out and carefully remove the camera.

To reassemble your device, follow these instructions in reverse order.