


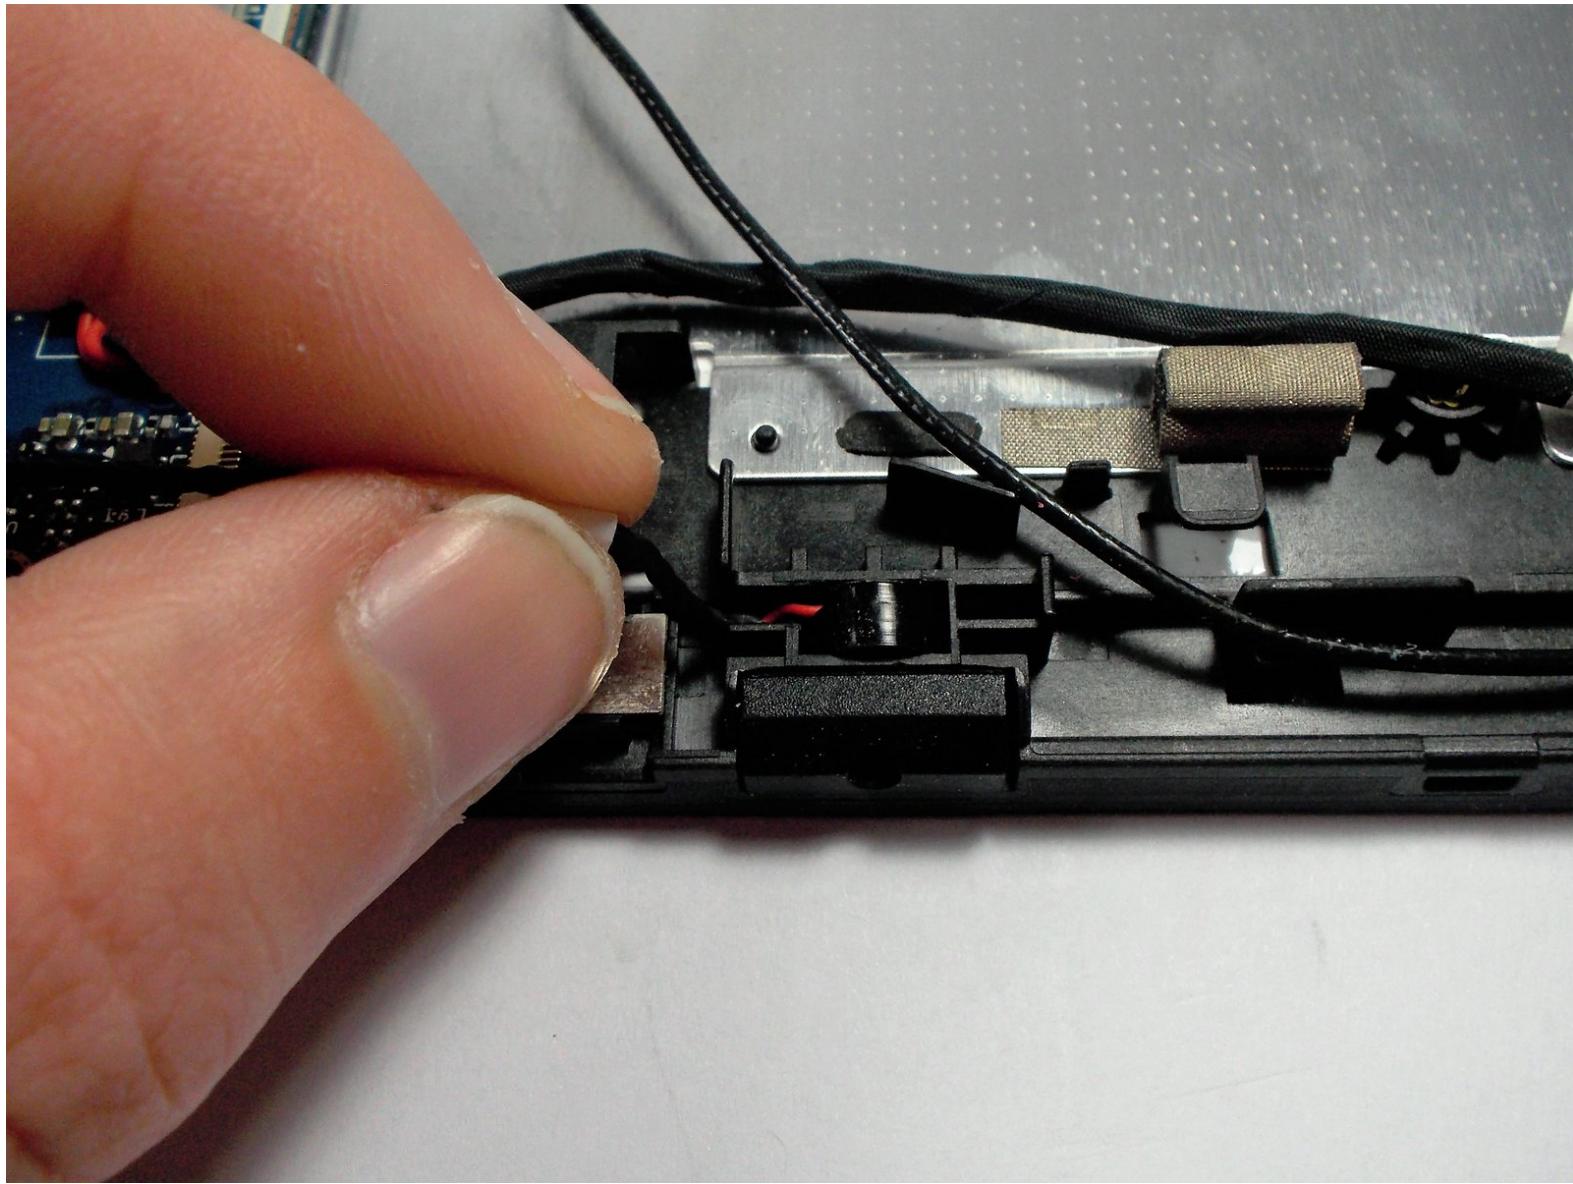

Acer Iconia Tab A200 Microphone Replacement

This replacement guide will demonstrate how to remove the microphone for the Acer Iconia Tab A200.

Written By: Jaimie Payne



This document was generated on 2019-10-03 03:00:27 PM (MST).

INTRODUCTION

The microphone is used to recognize sound input for the device.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery



- With the plastic opening tool pry open the grey plastic siding on both sides of the tablet.


Step 2



- Using a Phillips #00 screwdriver remove the 4.0 mm screws on the sides of the tablet.

(i) There are two screws on each side of the tablet that need to be removed before the back casing can be removed.

Step 3

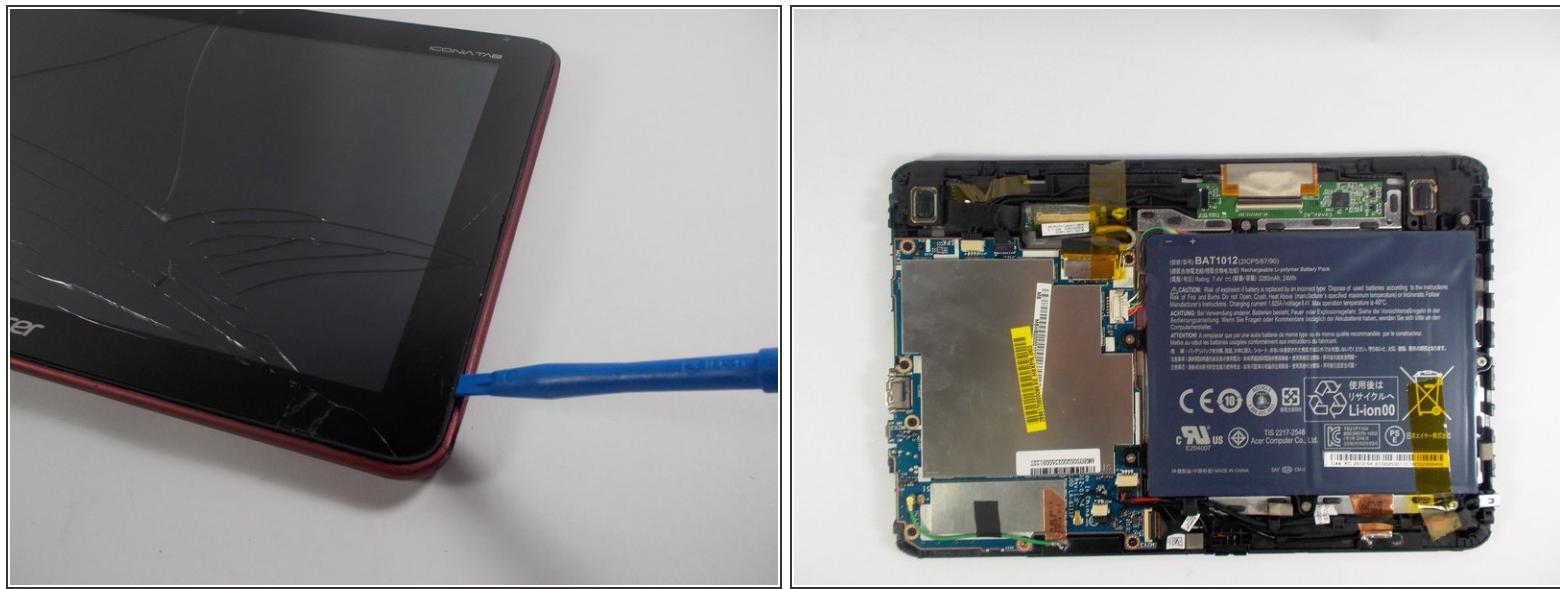


- Once the 4 screws have been removed use the plastic opening tool to pry open the device on the side of the device.
- ⚠** Be careful prying on the sides where you removed the screw as the plastic casing is not very strong and may break.
- After prying open the case with the plastic opening tool carefully remove the case from the device and place the device face down on its screen.

Step 4





- Using a Phillips #00 screwdriver remove the 4.0 mm screws holding the battery in place.

Step 5

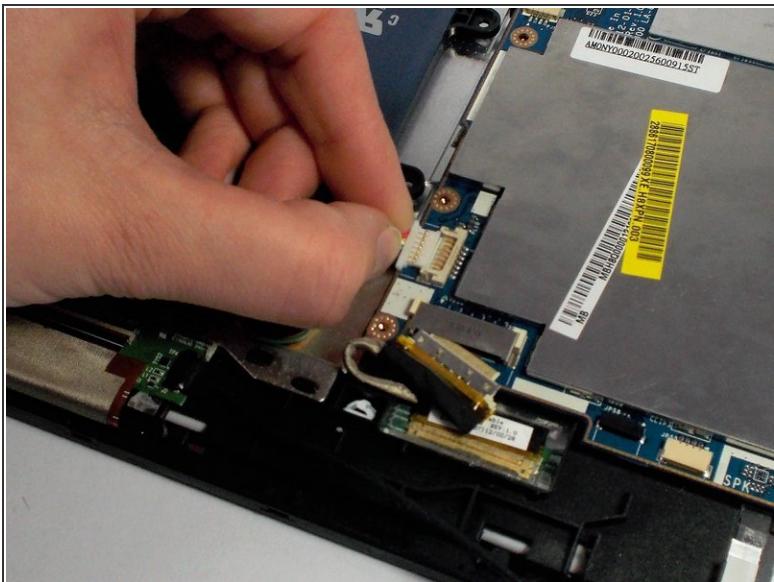


- Lift the battery out of the device, and disconnect the cable attached to the motherboard by pulling it out to the side not lifting it up.

Step 6 — Microphone

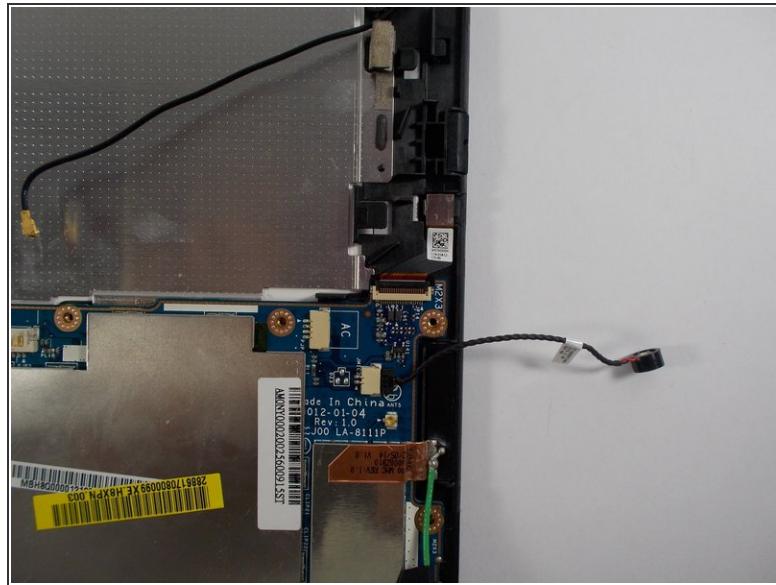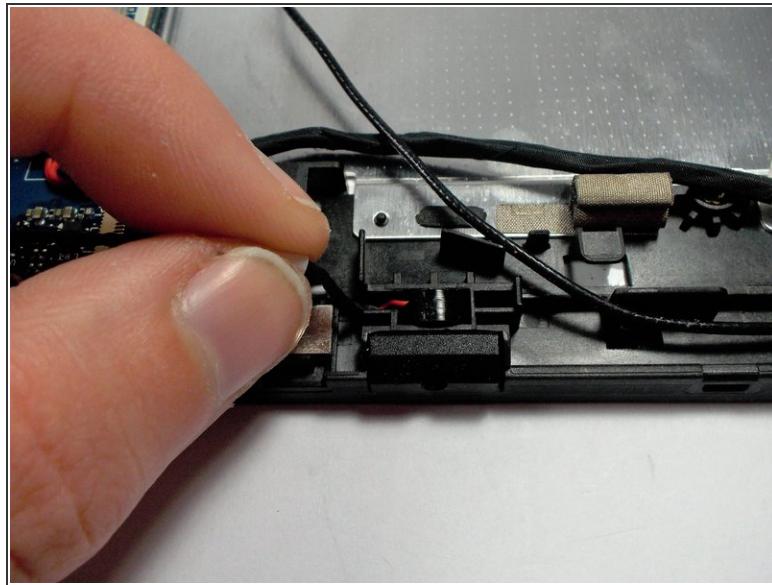

- Lift up on the microphone cable to lift the microphone component away from the case.

Step 7

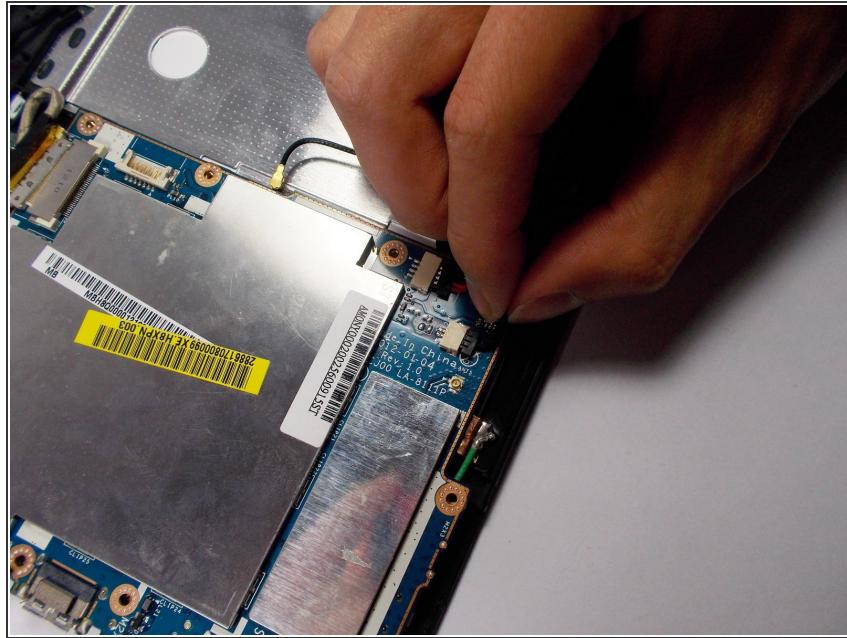

- Once the microphone has been lifted away from the case, disconnect the microphone cable from the motherboard by pulling the cable out horizontally. Do not lift up to remove.

To reassemble your device, follow these instructions in reverse order.