




# Acer Iconia Tab A500 Speakers Replacement

This guide will allow you to easily replace your speakers so you can get back to bumping those beats.

Written By: Kyle Libby

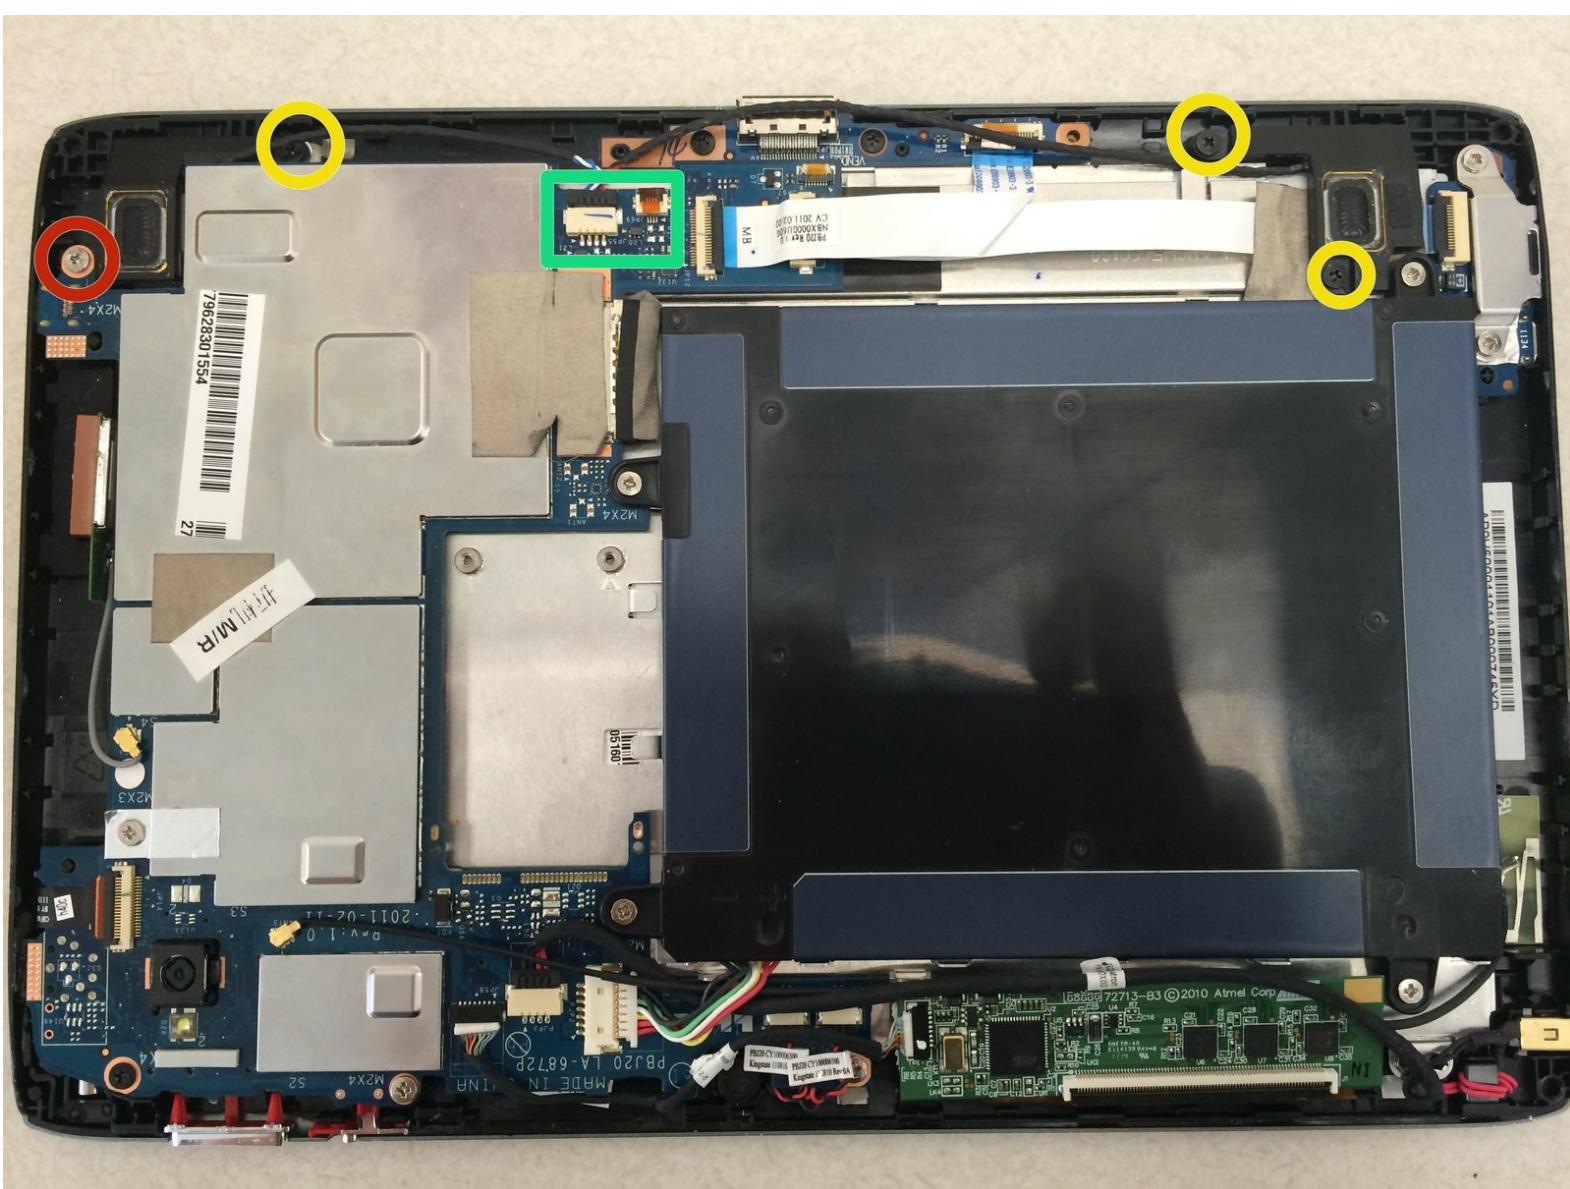

## INTRODUCTION

Replace the speaker in your Acer Iconia Tab 500.

### TOOLS:

- [Spudger](#) (1)
- [Phillips #1 Screwdriver](#) (1)

## Step 1 — Back Case




- To start, gently separate one corner of the case using the black spudger.

## Step 2




- Once you have successfully pried the spudger in between the front case and back case, continue do so around the entire tablet until the back case is completely disconnected.

## Step 3 — Speakers

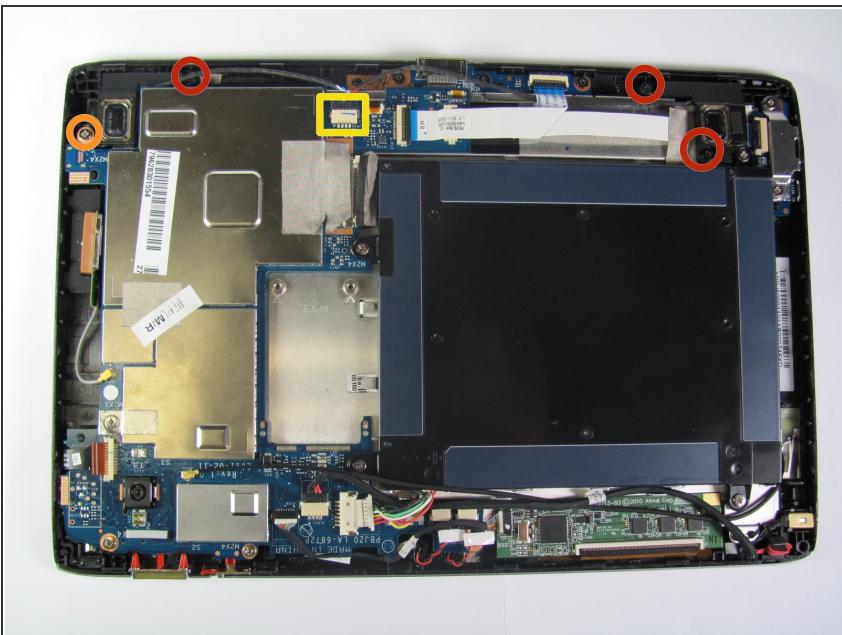

- Locate the 4 screws and cable that hold in the two speakers.
  - Use the Phillips #1 screwdriver to remove these 2mm black screws.
  - Remove the 2mm silver screws.
- (i)* Not all 4 screws are going to be the same kind. This will not affect the speaker replacement.
- Connector Cable

## Step 4

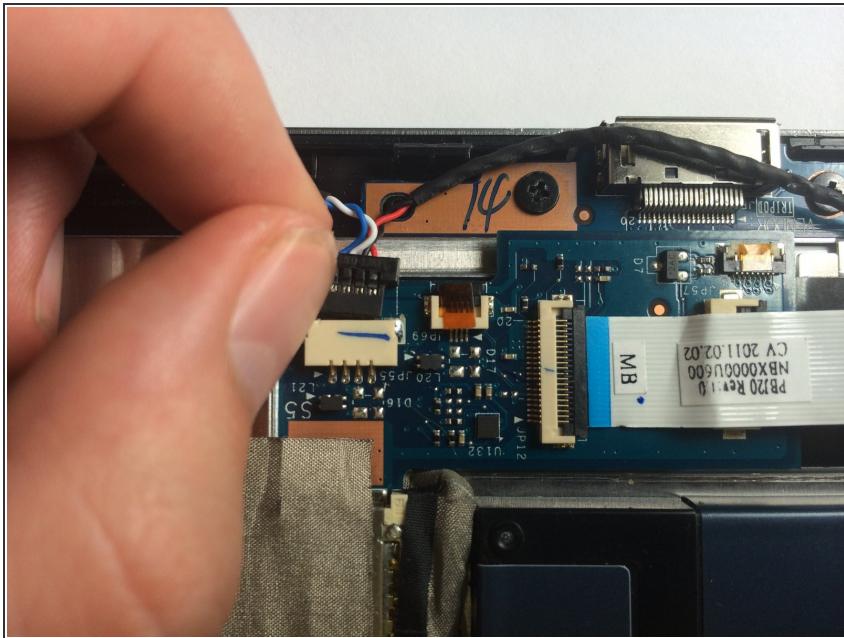

- Carefully remove the connector cable by pushing on the rim of black plastic insert.

## Step 5



- Unfortunately, the top speaker is a wedged under the motherboard.
- To get this speaker out, use the spudger and gently pry it out.

To reassemble your device, follow these instructions in reverse order.