




Acer Iconia Tab A501 Battery Replacement

Battery replacement guide for the Acer Iconia Tab A501.

Written By: Trey Bazinet

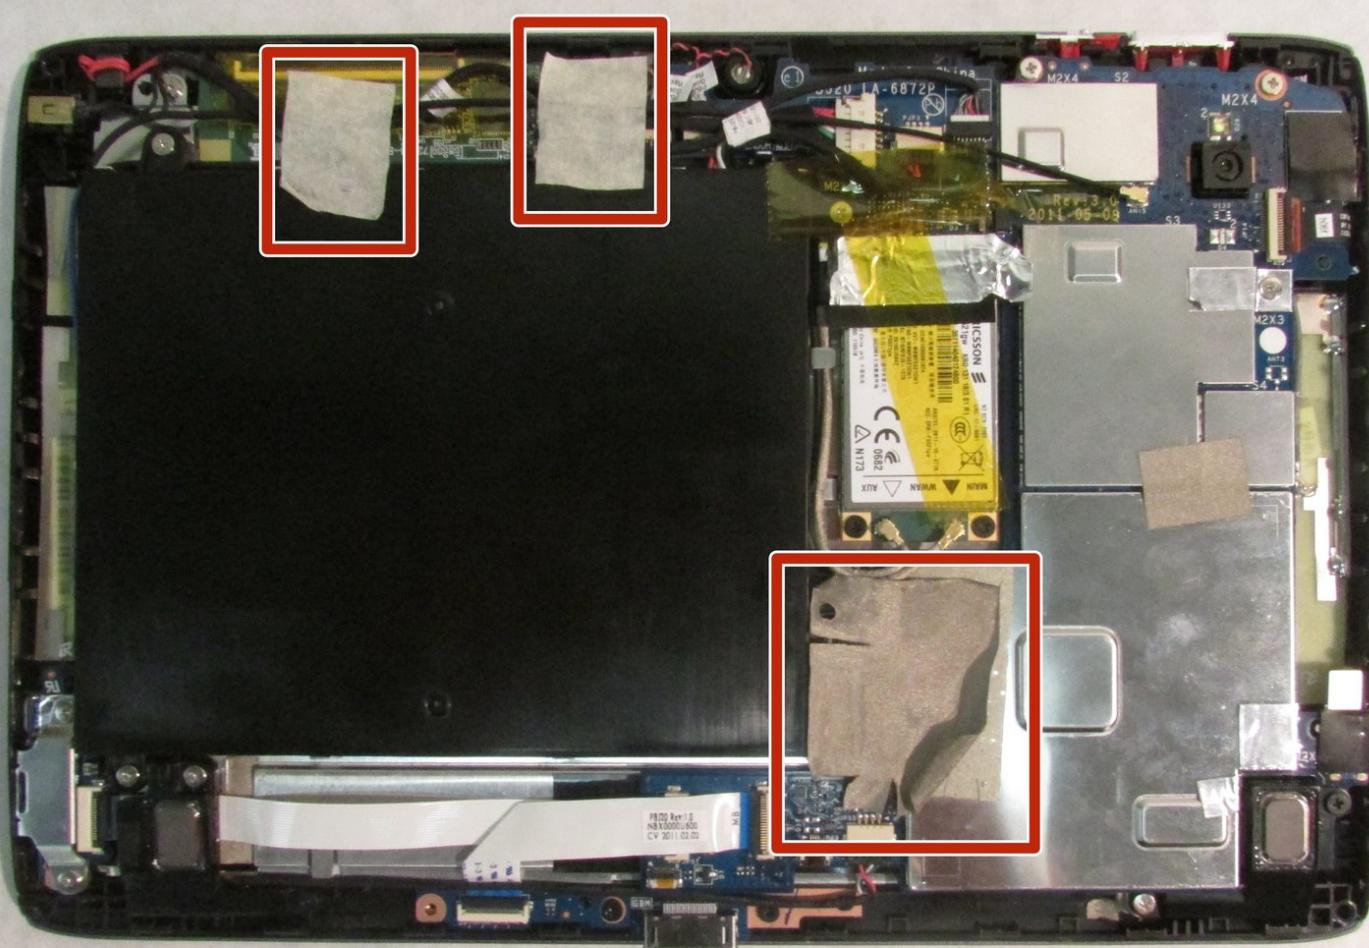

INTRODUCTION

Batteries tend to lose capacity over time as they are used and eventually fail. If your battery won't hold a charge or can't power your device, you may decide to replace the battery. This guide will demonstrate battery replacement for the Acer Iconia Tab A501.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- Angled
- [Phillips #1 Screwdriver](#) (1)

Step 1 — Back Cover



 Turn off your device before opening it.


- Use a plastic opening tool to carefully separate the back cover, starting at the volume buttons.
- Continue separating the back cover along the short side closest to the camera and around the device.

Step 2



- When separated enough, a little more than halfway around the device, the back cover will be easy to take off.

Step 3 — Battery

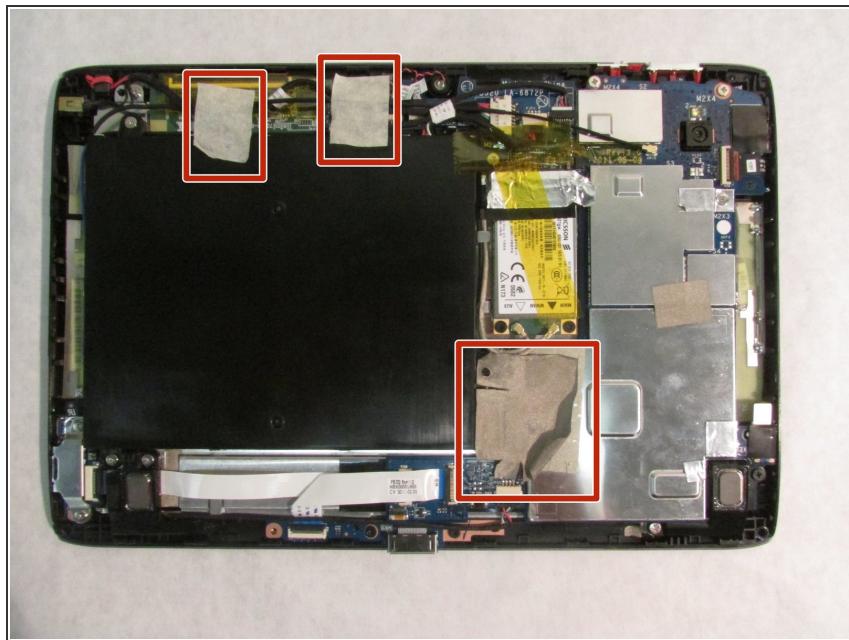

- Take off any tape covering the battery or black battery-motherboard cable.


Step 4



 In the next step, be careful not to squeeze too hard or scratch the motherboard.

- Use the angled tweezers to disconnect the white motherboard-battery connector in the middle of the side opposite the docking port.

Step 5

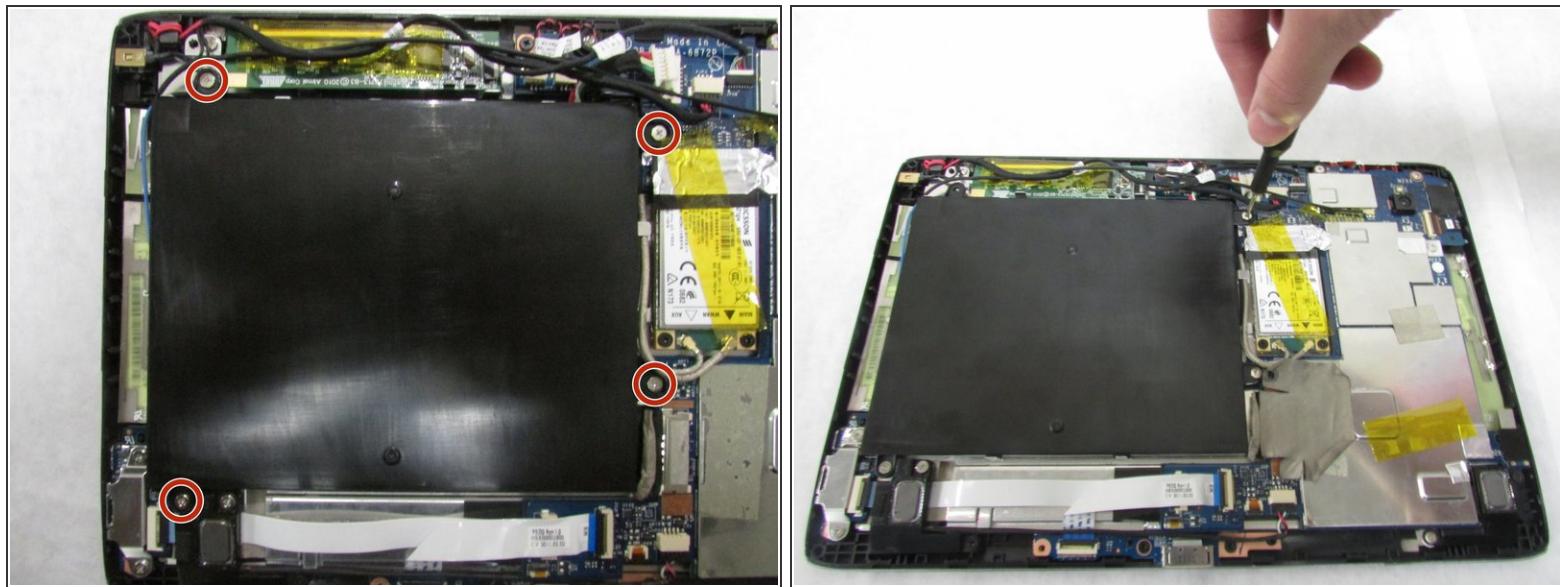

- Use a Phillips #1 screwdriver to remove the four 4.0 mm Philips head screws connecting the battery to the motherboard.

Step 6



- Take out the battery.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-21 11:14:34 PM (MST).

