




Acer Iconia Tab A501 Display Replacement

This guide will enable the user to replace the display on the device.

Written By: Daksh Malhotra

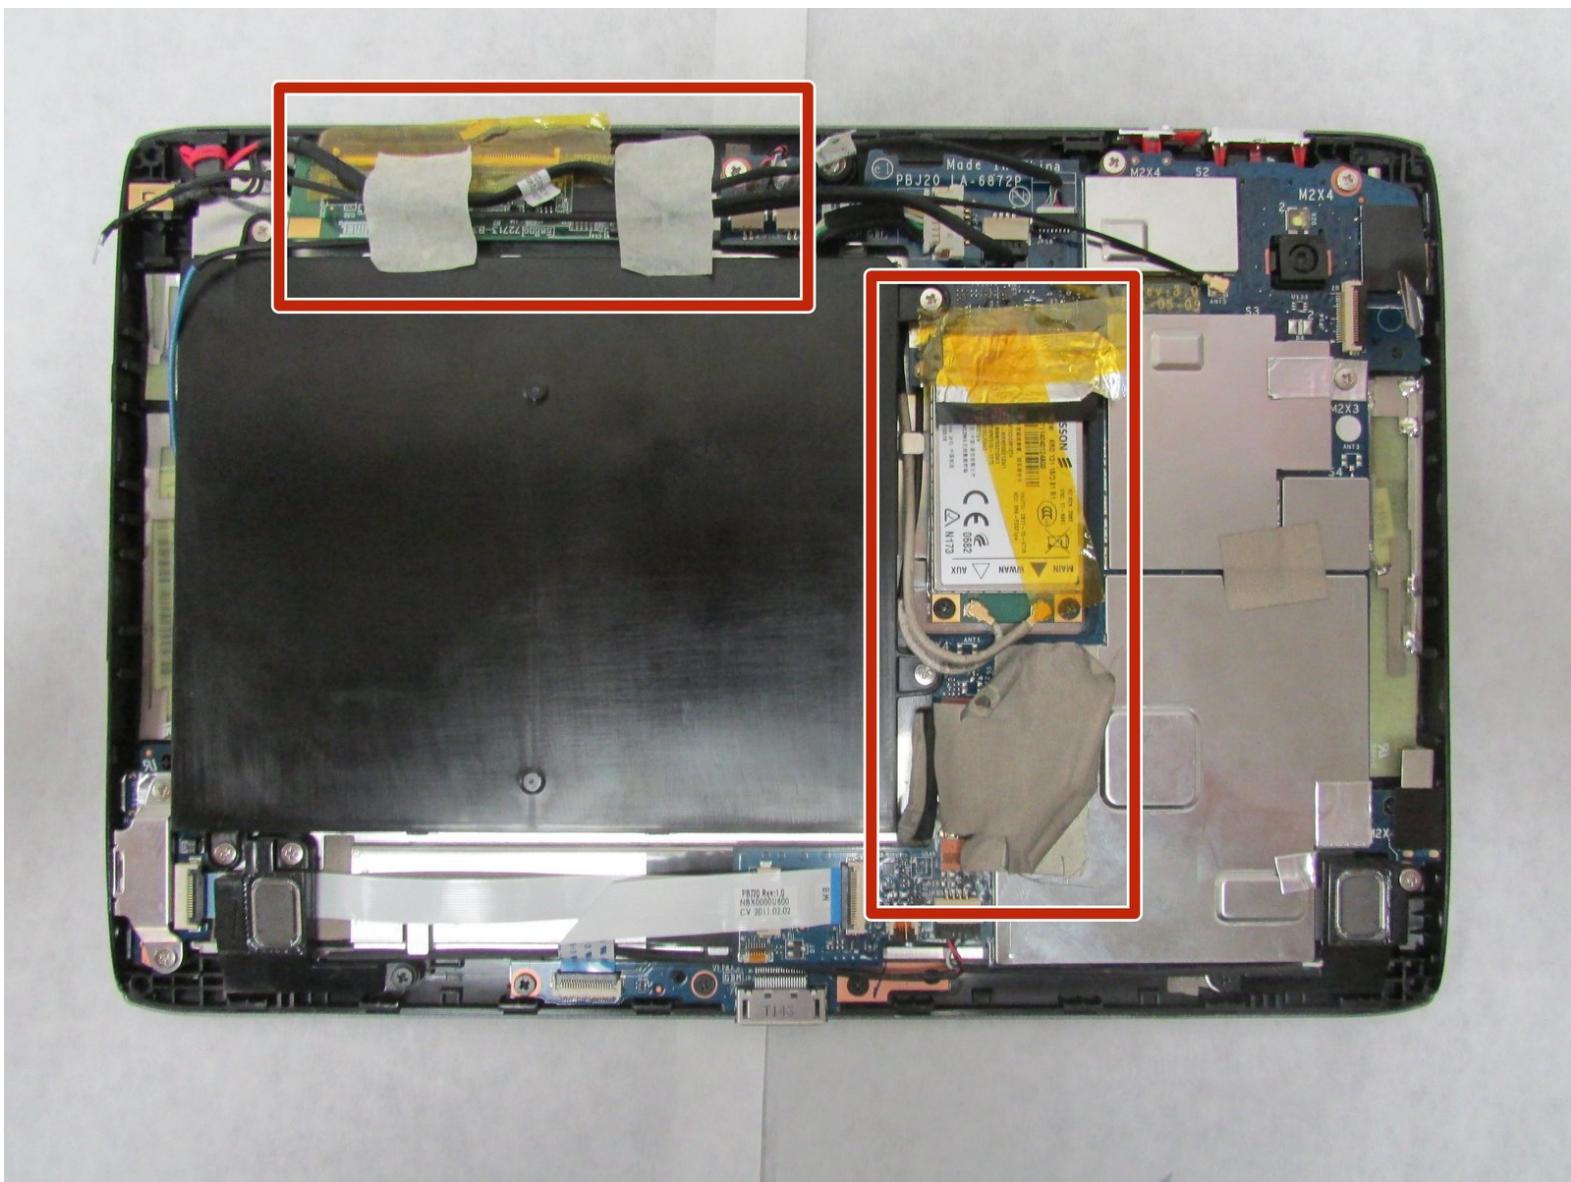

INTRODUCTION

A display shows you what is happening on your device. Without a working display, a device isn't much use. This guide will show you how to replace the display on your Acer Iconia Tab A501.

TOOLS:

- [Spudger \(1\)](#)
- [ESD Safe Tweezers Blunt Nose \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)

Angled

- [Halberd Spudger \(1\)](#)
- [Jimmy \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Back Cover



 Turn off your device before opening it.

- Use a plastic opening tool to carefully separate the back cover, starting at the volume buttons.
- Continue separating the back cover along the short side closest to the camera and around the device.


Step 2





- When separated enough, a little more than halfway around the device, the back cover will be easy to take off.

Step 3 — Display

- Remove all tape from the device.

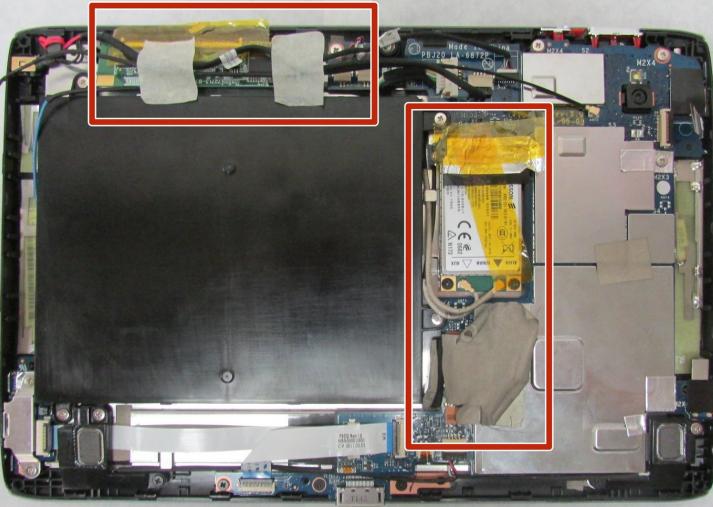


Step 4

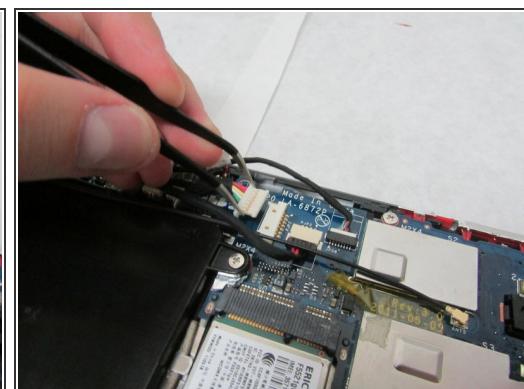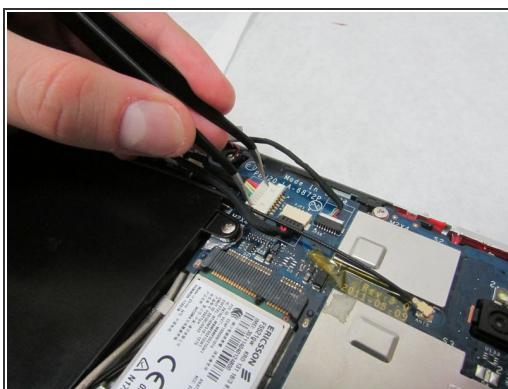

! In the next step, be careful not to squeeze too hard or scratch the motherboard.


- Use the angled tweezers to disconnect the motherboard-battery cable from the white connector in the middle of the side opposite the docking port.

Step 5

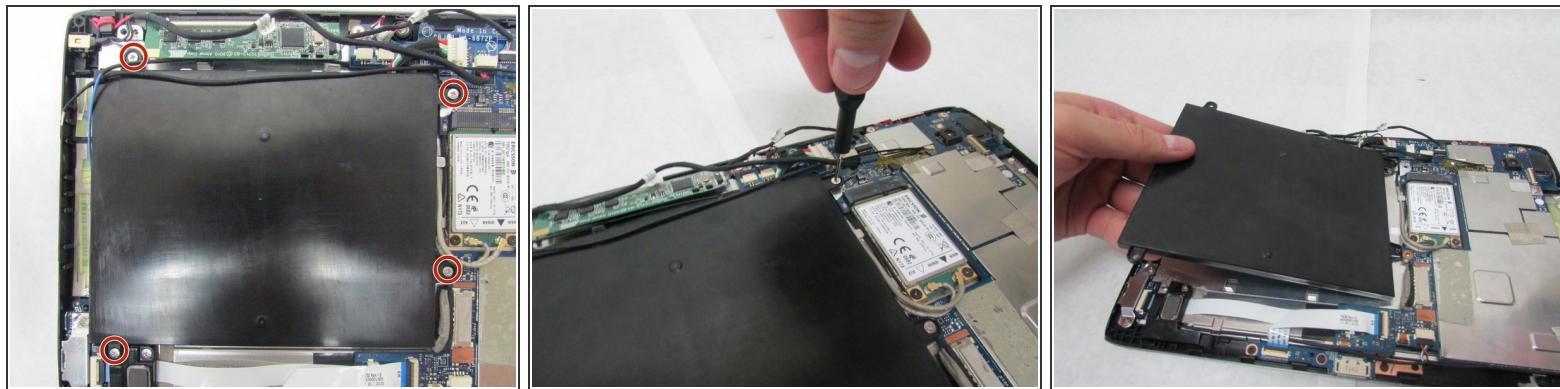


- Use a Phillips #1 screwdriver to remove the four 4.0 mm Philips head screws connecting the battery to the motherboard.
- Take out the battery.

Step 6

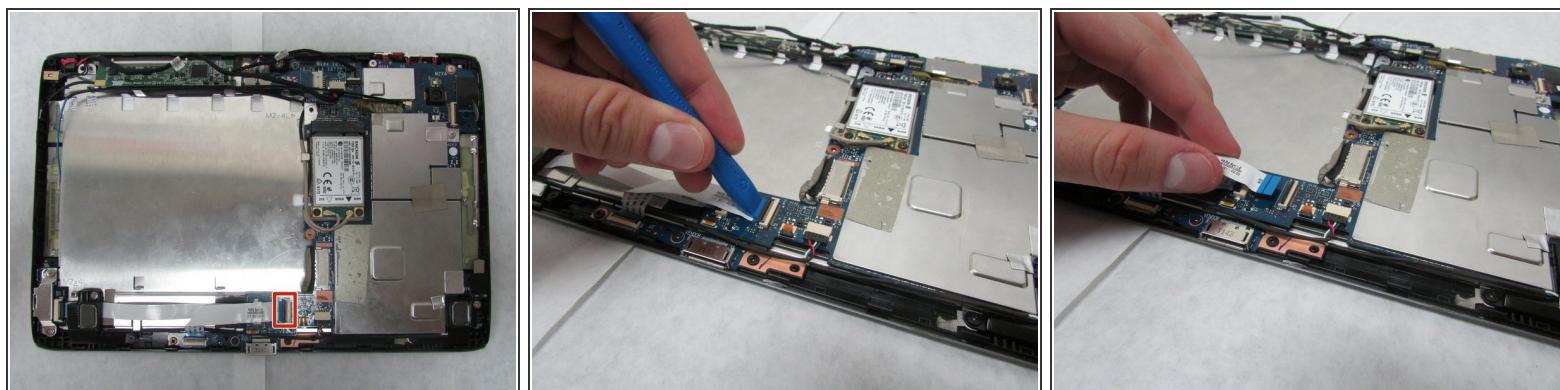

- Use the plastic opening tool to flip up the locking mechanism on the motherboard connected to the folded, white ribbon cable.
- Remove the folded, white cable.

Step 7

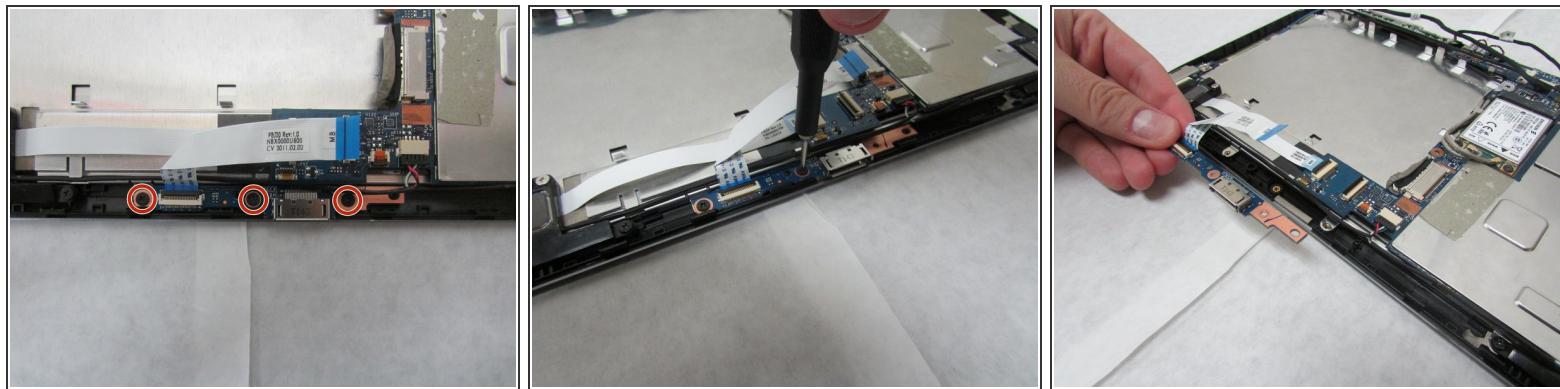

- Use a Phillips #1 screwdriver to unscrew the three 3.0 mm Philips head screws holding the docking port in place.
- Remove the docking port.

Step 8



 In this step, be careful not to squeeze too hard or scratch the motherboard.


- Use the angled tweezers to disconnect the cable with red, white and green wires from the beige connector slightly in from the docking port.

Step 9




- Unscrew the 3.0 mm Phillips head screw on each speaker using a Phillips #1 screwdriver.
- Unscrew the 4.0 mm Phillips head screw on each speaker using a Phillips #1 screwdriver.

Step 10

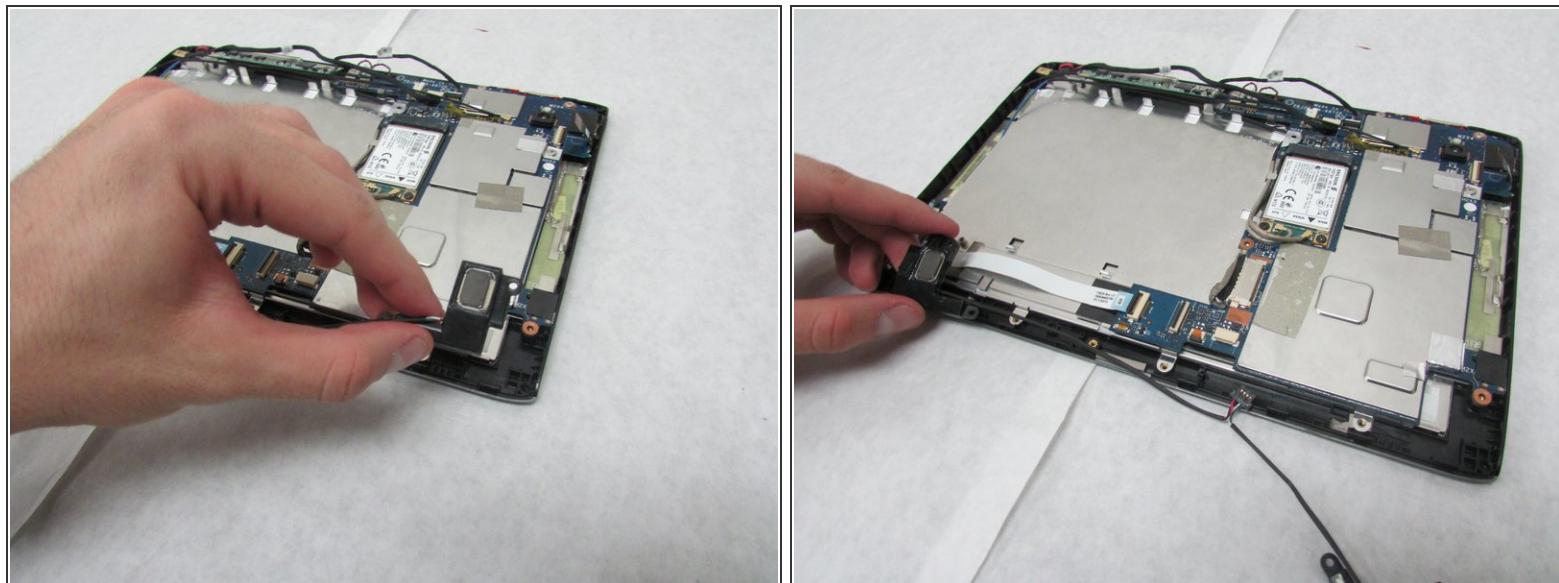


- Remove the speakers.

Step 11

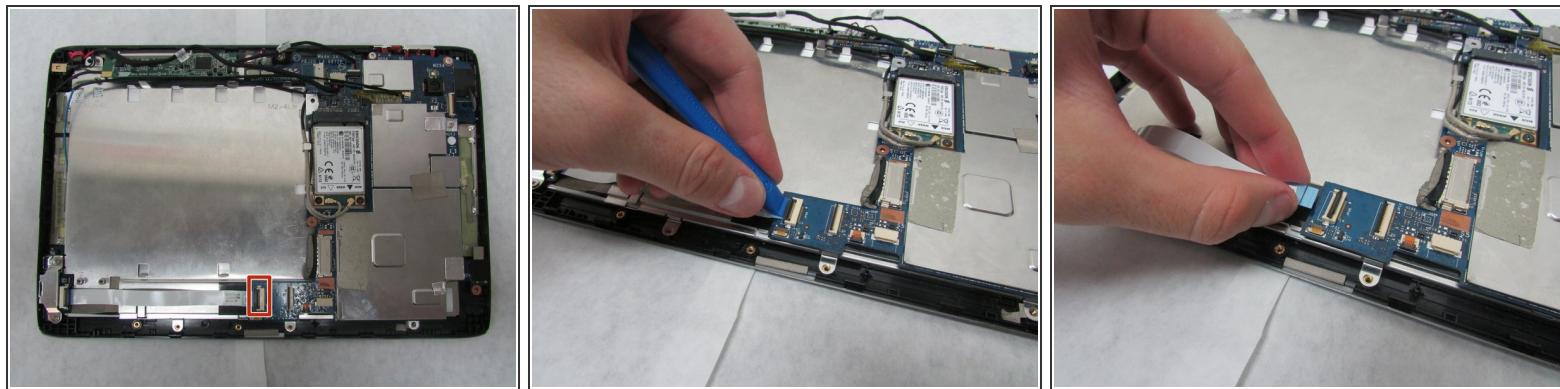



- Use the plastic opening tool to flip up the locking mechanism on the motherboard connected to the straight, white ribbon cable.
- Remove the straight, white ribbon cable.

Step 12

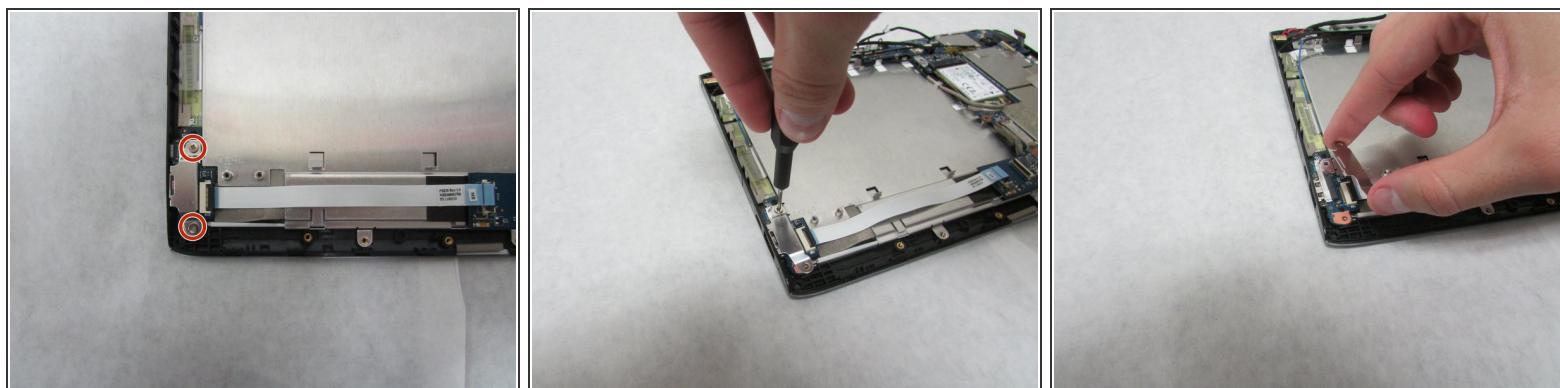


- Use a Phillips #1 screwdriver to remove the two 4.0 mm Philips screws attaching the metal plate, USB board, and device.
- Remove the metal plate.

Step 13

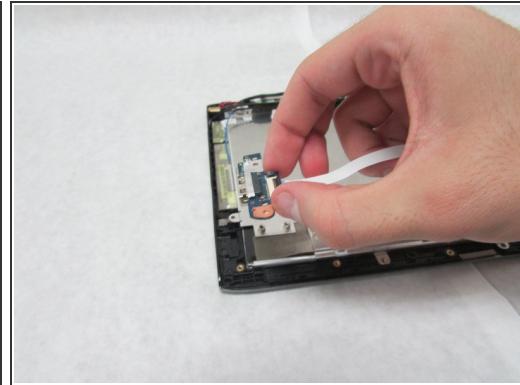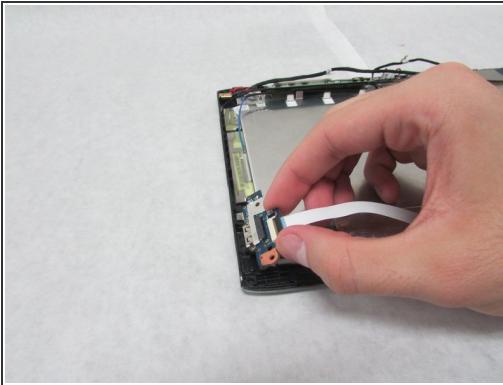

- Use the Halberd Spudger to carefully pop up and take out the ports.


Step 14

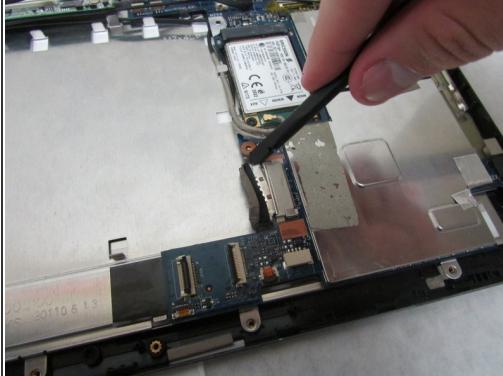

⚠ Use care in the next step.


- Use the wide, flat end of the standard Spudger to disconnect the display connector from the large, metal port next to the battery space.

Step 15

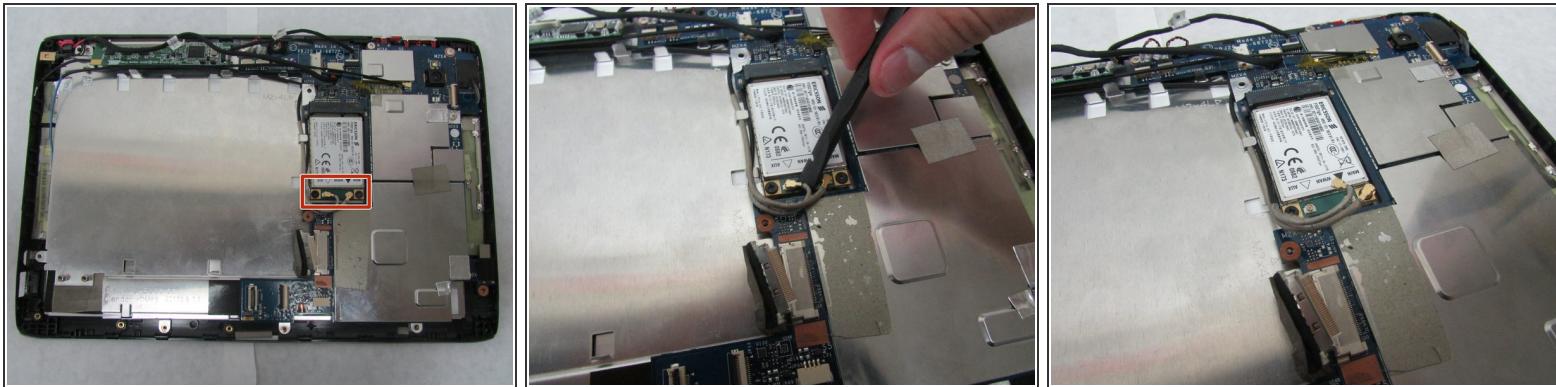


- Use the flat end of the standard Spudger to disconnect the two small, rotatable connectors attached to the wireless adapter.

Step 16

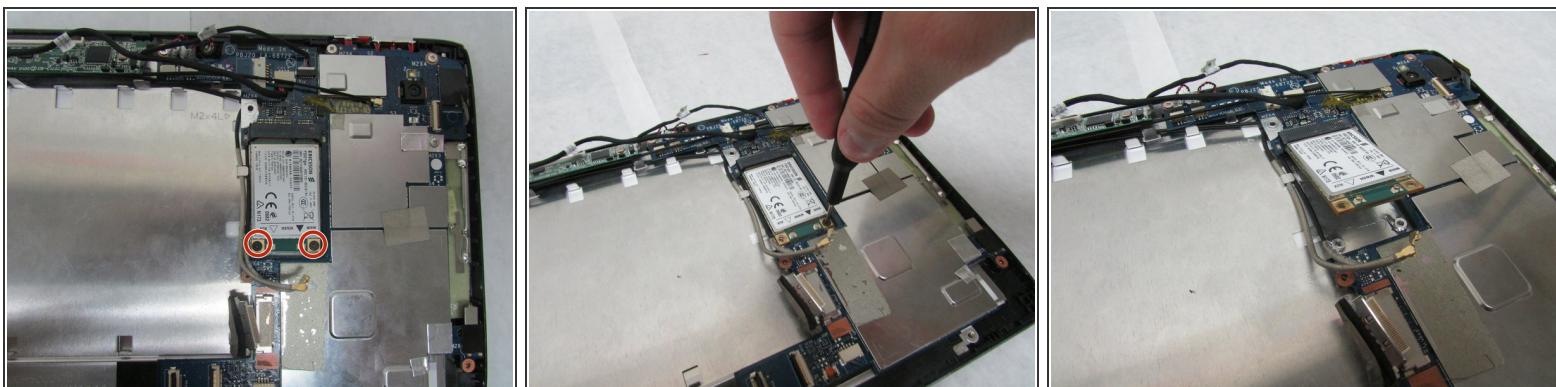

- Use a Phillips #1 screwdriver to remove the two 3.0 mm Philips head screws holding the adapter down.

Step 17

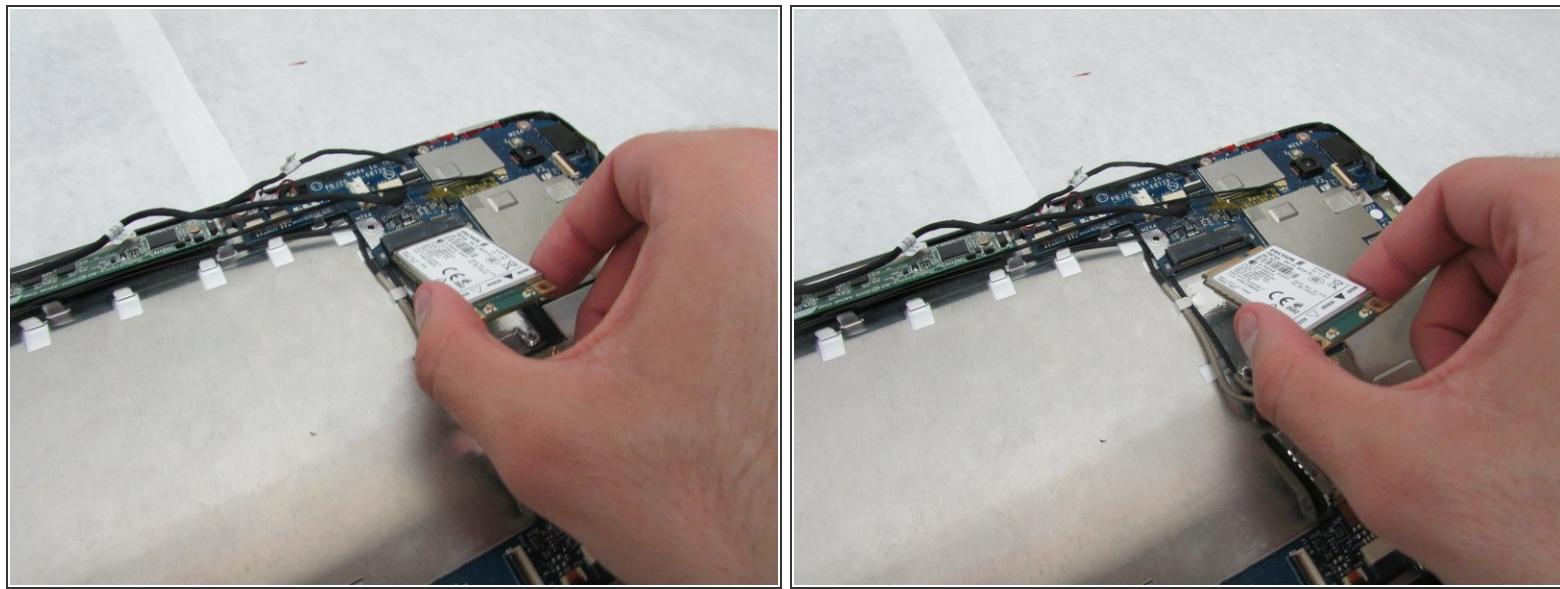


- Carefully slide the adapter out to remove it.

Step 18



- Use the wide end of the standard Spudger to take off the rotatable connector to the 3g antenna below the rear-facing camera.


Step 19

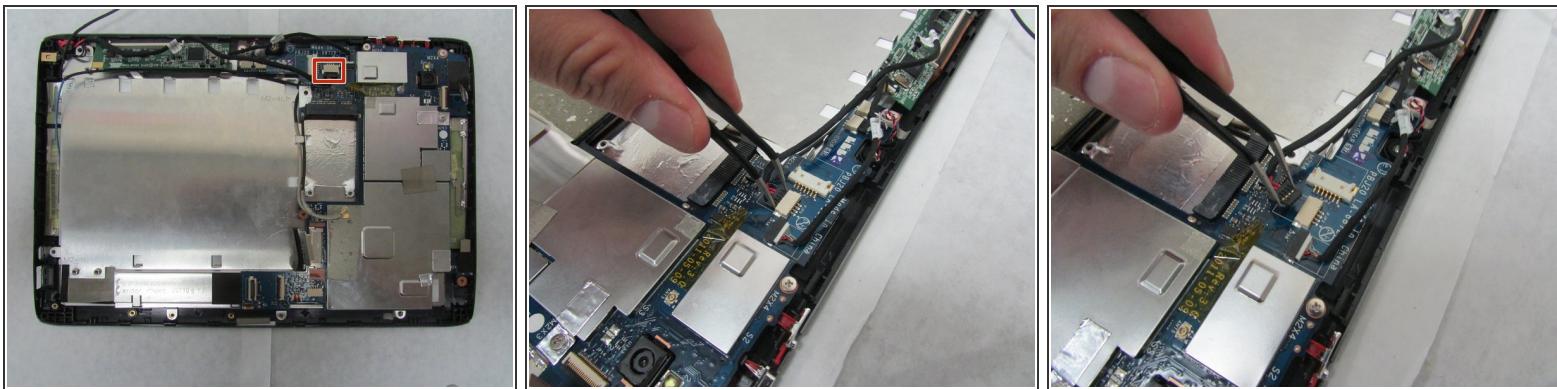

⚠ In the next step, be careful not to squeeze too hard or scratch the motherboard.

- Use the angled tweezers to disconnect the cable with red wires from the beige connector opposite the docking port.


Step 20

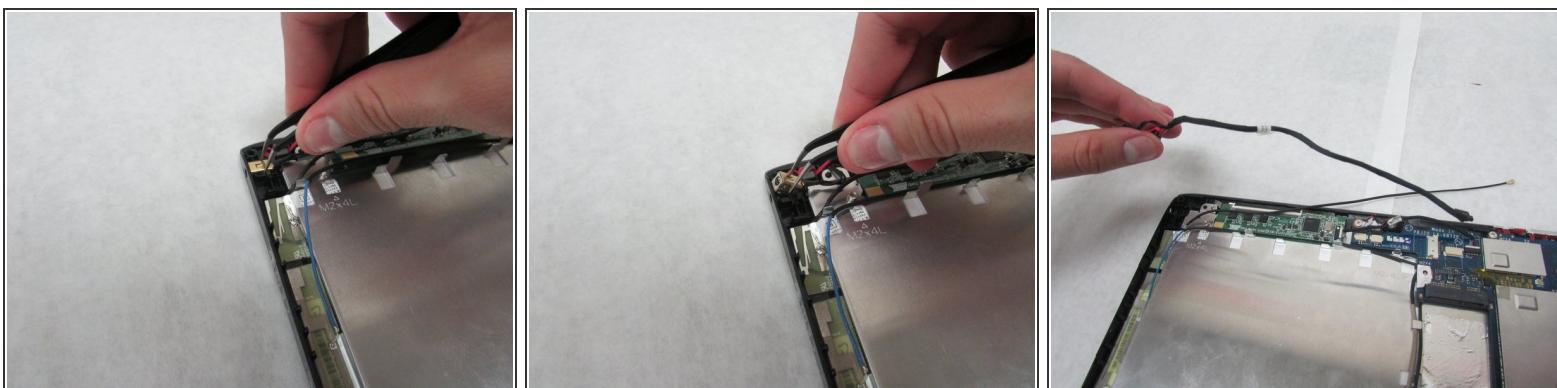

ⓘ The charging port may be taped from underneath and need a bit of force to take out.

- Use the angled tweezers to remove the charging port.

Step 21

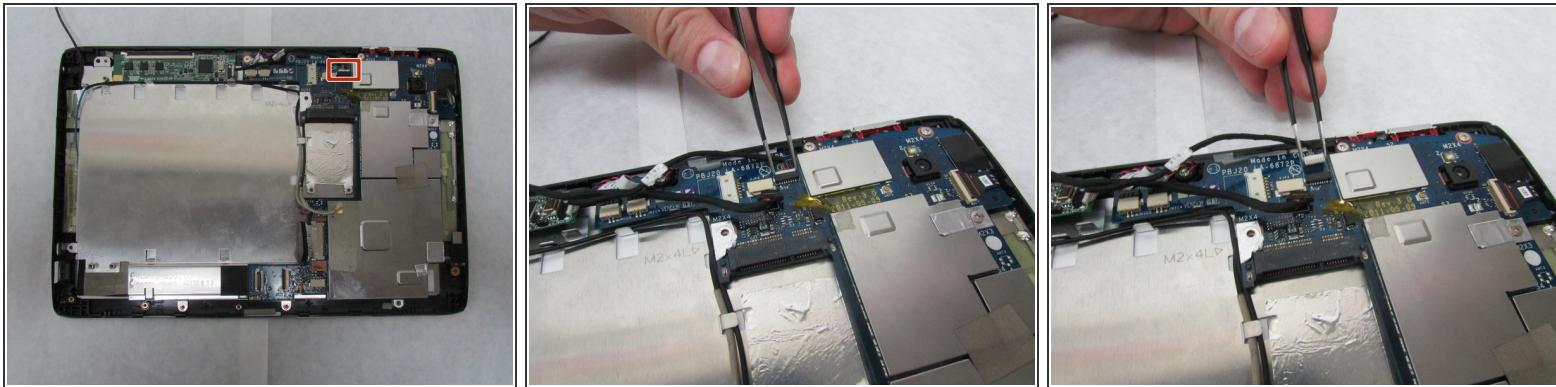

⚠ In this step, be careful not to squeeze too hard or scratch the motherboard.


- Use the tweezers to remove the white touchscreen connector with multi-colored wires from the black port just below the power buttons on the motherboard.

Step 22



- Use the plastic opening tool to flip up the locking mechanism for the wide, white port for the thin, orange-brown touchscreen cable just above the charging port.
- Remove the touchscreen board.


Step 23

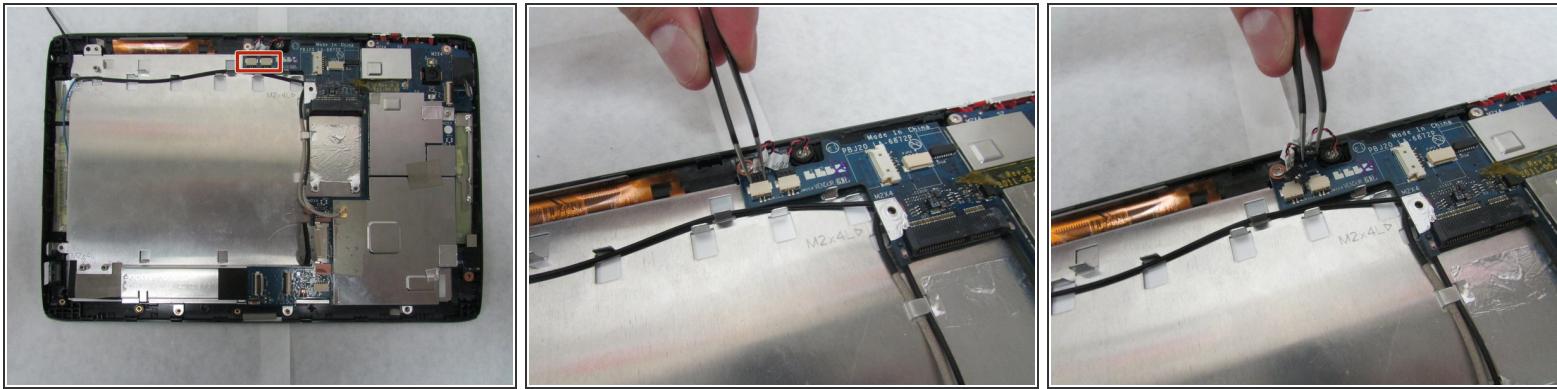

⚠ In this step, be careful not to squeeze too hard or scratch the motherboard.



- Use the angled tweezers to disconnect two microphone connectors, which are above the orange-brown touchscreen connector and next to the battery space.

Step 24

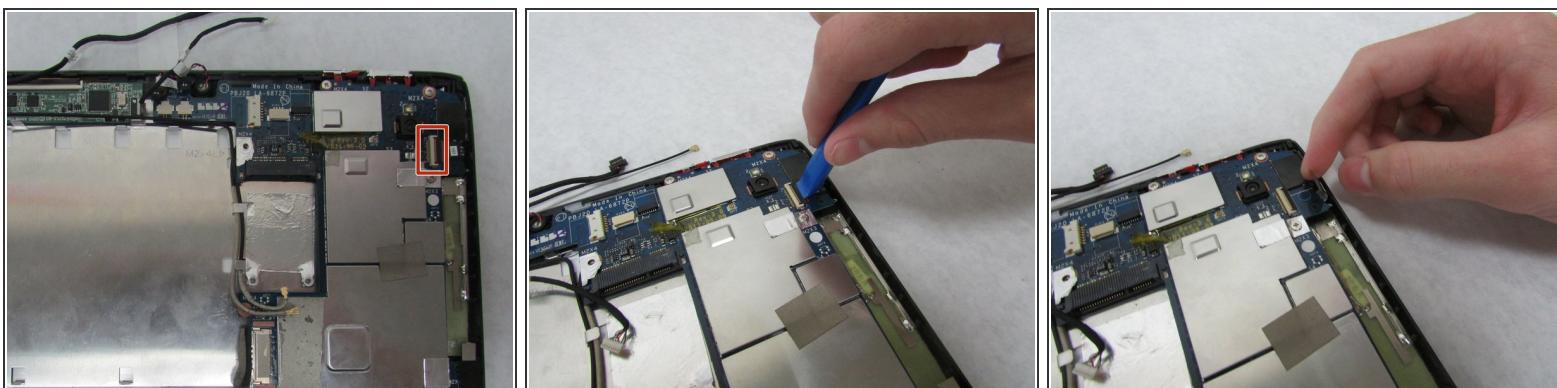



- Use the plastic opening tool to flip up the locking mechanism to the white front camera port just above the rear-facing camera.
- Disconnect the camera cable from the motherboard.

Step 25

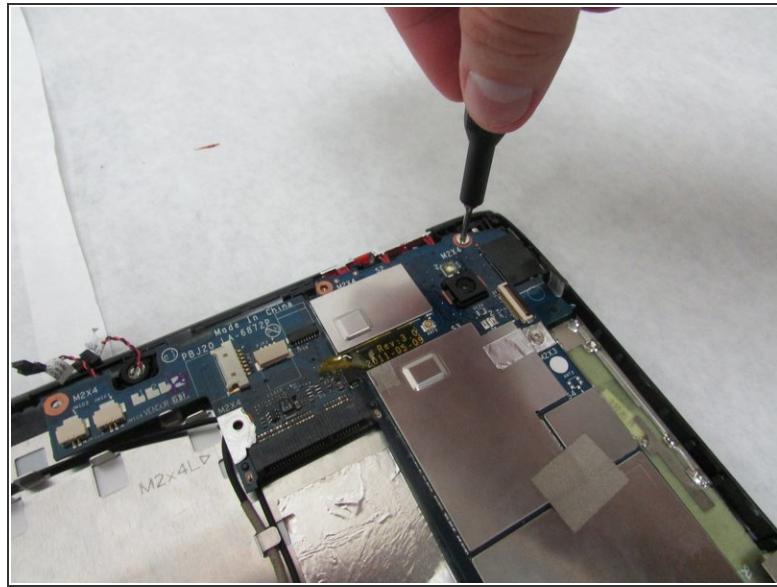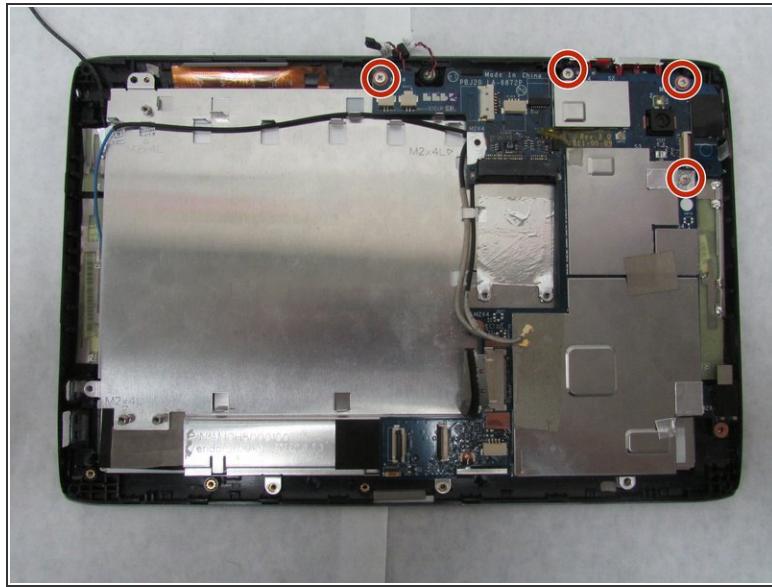


- Use a Phillips #1 screwdriver to unscrew the four 4.0 mm Phillips head screws holding the motherboard in place.

Step 26

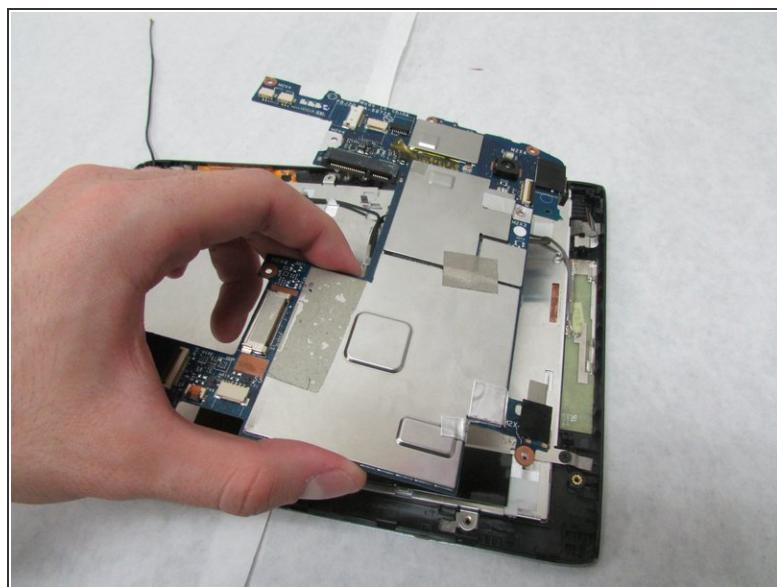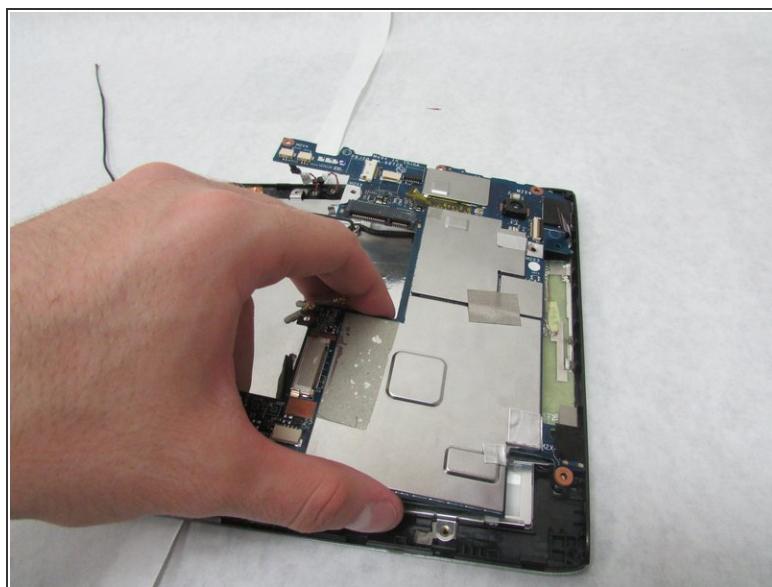

- Remove the motherboard.

Step 27

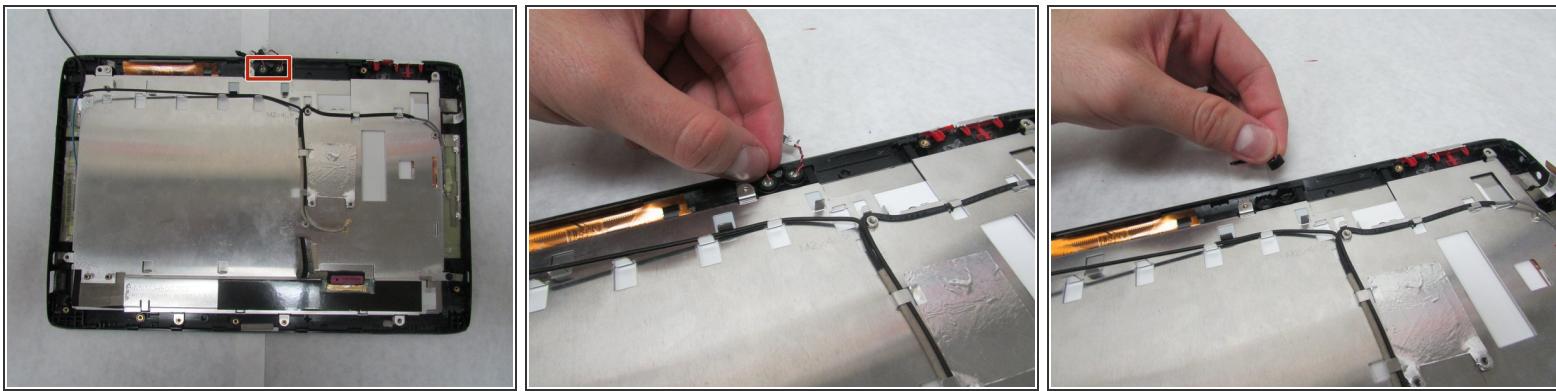



- Remove the two microphones in the middle of the side opposite the docking port.

Step 28



- Use the Phillips #1 screwdriver to unscrew the 3.0 mm Phillips head screw holding the thin metal plate to the device near the Micro-HDMI port.
- Use the Phillips #1 screwdriver to unscrew the 4.0 mm Phillips head screw near the orange-brown touchscreen cable.

Step 29

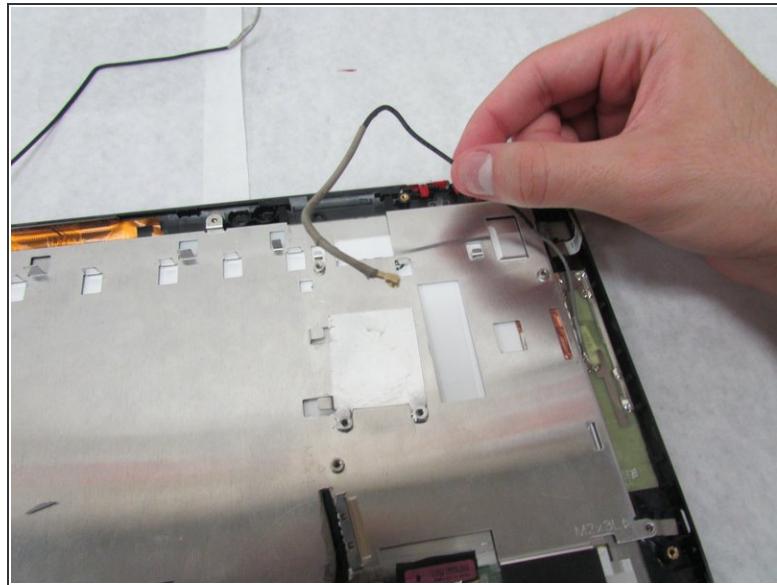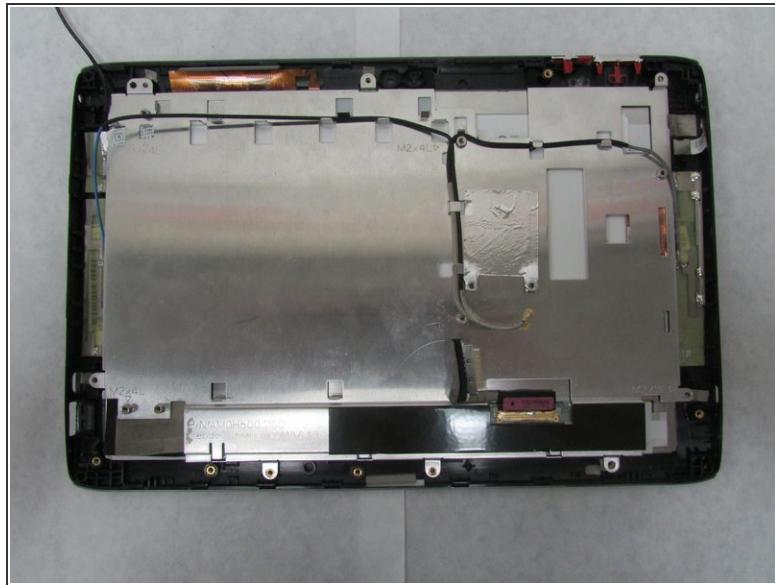


- Move all wires off of the thin, metal plate.

Step 30



- Remove the metal plate.


Step 31

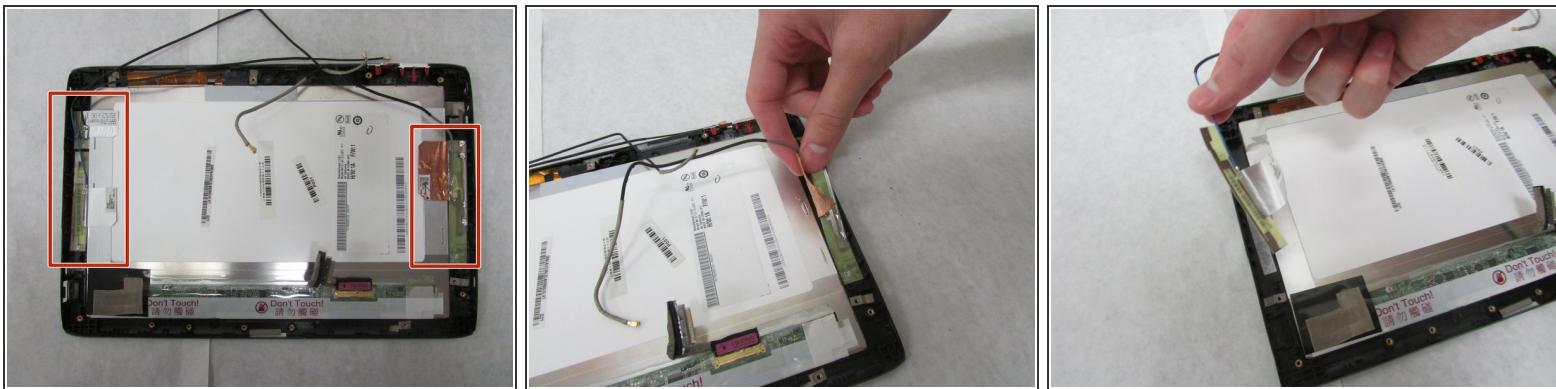

ⓘ The antennae in the next step are attached with adhesive.

- Remove the three antennae along the shorter sides of the device.

Step 32

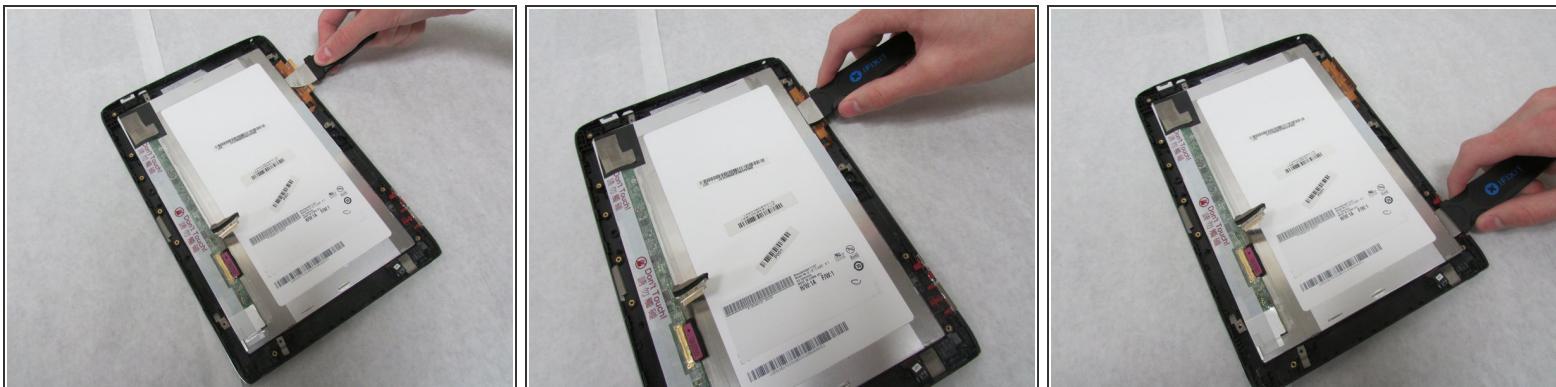

- Carefully insert the Jimmy between the display and the glass to break the glue seal.
- Move the Jimmy all the way around the device.

Step 33



- Continue moving the Jimmy around the device until the glue no longer holds the display in place.
- Remove the display.

To reassemble your device, follow these instructions in reverse order.