


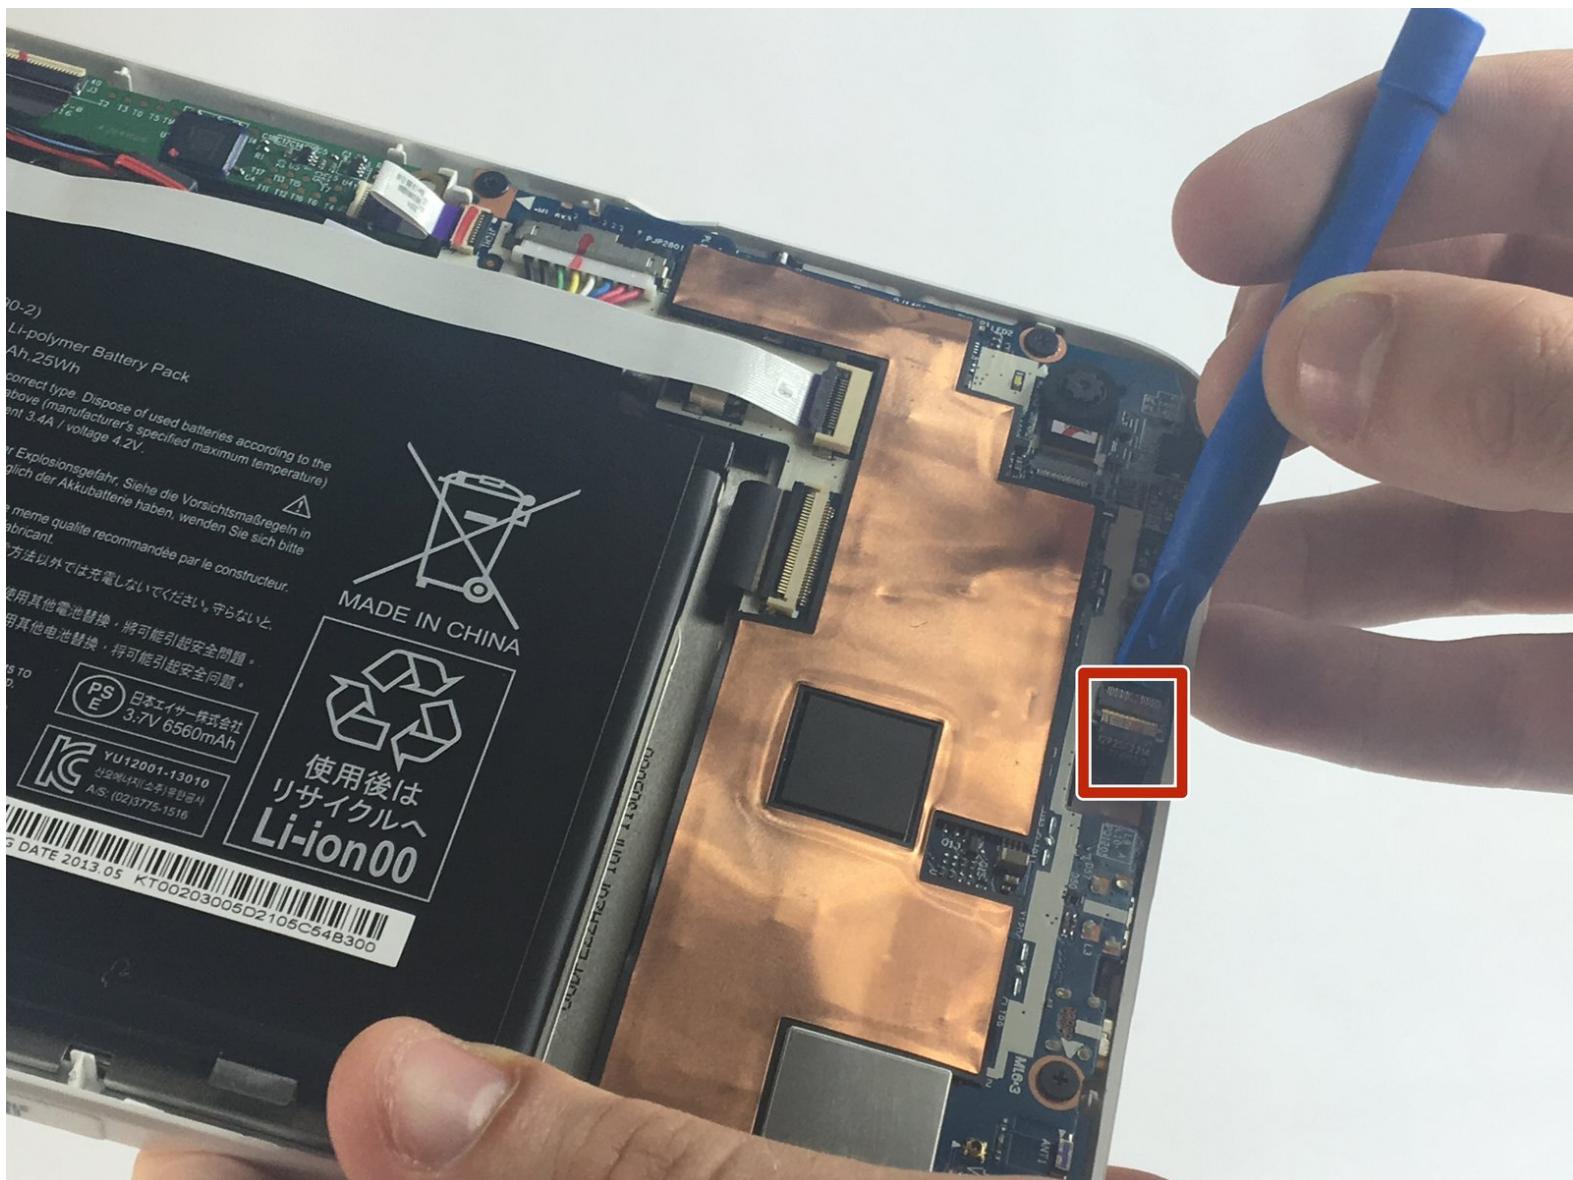

Acer Iconia W3-810 Front Facing Camera

This guide demonstrates how to replace the Front Facing Camera.

Written By: Griffin Hocker



INTRODUCTION

This guide is to be used for replacing the front-facing camera of an Acer Iconia W3-810. This is in case of physical damage or water damage to the camera.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Back Panel



- Place the tablet face down on a flat surface with the charger facing toward you.


Step 2



- Use a plastic opening tool to pry the back panel off of the device.


⚠ Be careful to not use the plastic opening tool near the charging dock or any media ports.

Step 3 — Front Facing Camera

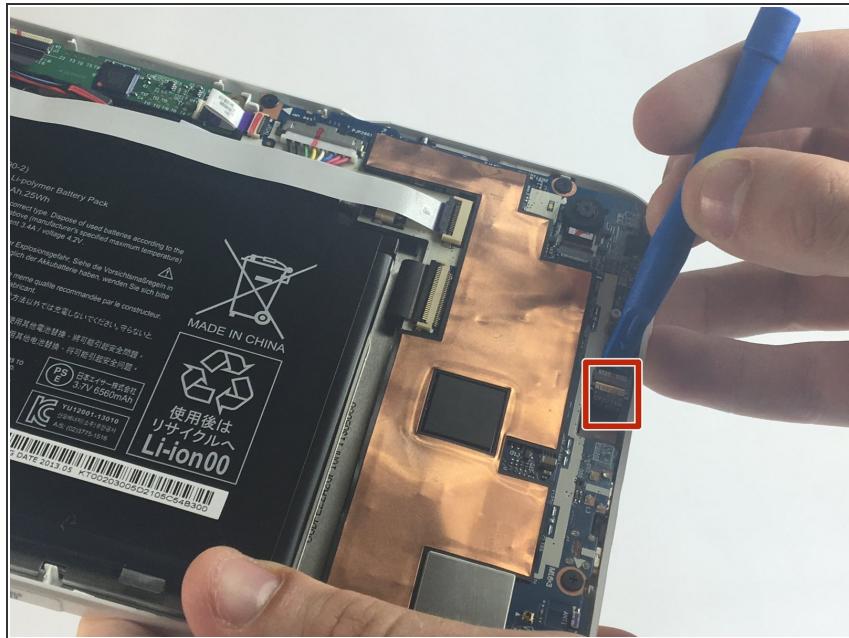


- Loosen the retaining flap connected to the front-facing camera by lifting it with a plastic opening tool.

Step 4

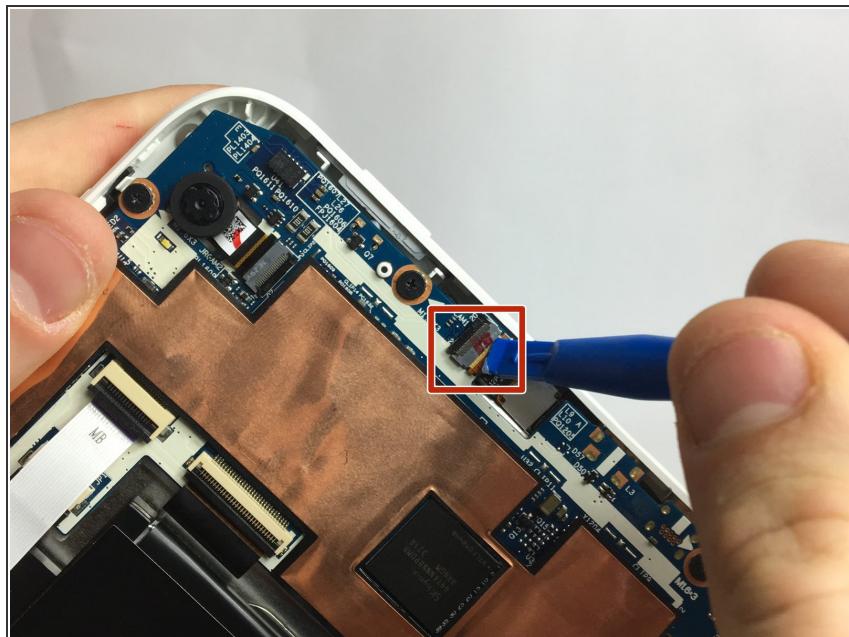

- Remove the ribbon cord from its slot by pushing it out with a plastic opening tool.

Step 5

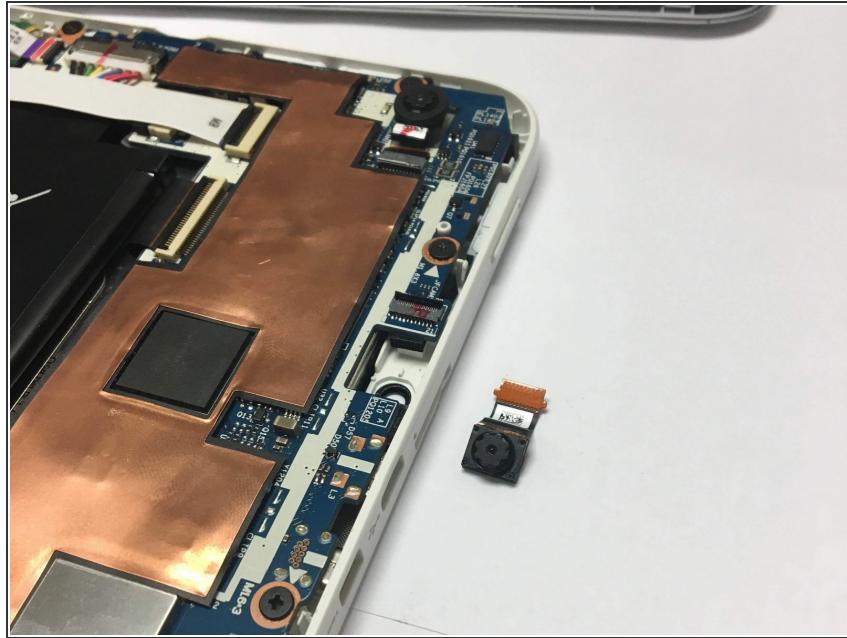

- Simple replacement for another camera.

To reassemble your device, follow these instructions in reverse order.