




Acer Nitro 5 AN515-53-55G9 Battery Replacement

This guide will show how to replace the battery of the Acer Nitro 5 AN515-53-55G9. This will show to disassemble the device as well.

Written By: Gary Ellison

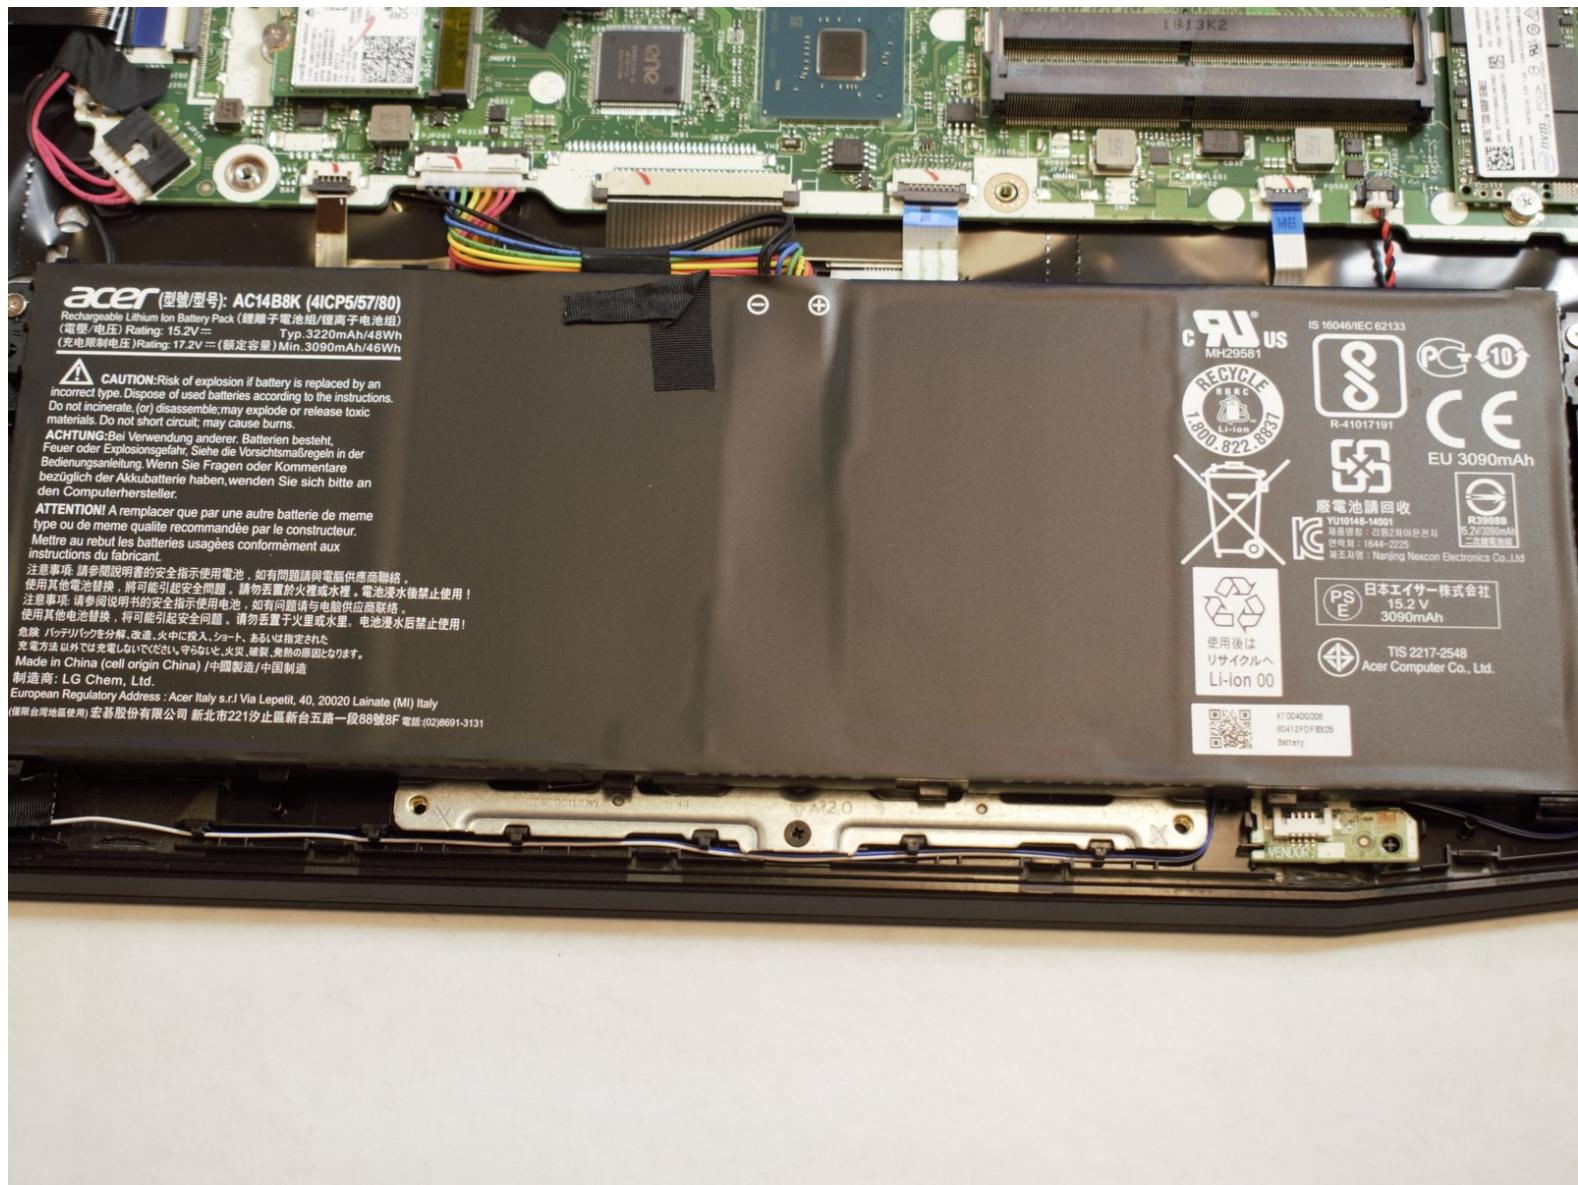

This document was generated on 2019-09-19 07:54:00 AM (MST).

INTRODUCTION

Use this guide to replace the Battery in the Acer Nitro 5 Acer Nitro 5 AN515-53-55G9. This laptop has a 4-cell battery, with this guide you can replace the battery if it is damaged or not working.

TOOLS:

- [Metal Spudger \(1\)](#)
- [Spudger \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Battery



 Make sure laptop is off and unplugged before beginning replacement.

- Flip the laptop upside down so that the bottom is facing up.
- Identify the RAM tray on the bottom of the laptop.

Step 2



- Use the Phillips #0 screwdriver to remove the 9mm screw in the bottom left corner of the RAM tray covering.
- Remove the RAM tray cover by prying up with a spudger.

Step 3



- Identify the Hard Drive tray to the left side of the laptop.
- Remove screw with a #0 Philips screwdriver.
- Lift up the Slot covering using a spudger.

Step 4



- Use the Phillips #0 screwdriver to remove the 9mm screws holding the back cover in place.


Step 5



- Carefully remove the back shell from the device working your way around all the edges.

 Do not forcefully try to separate the shell as you may cause harm to the shell.

Step 6

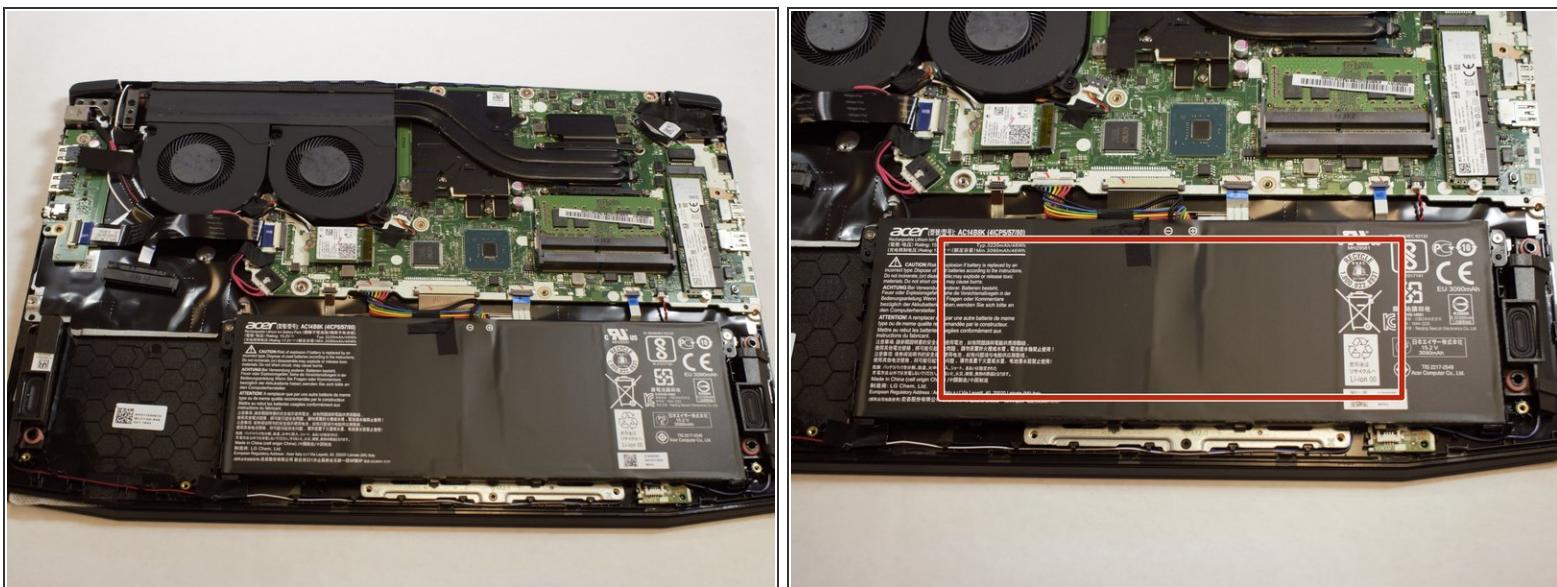


- Removing the back shell of the computer and it will look like this.
- The battery for the device is located at the bottom middle of the laptop at this orientation.

Step 7



- Locate the connector of the battery to the motherboard.
- Using your fingers, slide out the connector.

Step 8

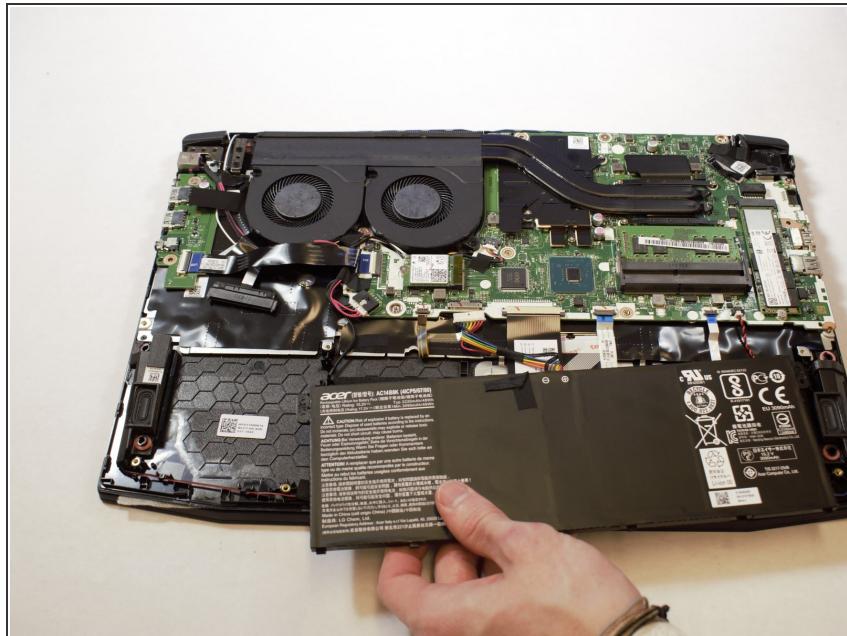

- Remove battery from device.

To reassemble your device, follow these instructions in reverse order.