



# Acer One 10 S1003-114M Screen Hinge Replacement

Shows how to remove the screen hinge from the keyboard of your Acer One 10 S1003-114M.

Written By: Justin Bawinkel




## INTRODUCTION

This guide will walk you through the steps necessary to replace your screen hinge. There are multiple small screws and delicate parts, so take your time and stay organized.

### TOOLS:

- [Magnetic Project Mat \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — Screen Hinge

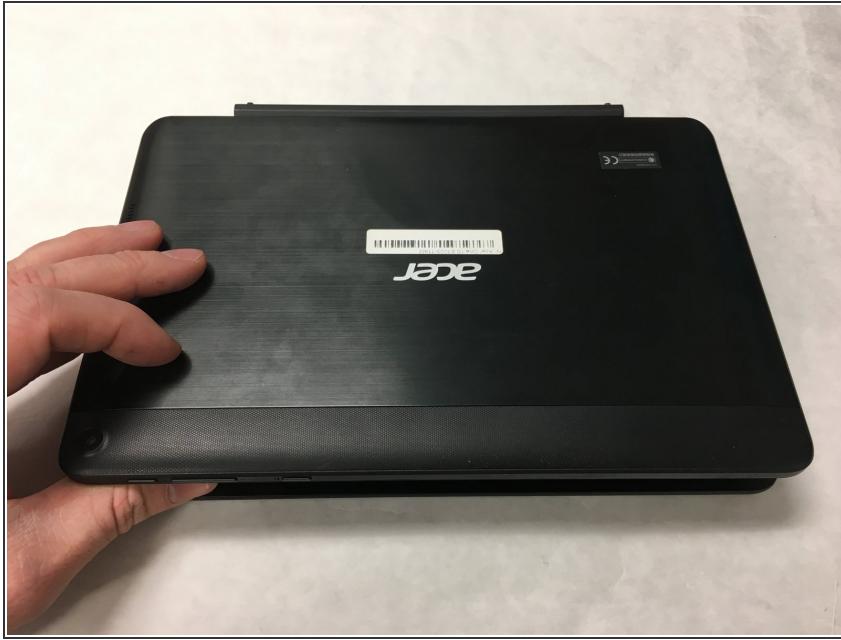

- Open the screen.

## Step 2



- Remove the screen portion from the keyboard.

## Step 3



- Turn over the keyboard and use the plastic opening tool to remove the two adhesive backed rubber pads furthest from the hinge.

## Step 4



- Remove the ten total screws from the back cover with a Phillips #1 screwdriver.
  - 8 screws 4.25mm in length with 4.00mm diameter heads.
  - 2 screws 6.00mm in length with 4.00mm diameter heads.

## Step 5





- Use the plastic opening tool to separate the front and back halves of the keyboard.

## Step 6





- Lift away the loosened back cover.

## Step 7

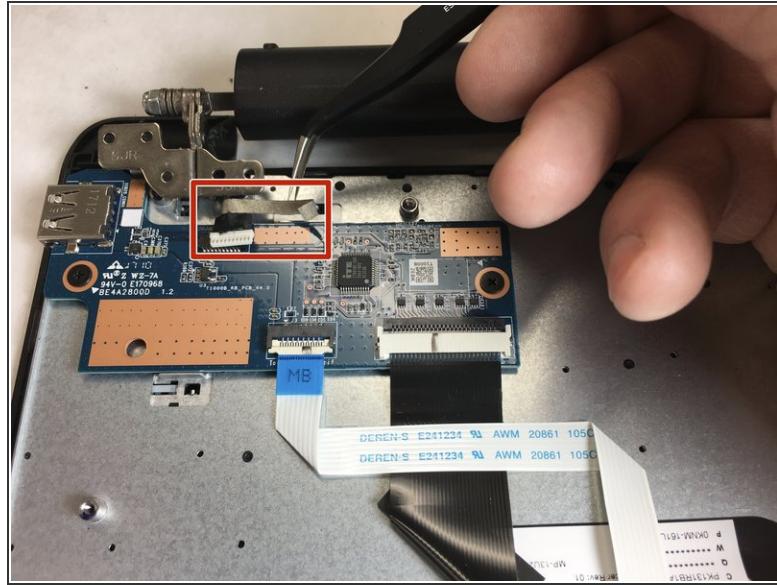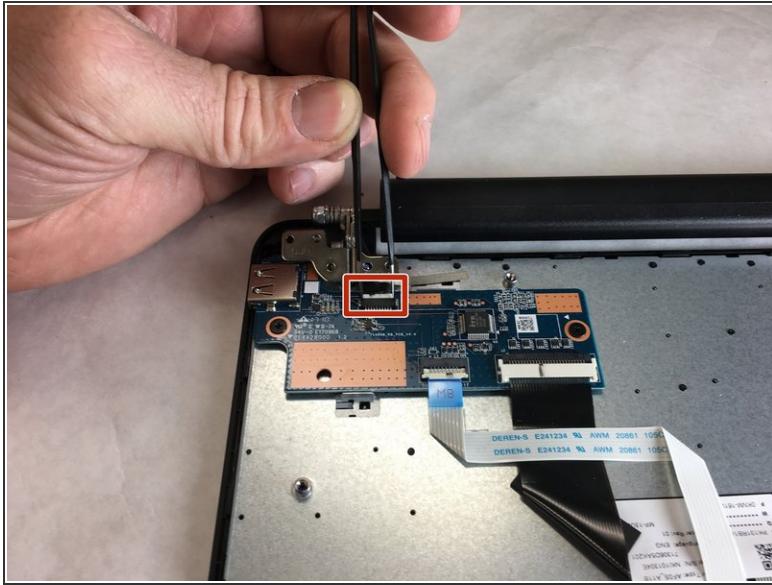


- Use a pair of tweezers to remove the electrical connector for the hinge. Pull gently while wiggling the connector back and forth.
- Remove the adhesive tape holding the wire down.

## Step 8

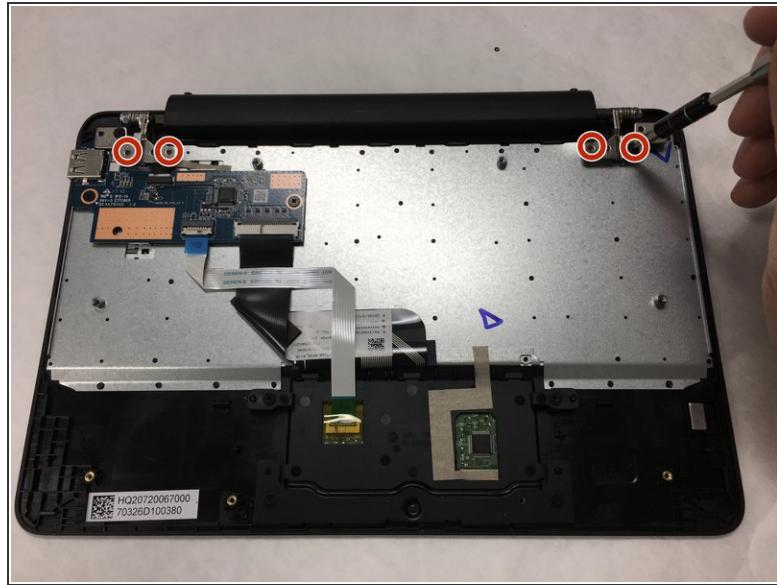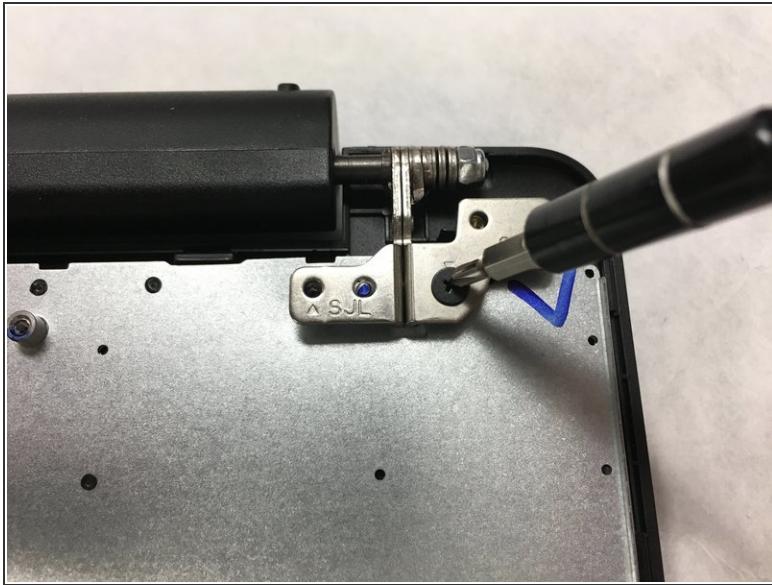

- To free the hinge, remove the 4 mount screws with a Phillips #0 screwdriver.

## Step 9

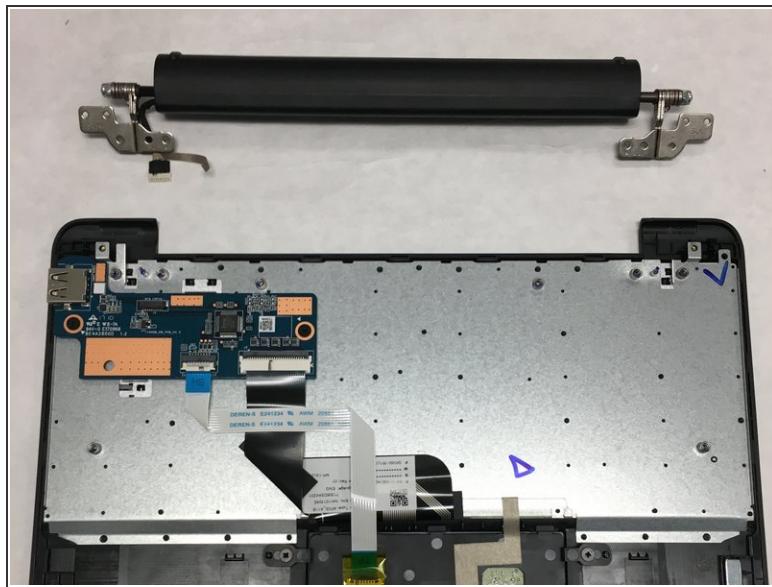

- Remove the disconnected hinge from the keyboard.

To reassemble your device, follow these instructions in reverse order.