



# Acer One 10 S1003-19GY Keyboard Ribbon/Dock Repair

This guide will provide a fix for a nonresponsive keyboard for your Acer One S1003-19GY.

Written By: Trey Wintzinger



## INTRODUCTION

The keyboard dock and ribbon will be removed in this guide.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Back Panel




- Power off the device and make sure it is disconnected from any external devices.
- Use a plastic opening tool to create a gap between the front and back casing of the device.
- Slowly maneuver the plastic tool around the entire perimeter of the tablet to separate the front and back.

## Step 2




- Set the device screen side down and remove the back casing.

## Step 3 — Keyboard Ribbon/Dock

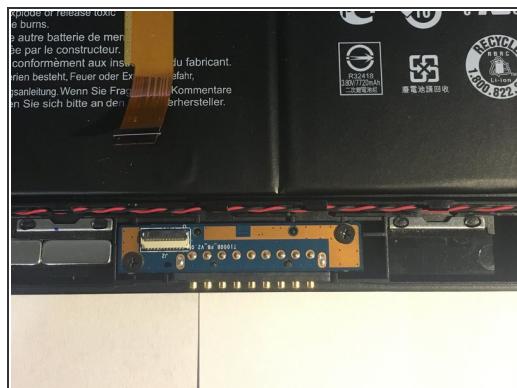

- Flip the latch and carefully pull the ribbon free.

## Step 4

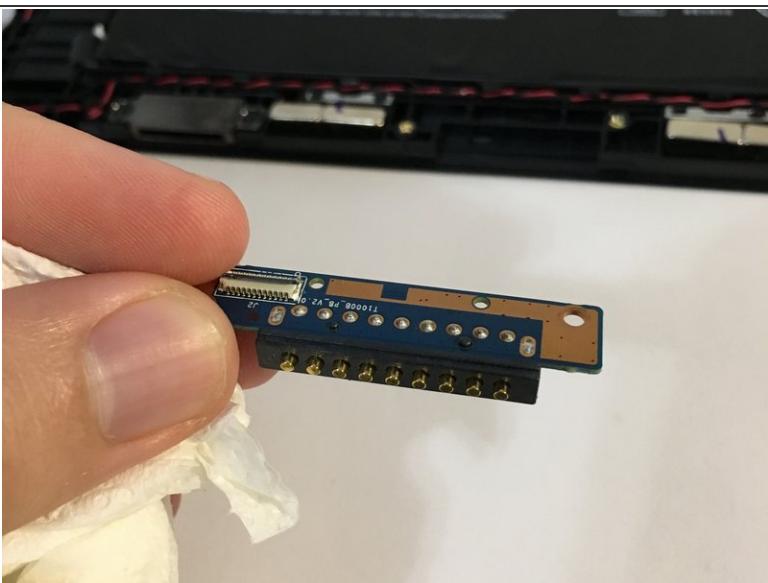

- Remove the two screws holding the dock in place using a Phillips #0 screwdriver.
- Pull the dock out and slide it out of the device.

To reassemble your device, follow these instructions in reverse order.