



Acer One 10 S1003-19GY Speaker Replacement

This guide will show you how to successfully replace a damaged speakers for your Acer One 10 S1003-19GY.

Written By: Nuha Alshaibani



This document was generated on 2020-01-19 01:47:04 PM (MST).

INTRODUCTION

If your Acer One 10 S1003-19GY isn't producing clear audio—distorted, intermittent, or no sound—through its speakers, use this guide to replace them. Before beginning, make sure to power off your phone completely and disconnect from any external power source.

TOOLS:

- [Halberd Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Speaker



- Power off the device and make sure it is disconnected from any external devices.
- Use a plastic opening tool to create a gap between the front and back casing of the device.
- Slowly maneuver the plastic tool around the entire perimeter of the tablet to separate the front and back.

Step 2



- Set the device screen side down and remove the back casing.

Step 3




- Flip the latch and carefully pull the ribbon free.

Step 4



- Use the Halberd Spudger to pry the speakers out.

Step 5

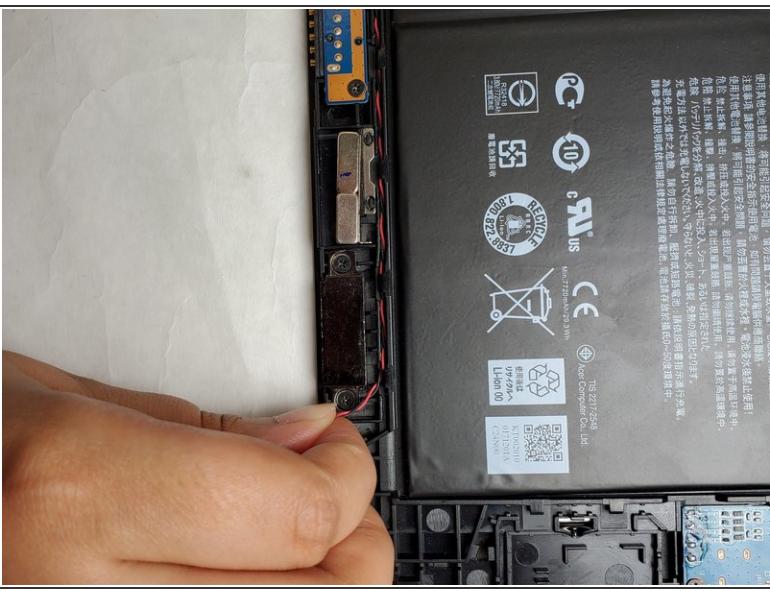

- Pull the wires carefully and remove the speakers from the device.

To reassemble your device, follow these instructions in reverse order.