



Acer Spin 5 N17W2 Battery Replacement

Use this guide to replace the battery in your Acer Spin 5 N17W2.

Written By: He Kai



INTRODUCTION

A **battery** is a device consisting of one or more electrochemical cells with external connections provided to power the laptop. Battery can have problems during its lifespan, such as self-discharge, corrosion, overcharging, memory effect. If your laptop run out of battery quickly, it is possible that the battery having some problems. In this case, you might want to take off and replace your laptop battery. This manual shows you the steps to replace the battery!

TOOLS:


- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Remove the twelve screws on the back cover using the Phillips #1 screwdriver.

Step 2

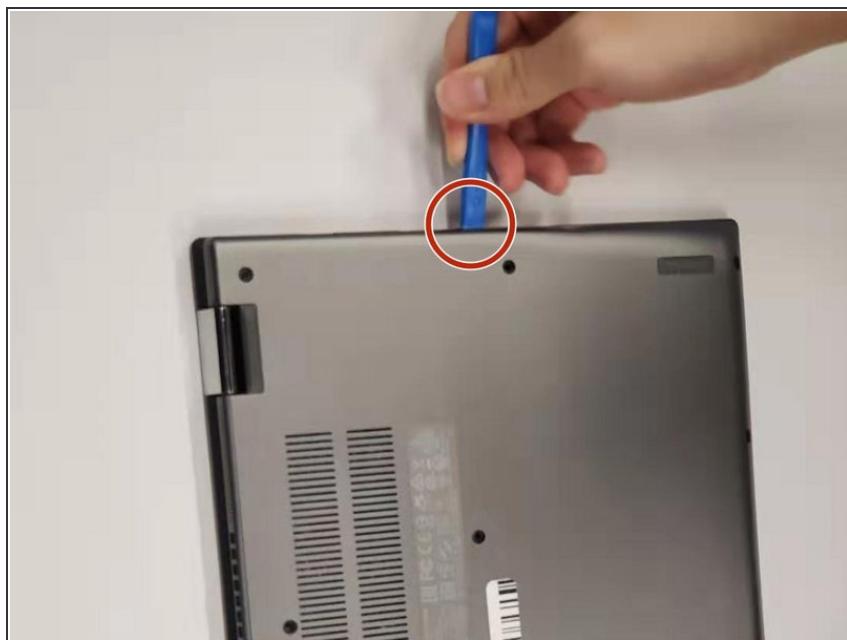


- Use an opening tool to pry the back cover open.

Step 3




- Remove two 4 mm screws at the two corners of the battery using the Phillips #1 screwdriver.

Step 4

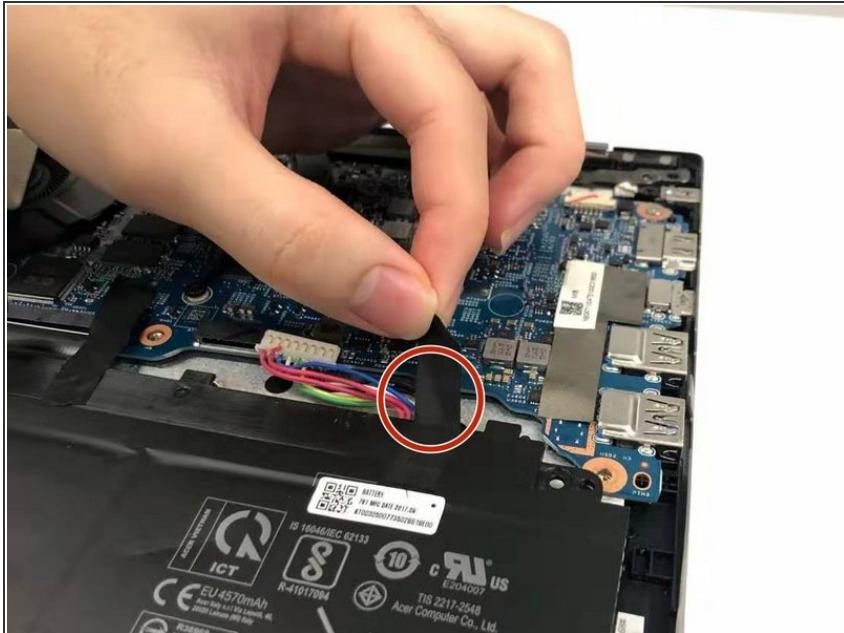


- Carefully remove the three tapes on the battery.

Step 5

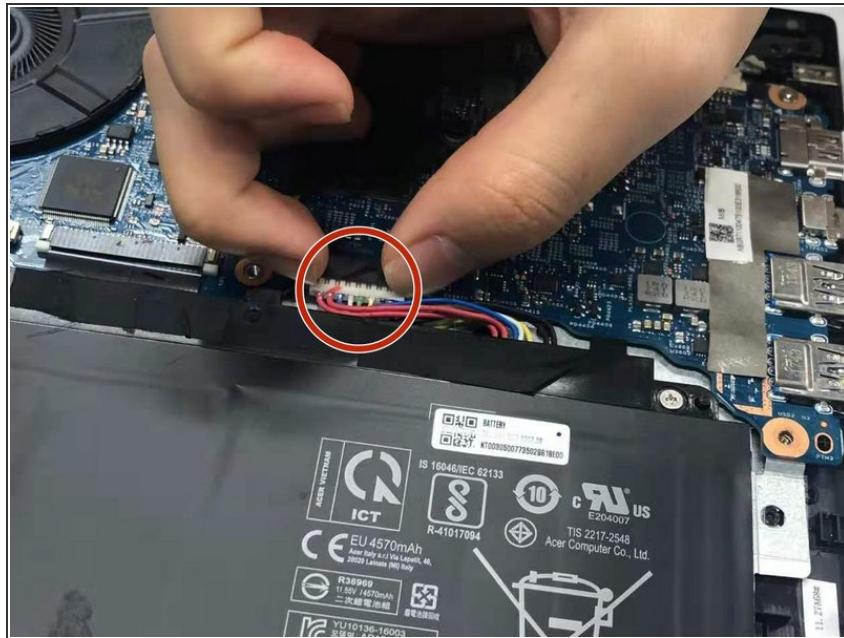

- Carefully disconnect the wire between battery and motherboard.

Step 6

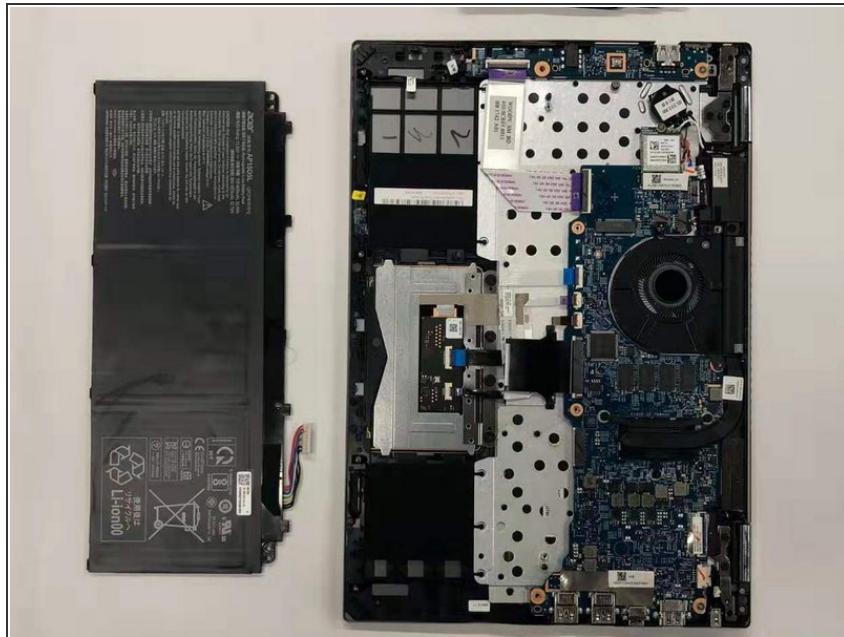

- Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.