



Acer Spin 5 N17W2 Cooling Fan Replacement

Use this guide to replace the cooling fan in your Acer Spin 5 N17W2.

Written By: YUJIE WANG




INTRODUCTION

A cooling fan consists of a rotating arrangement of vanes or blades which act on the air to blow away the heat to cool down the device. If your laptop is overheating or the system noticed you the cooling fan is not functioning properly, you might need to replace your cooling fan. This manual guide is helping you to fix the cooling fan!

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (2)

Step 1 — Cooling Fan

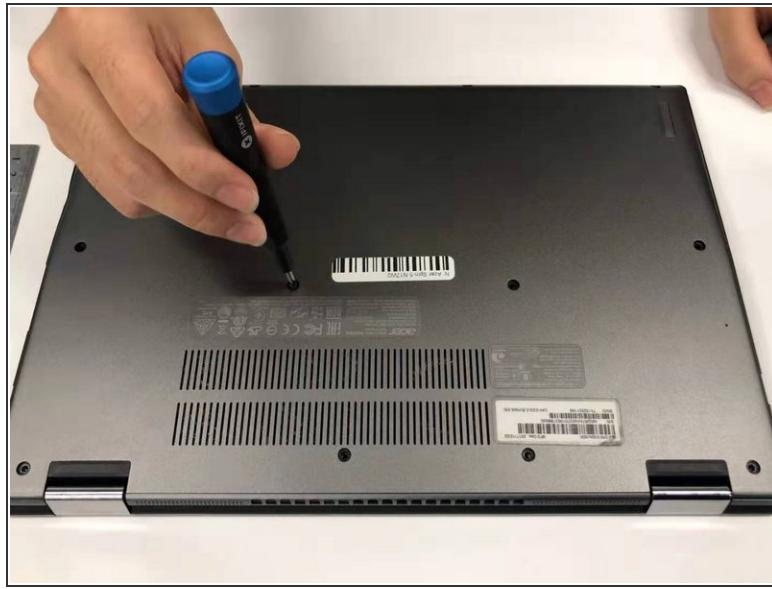

- Use the Phillips #1 screwdriver to remove six 6 mm screws.
- Use the same screwdriver to remove six 5mm screws.

Step 2

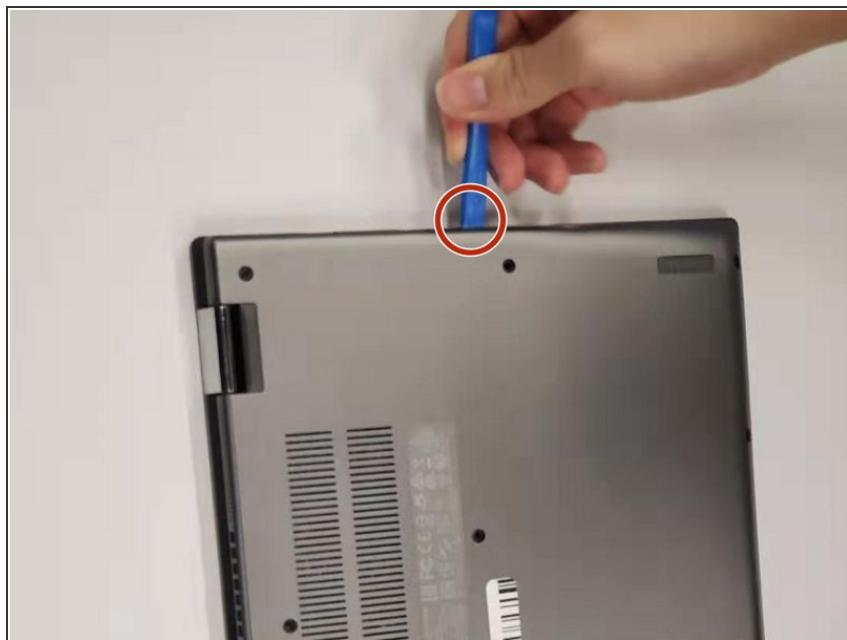

- Use an opening tool to pry the back cover open.

Step 3



- Remove two 5 mm screws by using the Phillips #1 screwdriver.

Step 4



- Use two opening tools to disconnect the cooling fan from the motherboard.
- Remove the fan from the device.

To reassemble your device, follow these instructions in reverse order.