



# Acer Spin 5 N17W2 Screen Assembly Replacement

Use this guide to remove the screen from the Acer Spin 5 N17W2.

Written By: YUJIE WANG



## INTRODUCTION

If the screen is malfunctioning or broken which means the screen has to be replaced . During the process of removing a screen, users should be very careful about the cracked screen.

### TOOLS:


- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Screen Assembly



- Use the Phillips #1 screwdriver to remove the six 6mm screws.
- Use Phillips #1 screwdriver to remove six 5mm screws.

## Step 2

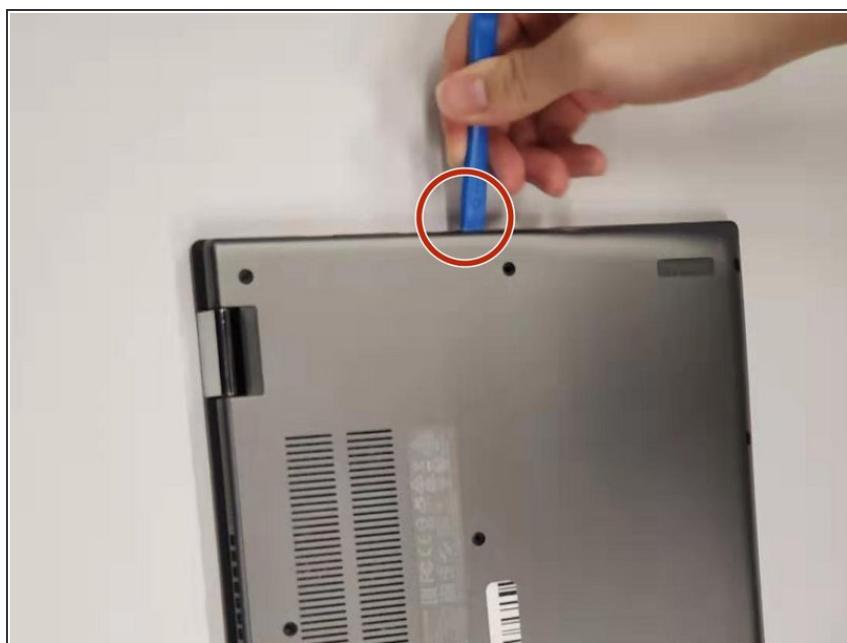

- Use an opening tool to pry the back cover open.

## Step 3




- Use the Phillips #1 screwdriver to remove the three 5mm screws.
- Use the Phillips #1 screwdriver to remove the three 5mm screws on another side of hinge.

## Step 4




- Disconnect chips from the two end side of hinge.

## Step 5

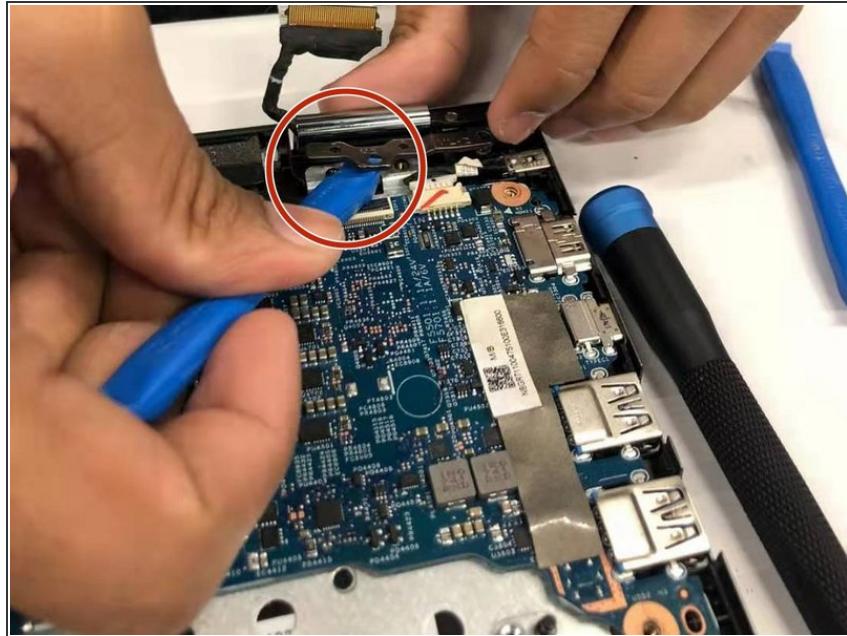


- Use the plastic opening tool to pry the hinge up.

## Step 6

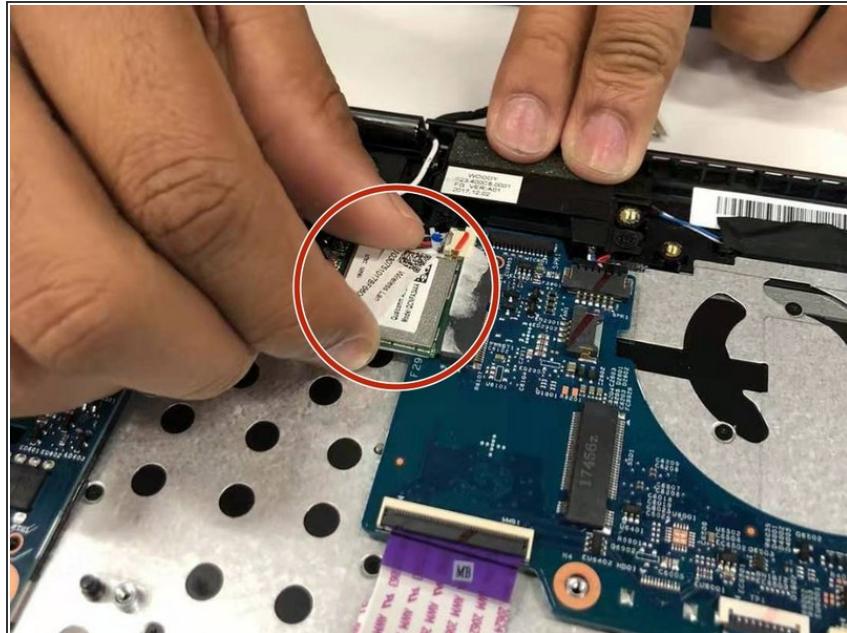

- Remove the wireless LAN chip from the motherboard.

## Step 7

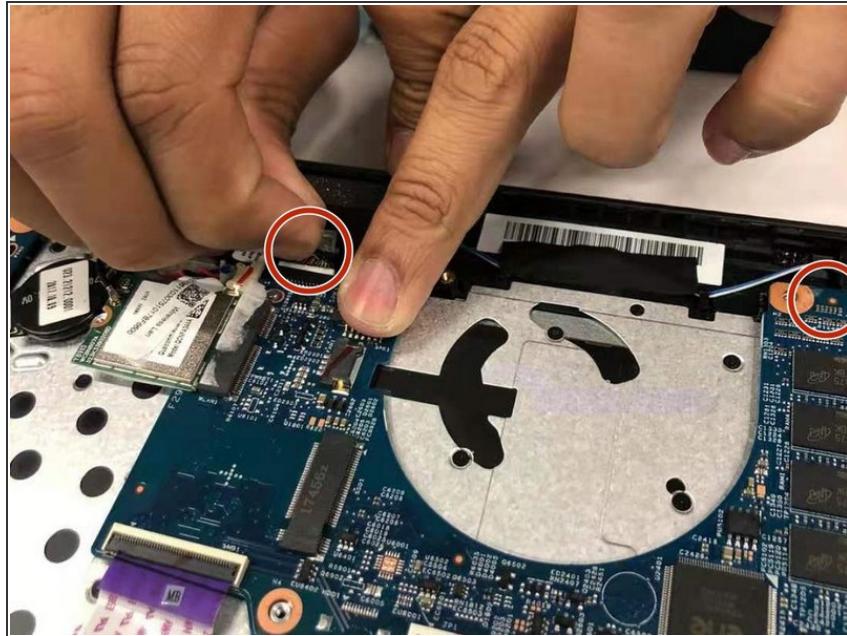

- Detach the sensors on each side of the hinge from the motherboard.

## Step 8



- Detach the screen assembly from the device.

To reassemble your device, follow these instructions in reverse order.