



Acer TravelMate TMB115-M-C99B Screen Replacement

How to replace the Acer TravelMate TMB115-M-C99B screen.

Written By: Melissa Martinez



INTRODUCTION

If your laptop screen is consistently freezing or completely unresponsive, use this guide to remove and replace the screen.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Magnetic Project Mat \(1\)](#)
- [Metal Spudger \(1\)](#)

Step 1 — Battery

 Turn off your laptop before starting.

- Flip the laptop over so the model stickers face the ceiling.



Step 2



- Remove the thirteen 6mm Phillips screws using the #0 screwdriver.
- Remove the back of the laptop.

Step 3



- Remove the two 7mm Phillips screws from the battery using the #0 screwdriver.

Step 4



- Unplug the battery from the motherboard.

Step 5 — Screen




- Use the metal spudger to pry open the front plastic cover of the screen.

Step 6



- Take off the front plastic cover then remove four 6mm Phillips screws using the #0 screwdriver.

Step 7

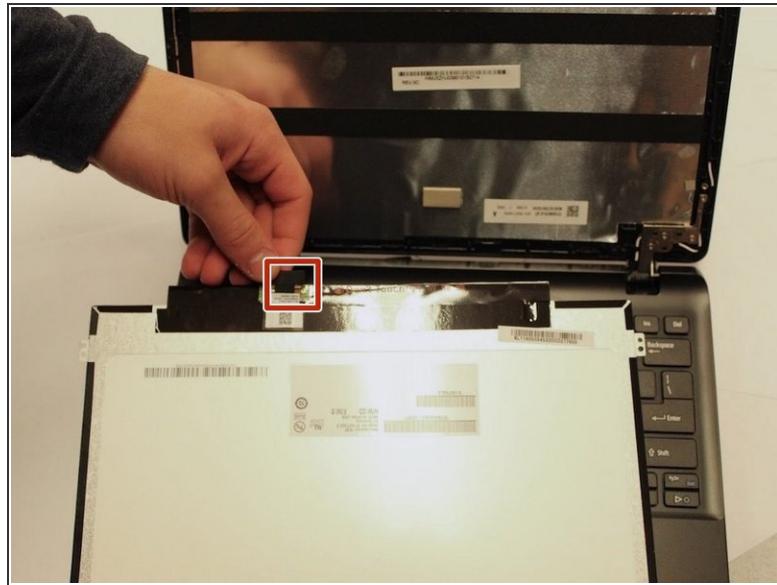

- Flip the screen and disconnect the port.

Step 8



- Remove the screen.

To reassemble your device, follow these instructions in reverse order.