




AcuRite 02032 Wind Vane Replacement

Replacing the wing like fan at the bottom of the weather machine.

Written By: Ben Kegel

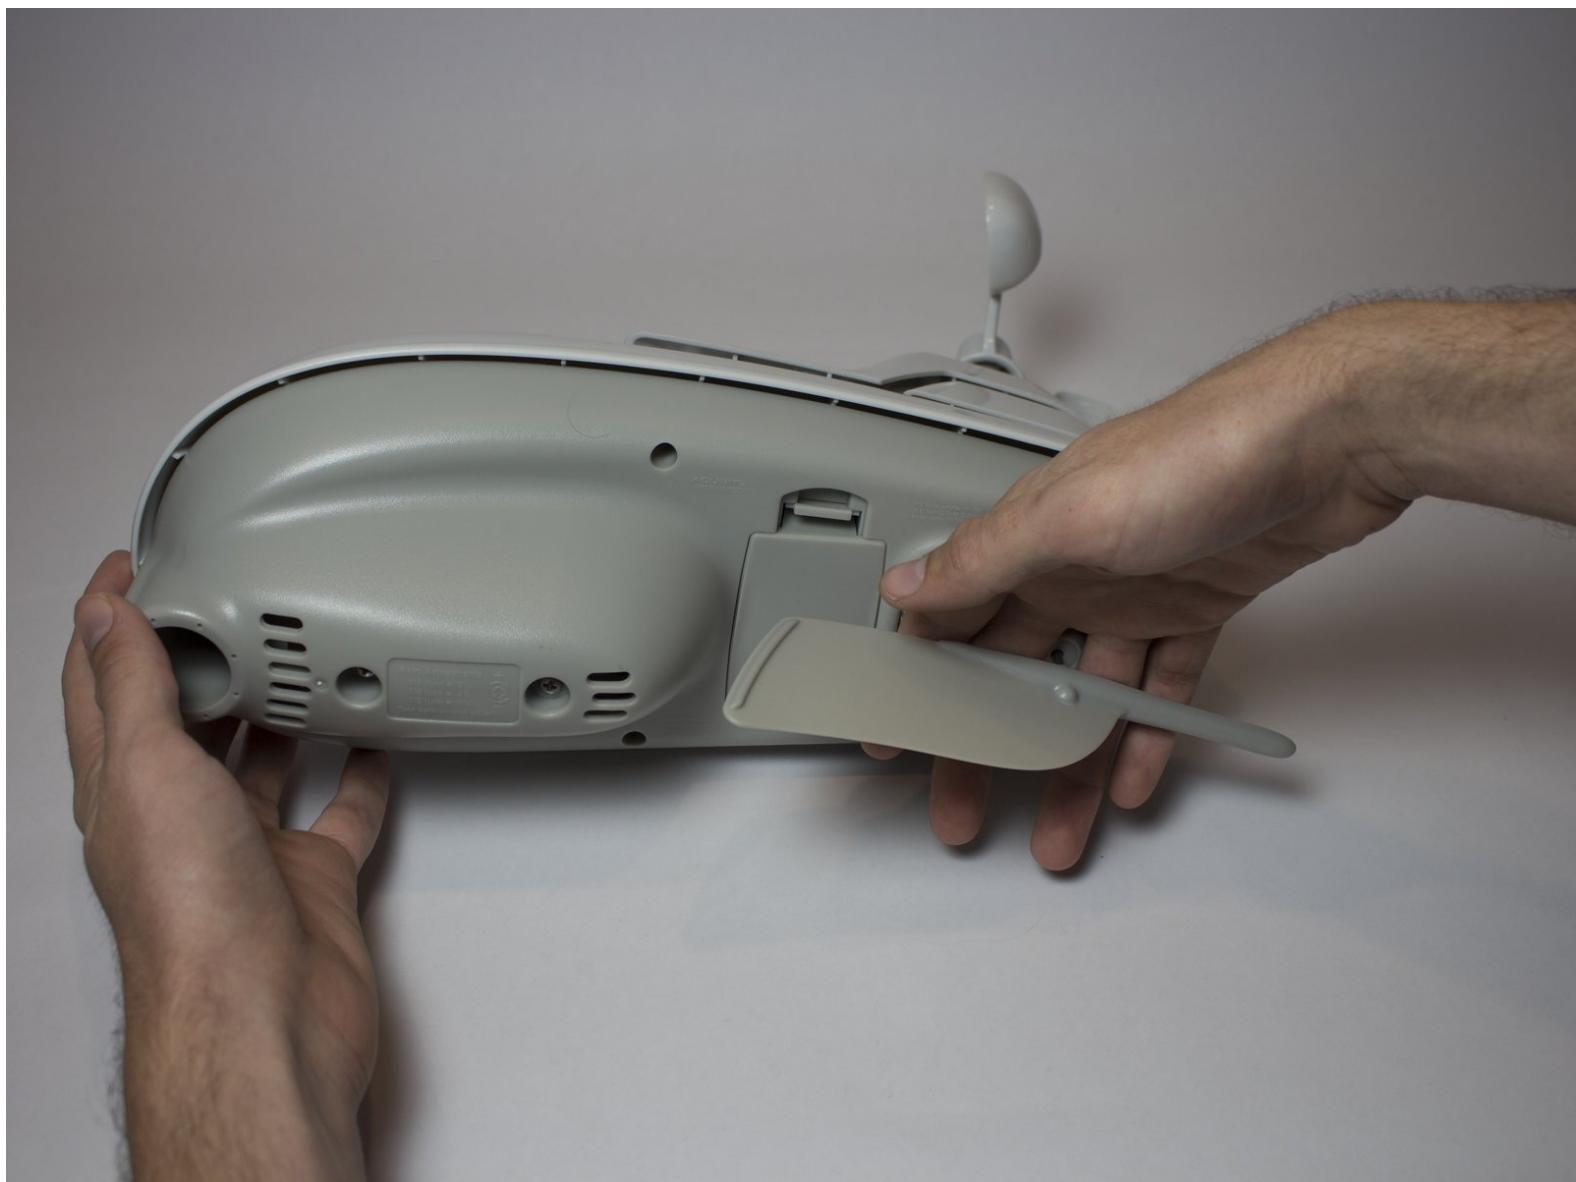

Step 1 — Battery



- Remove the battery compartment lid by lifting upward.

Step 2



- Pull the ribbon to eject the 2 X AA alkaline batteries.

Step 3



- Once the batteries are removed, it is safe to proceed.

Step 4 — Wind Vane



- Firmly grasp the windvane with one hand and the rest of the device with the other hand.
- Pull straight outwards. A quick yank with force should be enough to remove the propeller.

Step 5



- To reattach the replacement wind vane, line up the small notch in the socket where the pieces fit together then carefully push the parts together.

To reassemble your device, follow these instructions in reverse order.