



# Afridev Axle and Handle Replacement

Replace an Afridev axle and handle.

Written By: Jake Devincenzi



## INTRODUCTION

This guide will show you how to remove both the axle and the handle, so that you can replace either one or both.

### TOOLS:

- **Socket Wrench (1)**
- **24mm Wrench (1)**
- **19 mm crescent wrench (1)**
- **T-Handle (1)**

## Step 1 — Head



- Assemble the required tools, including the Afridev tool and crescent wrenches.

## Step 2



- Perform a water test on the pump, by raising and lowering the handle a full 40 strokes. A properly performing pump will yield greater than 10 liters.

## Step 3



- Loosen the bolt on front of the face plate with the Afridev tool.
- Remove the plate from the pump by lifting it straight up.

## Step 4 — Axle and Handle



- Insert the T-handle into the top cylinder of the exposed pump rod.

## Step 5



- Loosen the 2 bolts on either side of handle.

*(i)* It is not necessary to remove the bolt at this time; however, take caution to not let the bolt fall out of the handle.

## Step 6



- Loosen the 2 bolts on either side of the head to remove the handle from the pump rod.

*(i)* It is not necessary to remove the bolt at this time; however, take caution to not let the bolt fall out of the handle.

## Step 7



- Lift the handle to a horizontal position.

## Step 8



- While one person lifts up on the T-handle, remove the bolt and connection pieces.

## Step 9



- Remove the bolt and connection pieces from the handle.
- ⓘ Set the bolt pieces in a sanitary place, such as a bucket, to prevent contamination.

## Step 10



- Remove the handle from the pump.
- ⓘ Be sure to set the handle in a sanitary place to prevent contamination.

To reassemble your device, follow these instructions in reverse order.