


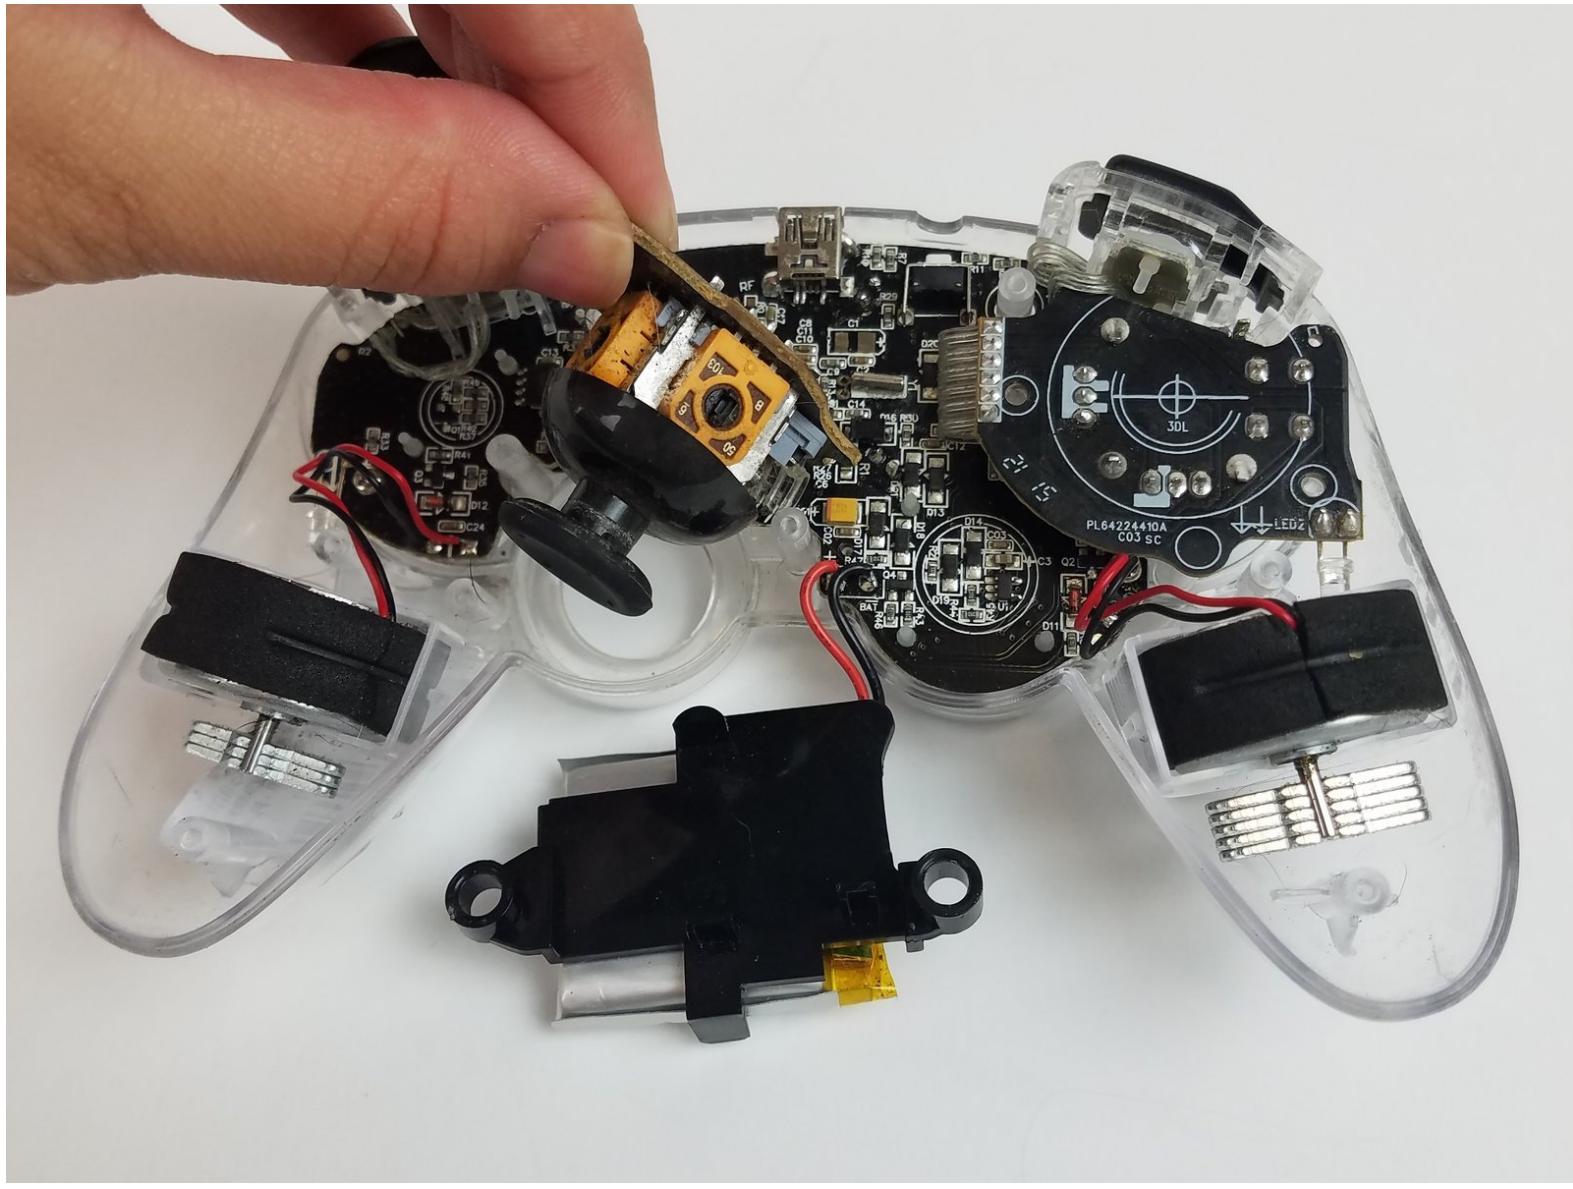

# Afterglow Wireless PS3 Controller Joystick Replacement

This guide will show how to replace the black plastic joysticks for the Afterglow Wireless PS3 Controller.

Written By: Aj Coello



This document was generated on 2019-09-17 07:05:10 PM (MST).


## INTRODUCTION

In order to replace the joysticks for the Afterglow Wireless PS3 Controller the back plate must be removed and the joystick boards must be unscrewed.

### TOOLS:


- Phillips #0 Screwdriver (1)

## Step 1 — Back Cover

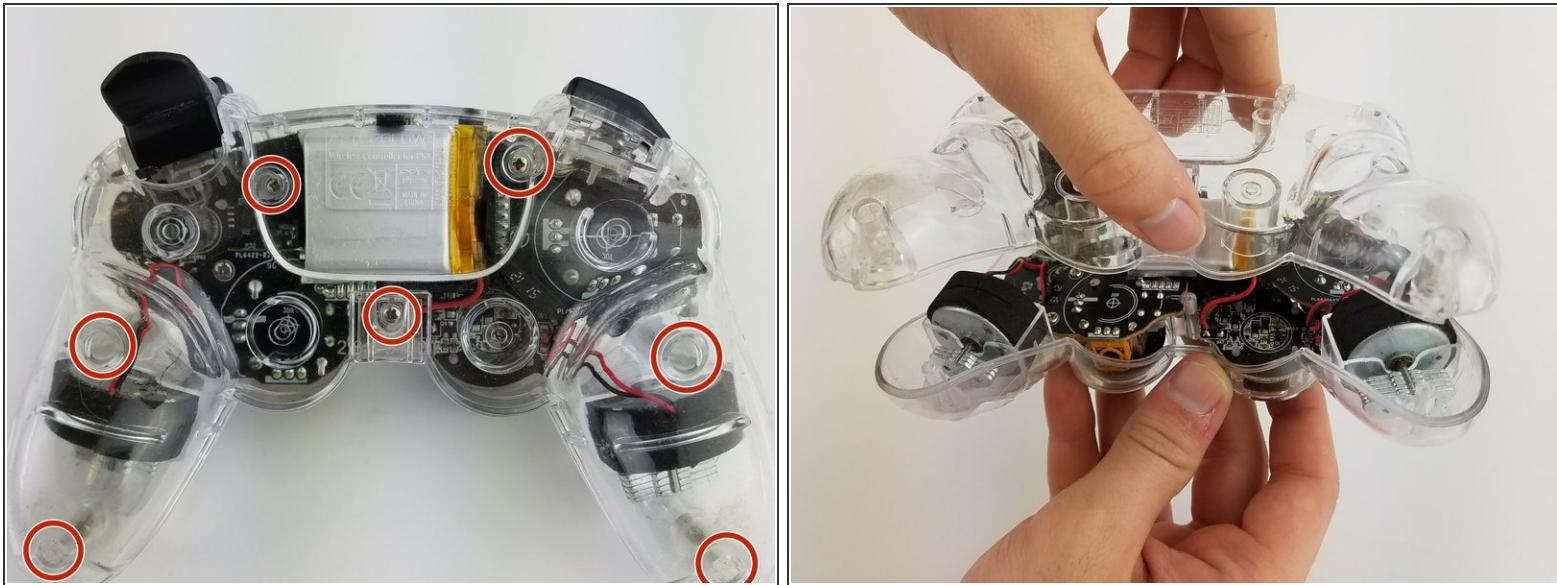

- Lay the controller face down on a flat surface and remove the seven 9mm Phillips #0 screws on the back of the controller.
- Lift up and remove the controller back plate.


## Step 2 — Joystick

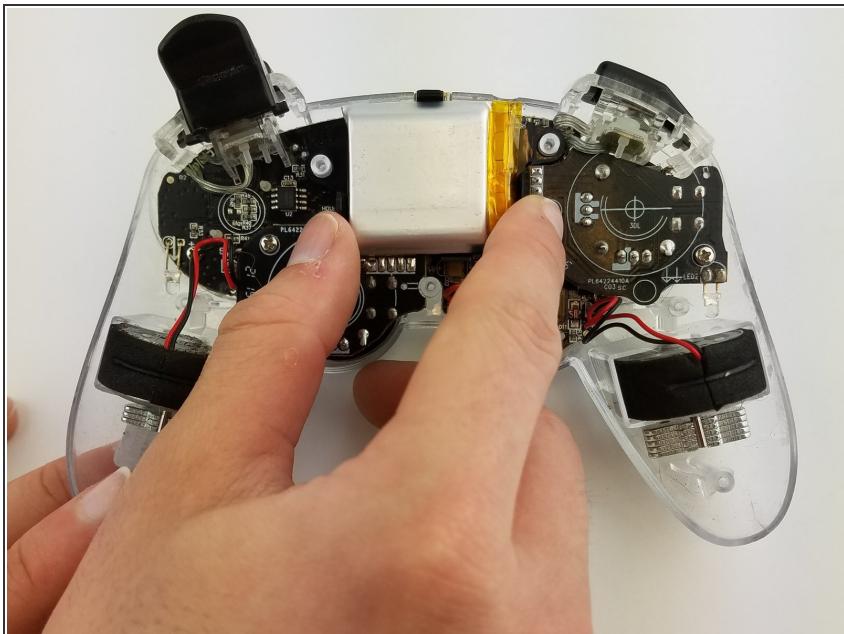

- Carefully remove the battery by lifting it straight up from its place.



**⚠** Keep in mind that the red and black battery wires are attached to the motherboard. Handle these with care.

## Step 3

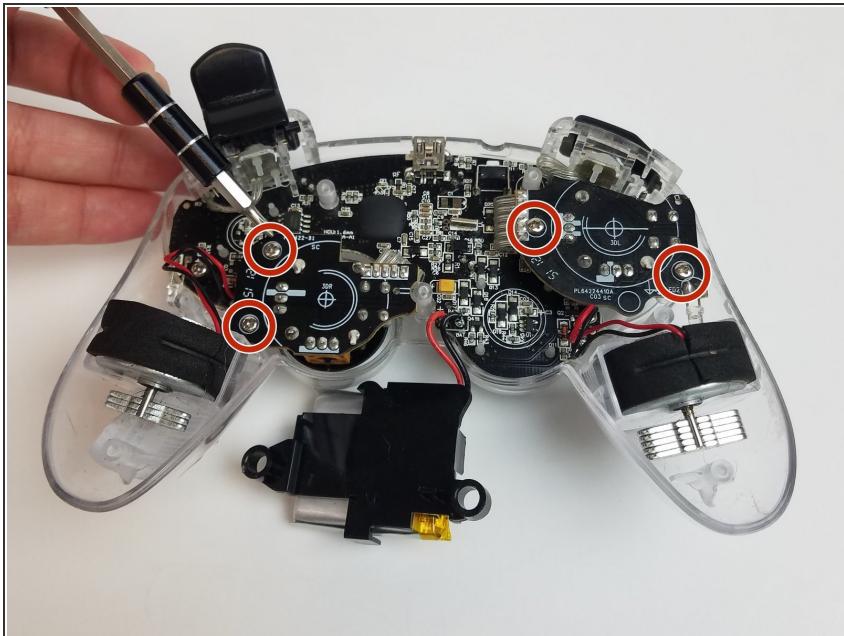


- Unscrew the four 9mm Phillips #0 screws that are attached to both joy stick control mini-motherboards. There are two screws for each mini-motherboard.

## Step 4

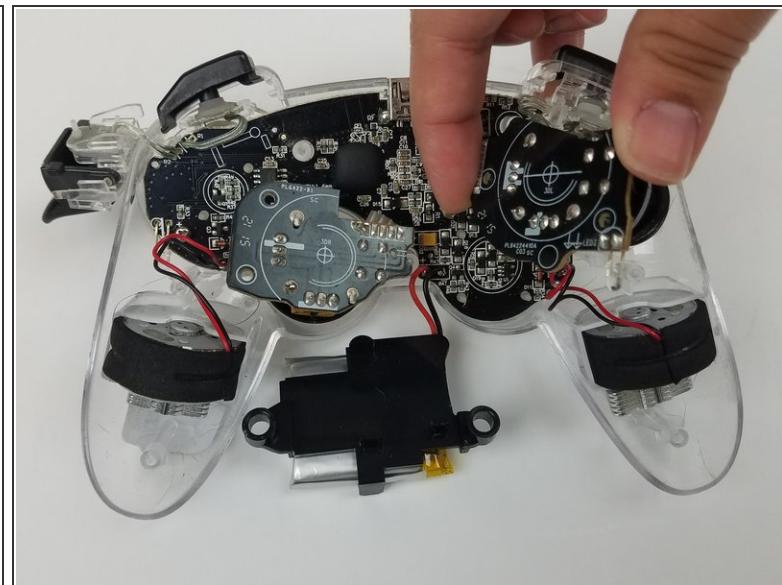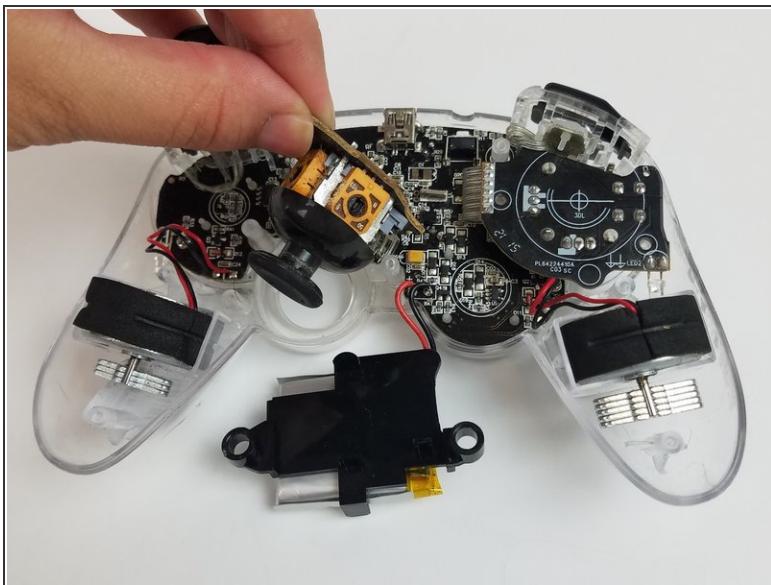

- Jiggle both joy stick control mini-motherboards out of their holding place.

## Step 5

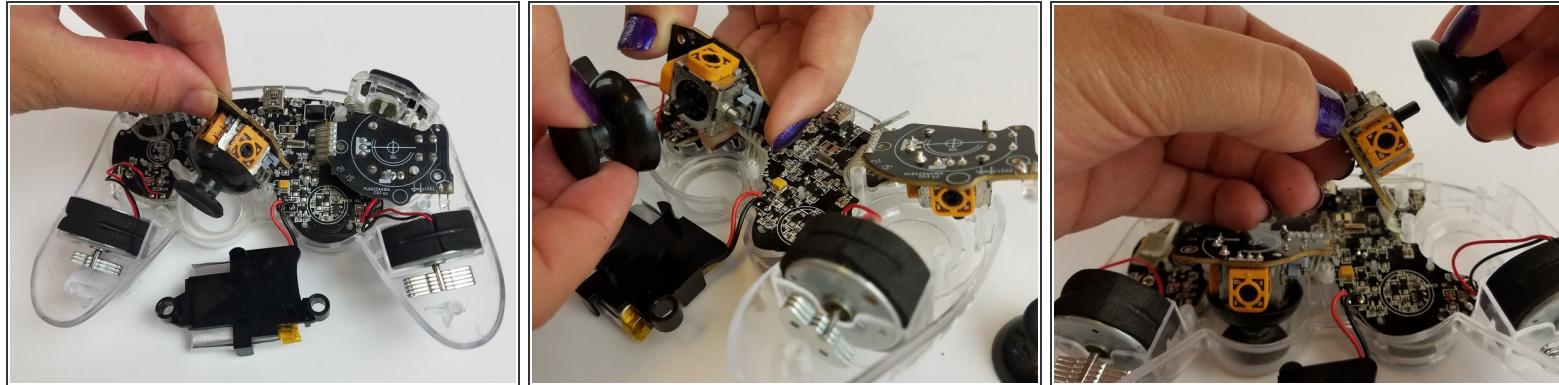

- Firmly grip the joystick housing with your forefingers by the yellow squares.
- Use your other hand to get a grip on the black plastic joystick and pull directly away from the housing.

**i** This will take some force to remove.

**!** Try not to use the motherboard for leverage because it is delicate.

To reassemble your device, follow these instructions in reverse order.