




Afterglow Wireless PS3 Controller Vibration Motor Replacement

This guide will show the steps in replacing the vibration motors in a PS3 Wireless Afterglow Controller.

Written By: Natalie Cox

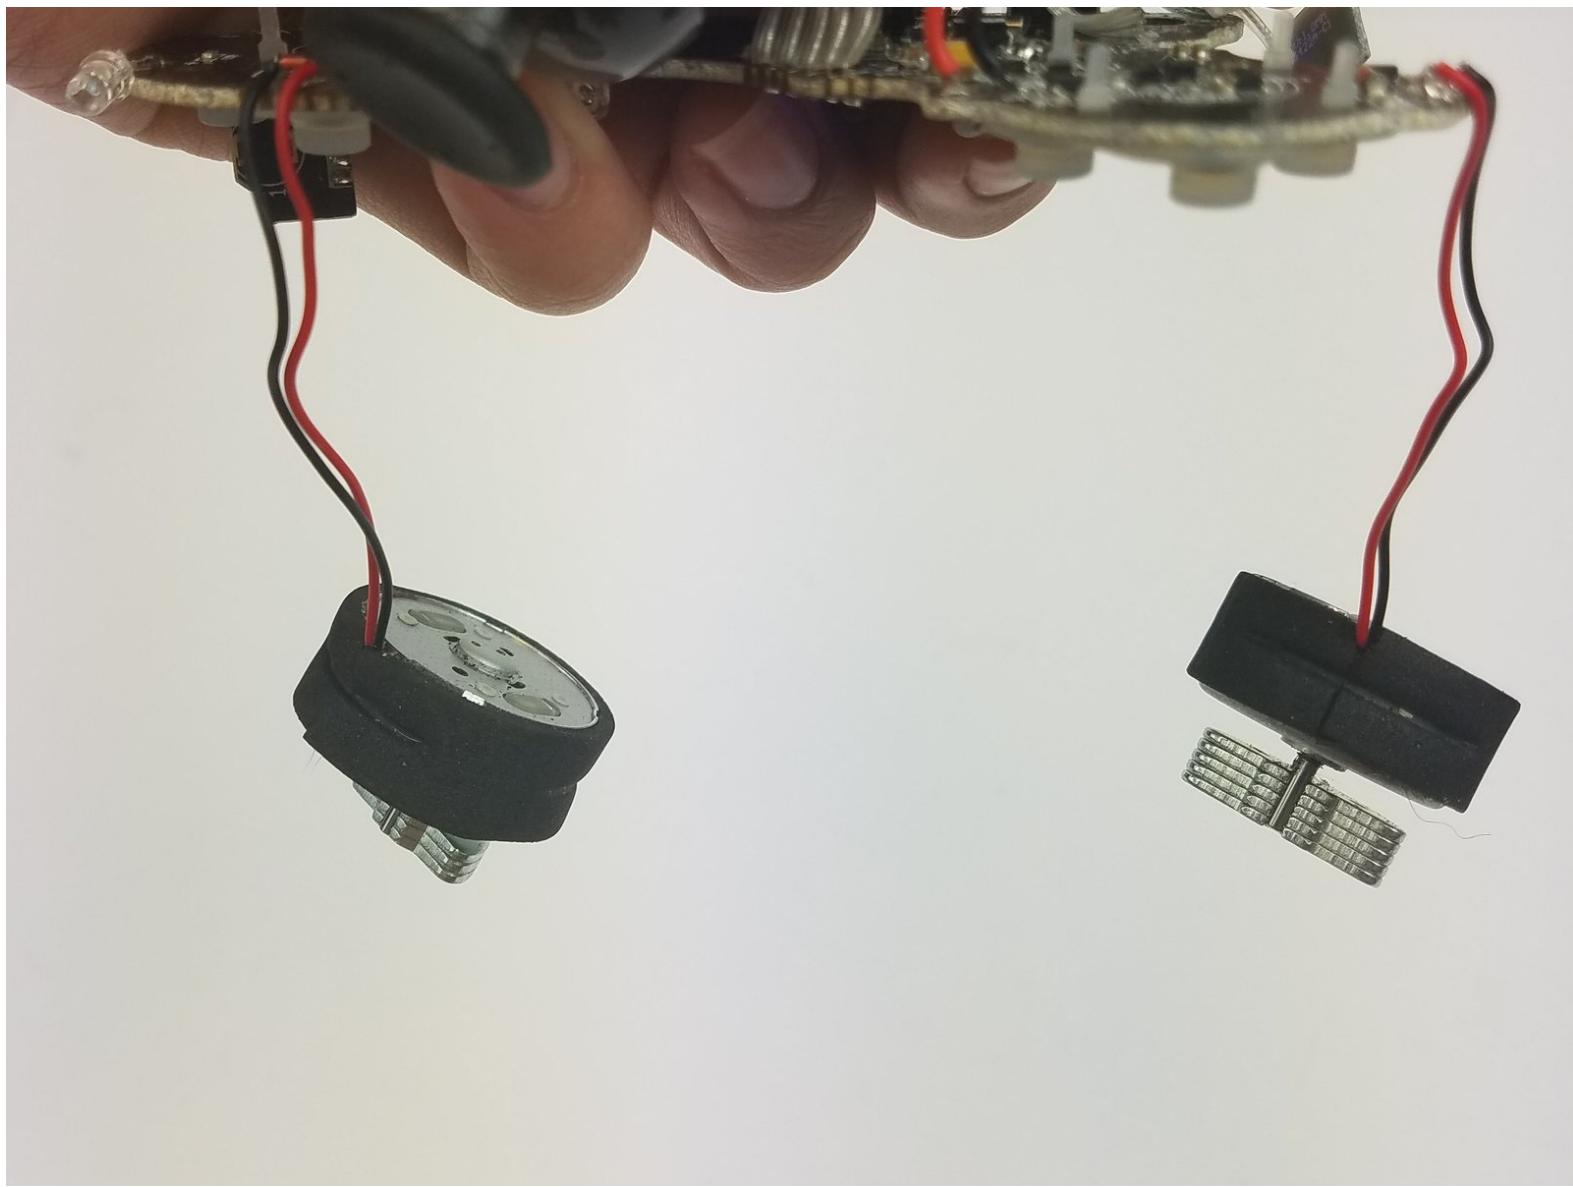

This document was generated on 2019-09-17 07:06:29 PM (MST).


INTRODUCTION

This guide shows the steps required to replace the vibration motors in a PS3 Wireless Afterglow Controller.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [Soldering Iron](#) (1)

Step 1 — Back Cover

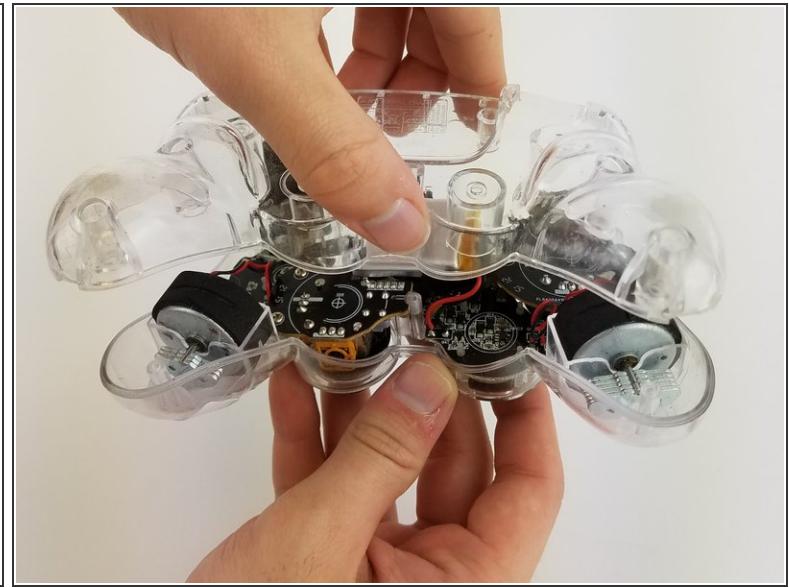

- Lay the controller face down on a flat surface and remove the seven 9mm Phillips #0 screws on the back of the controller.
- Lift up and remove the controller back plate.


Step 2 — Vibration Motor

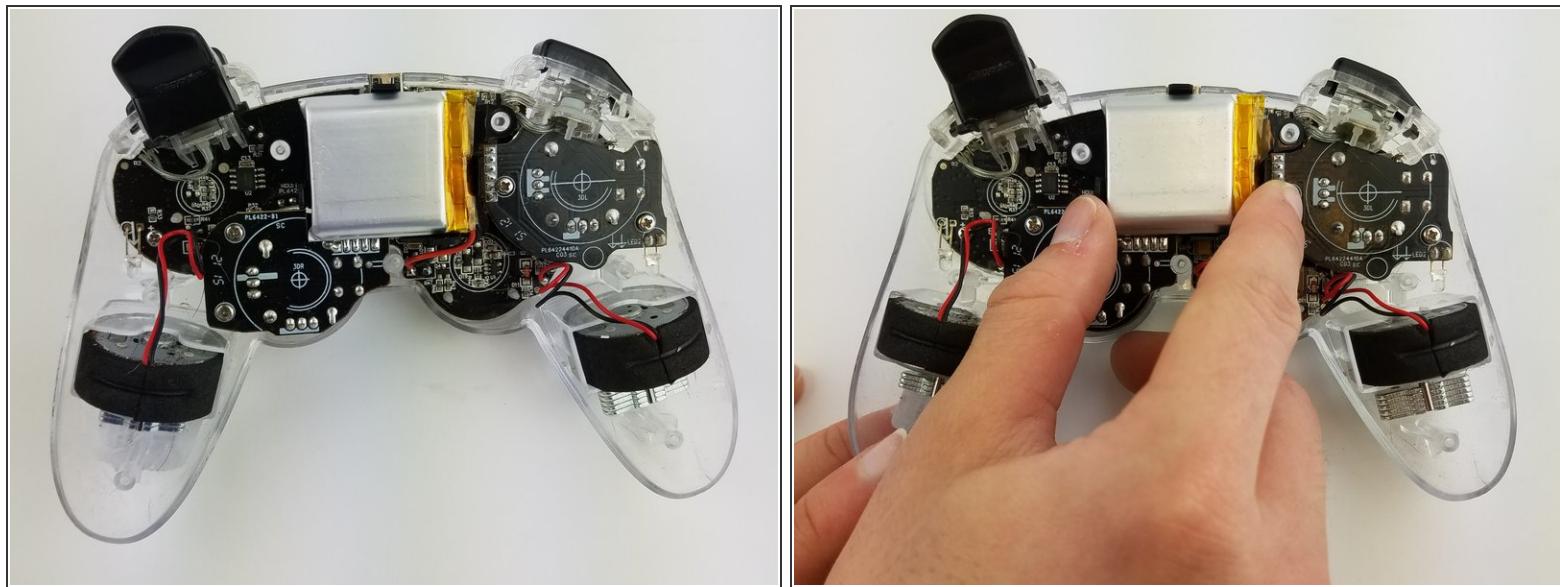

- Carefully remove the battery by lifting it straight up from its place.


⚠ Keep in mind that the red and black battery wires are attached to the motherboard. Handle these with care.

Step 3

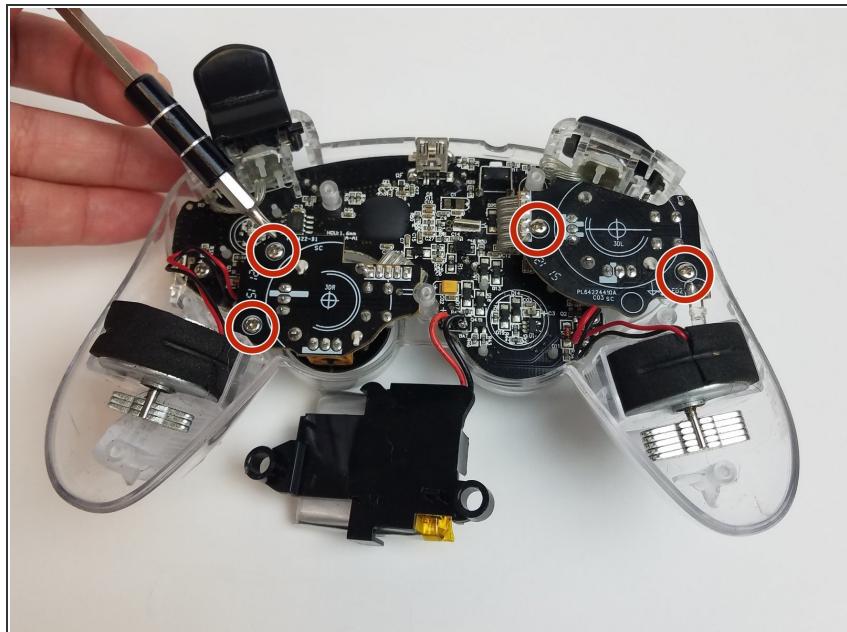


- Unscrew the four 9mm Phillips #0 screws that are attached to both joy stick control mini-motherboards. There are two screws for each mini-motherboard.

Step 4

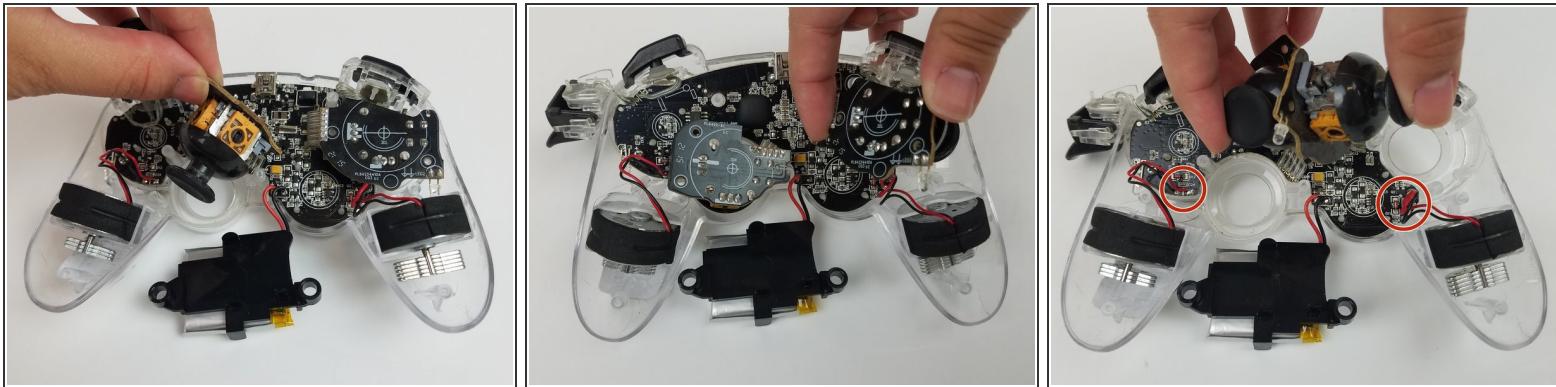


- Jiggle both joy stick control mini-motherboards out of their holding place.
- Set aside the mini-motherboards so that the vibration motor wire connections are accessible.

Step 5

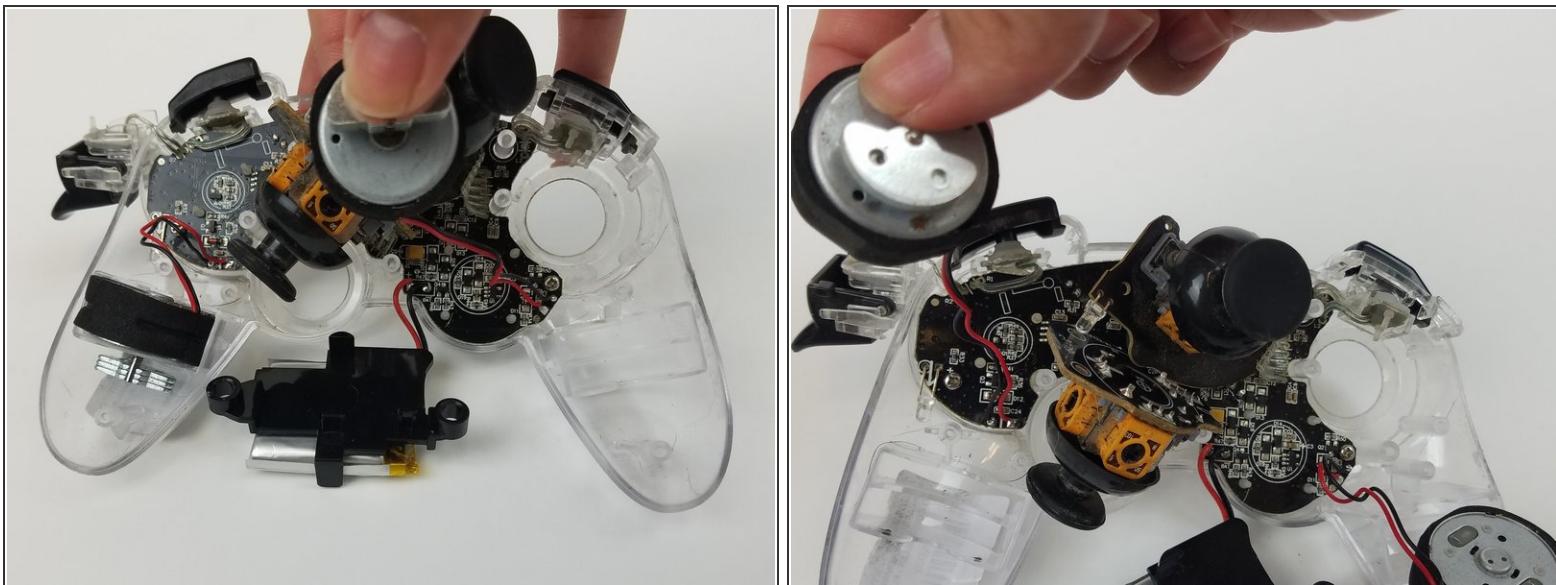

- Pull both vibration motors straight up from their holding place.

Step 6

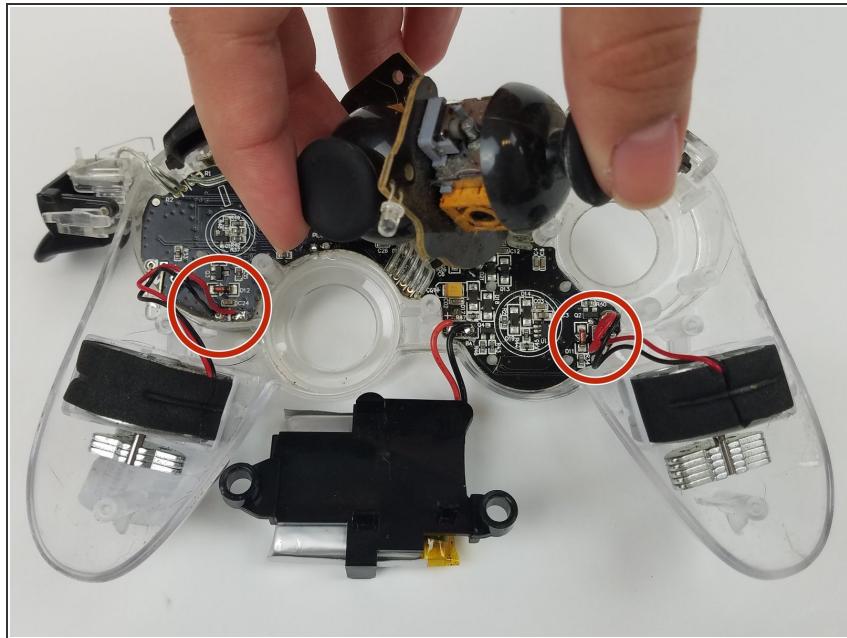

- Use the soldering tool to heat the solder connecting the red and black vibration motor wires to the motherboard to detach the vibration motors.
- Use [this guide](#) for further details on how to solder.

To reassemble your device, follow these instructions in reverse order.