



# Aiptek Pocket DVII 1.3M LCD Lens Assembly Replacement

If our lens replacement guide didn't resolve the problem, follow this guide to replace the lens assembly.

Written By: Gyozo Aba Hivatal



 **TOOLS:**

- Essential Electronics Toolkit (1)

## Step 1 — Lens Assembly




- Remove the battery cover.
- Remove the batteries.

## Step 2



- Unscrew the three 4mm screws from the battery side of the device. Use a Phillips screw driver.

## Step 3

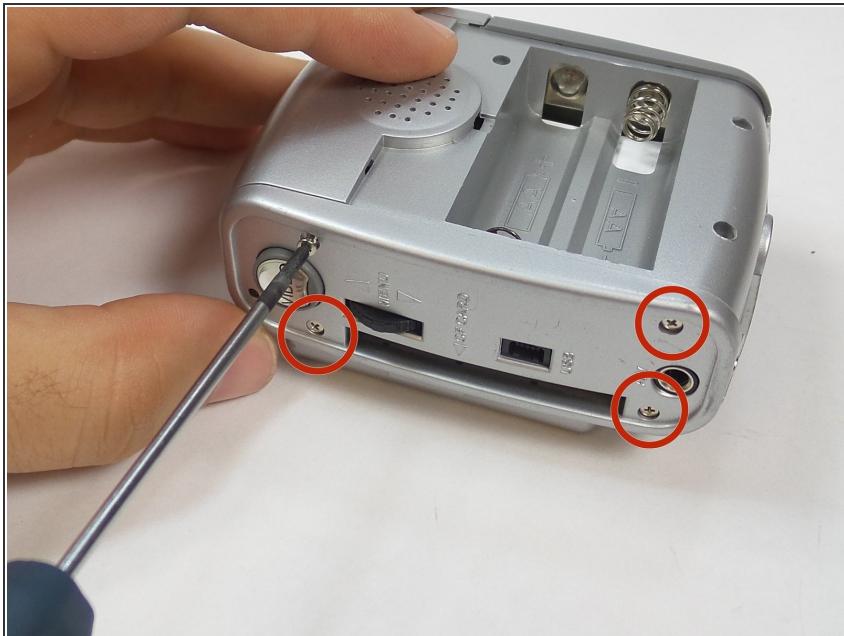


- Remove the four screws from the back side.

## Step 4



- Remove the sticky black dots.
- Remove the hidden screw.

## Step 5

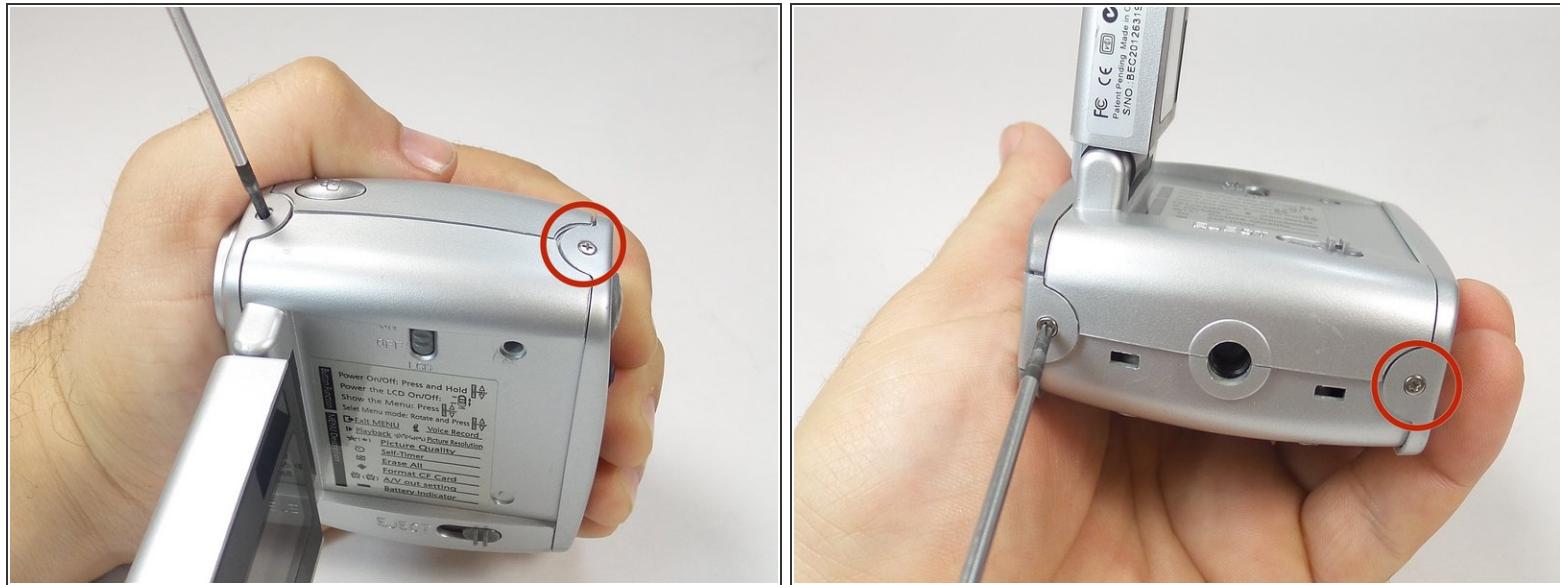

- Remove the two screws from the top side of the device.
- Remove the two screws from the bottom side of the device.

## Step 6



- Remove the rear cover.


**⚠** Be careful not to lose the spring inside.

## Step 7




- Pull back the front cover so that you can dislodge the side cover.

## Step 8

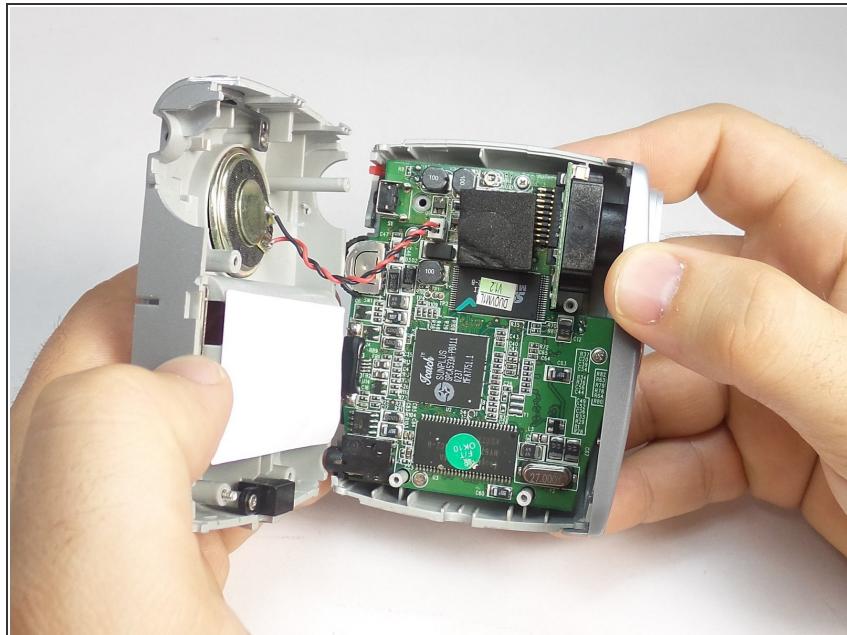


- Unfold the device and be careful not to tear the black and red power supply wires.

## Step 9

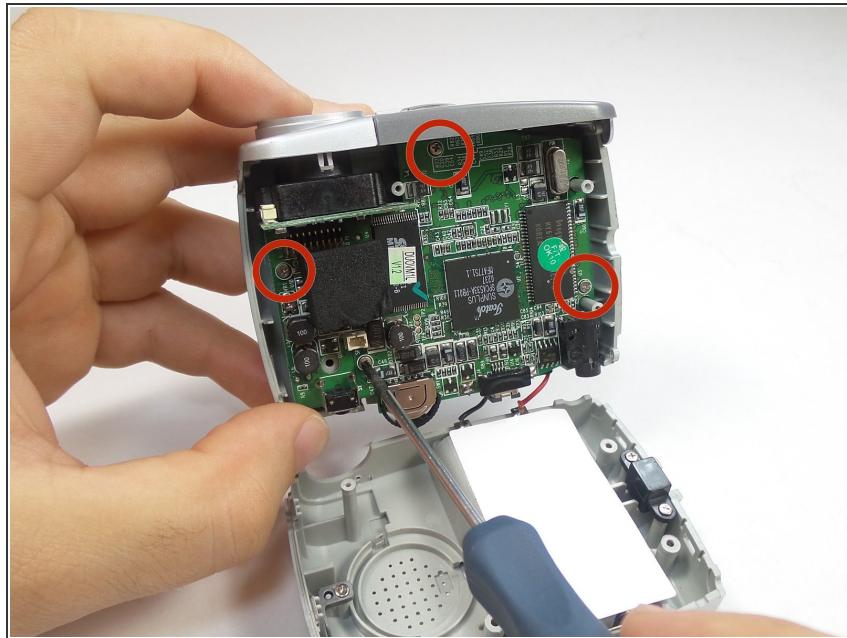


- Remove the four screws from the motherboard.

## Step 10

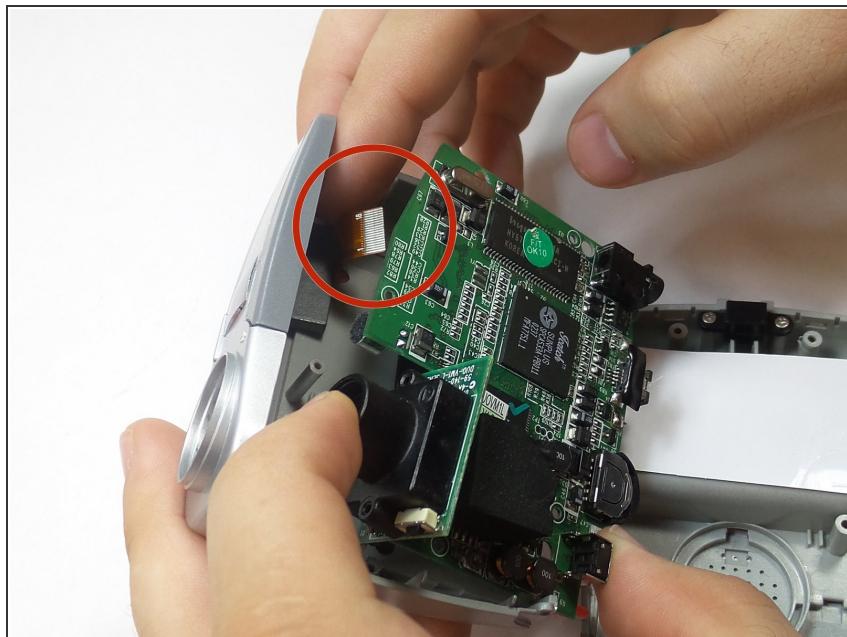

- Take out the motherboard while disconnecting the flip screen's cable from underneath.

## Step 11

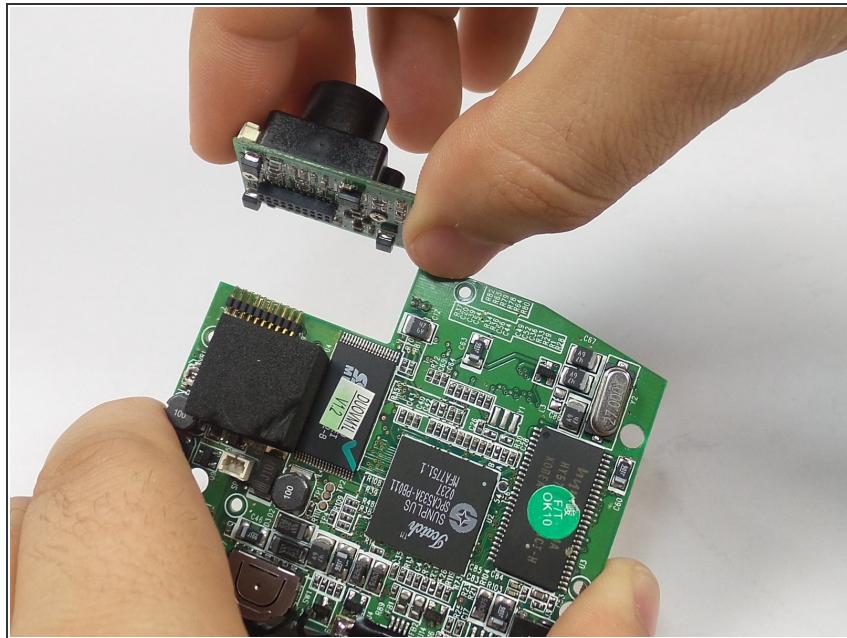

- Replace the Lens Assembly board.

 Be careful not to damage any of the pins. Pull the board linearly.

To reassemble your device, follow these instructions in reverse order.