



Aiptek Pocket DVII 1.3M LCD Speaker Replacement

If your sound is muffled, distorted, or not playing at all, follow these step by step instructions to replace the speaker.

Written By: Gyozo Aba Hivatal



 **TOOLS:**

- Essential Electronics Toolkit (1)

Step 1 — Speaker




- Remove the battery cover.
- Remove the batteries.

Step 2



- Unscrew the three 4mm screws from the battery side of the device. Use a Phillips screw driver.

Step 3

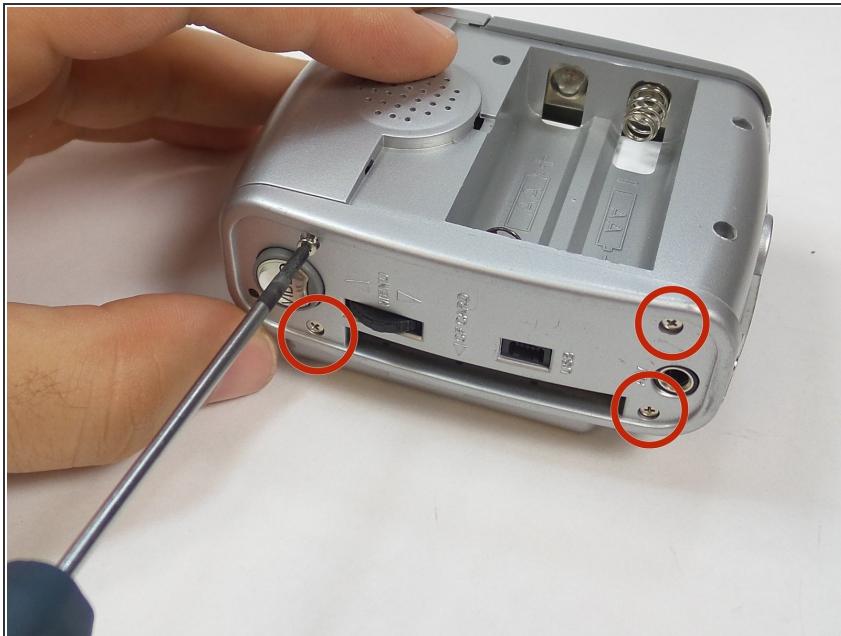


- Remove the four screws from the back side.

Step 4



- Remove the sticky black cover dot.
- Remove the hidden screw.

Step 5

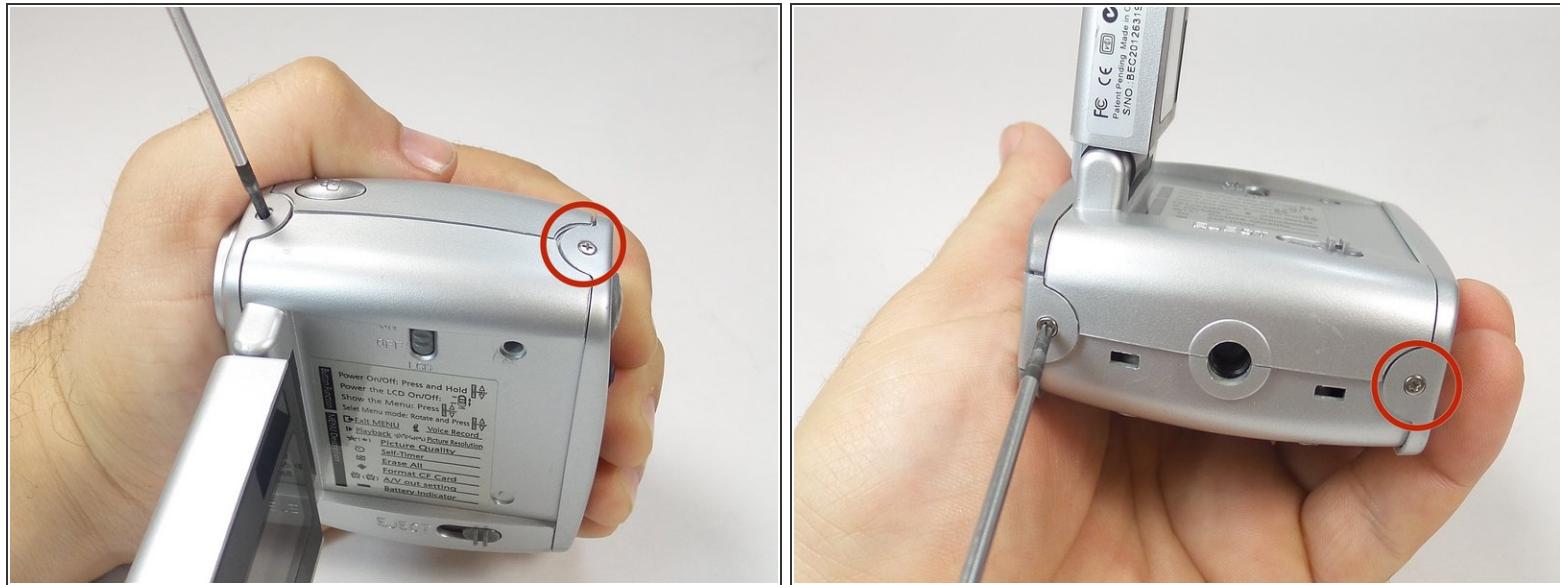

- Remove the two screws from the top side of the device.
- Remove the two screws from the bottom side of the device.

Step 6



- Remove the rear cover.


⚠ Be careful not to lose the spring inside.

Step 7




- Pull back the front cover so that you can dislodge the side cover.

Step 8

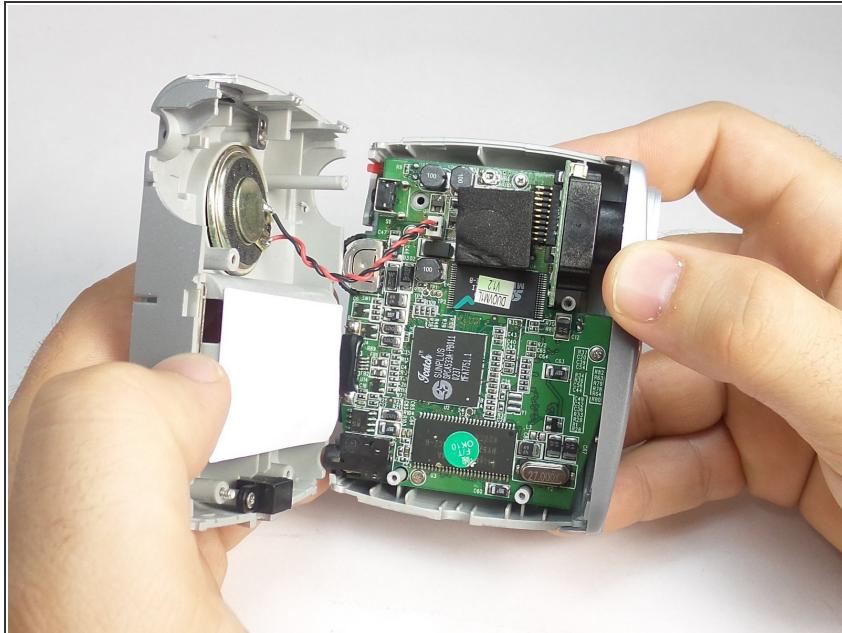

- Unfold the device and be careful not to tear the black and red power supply wires.

Step 9

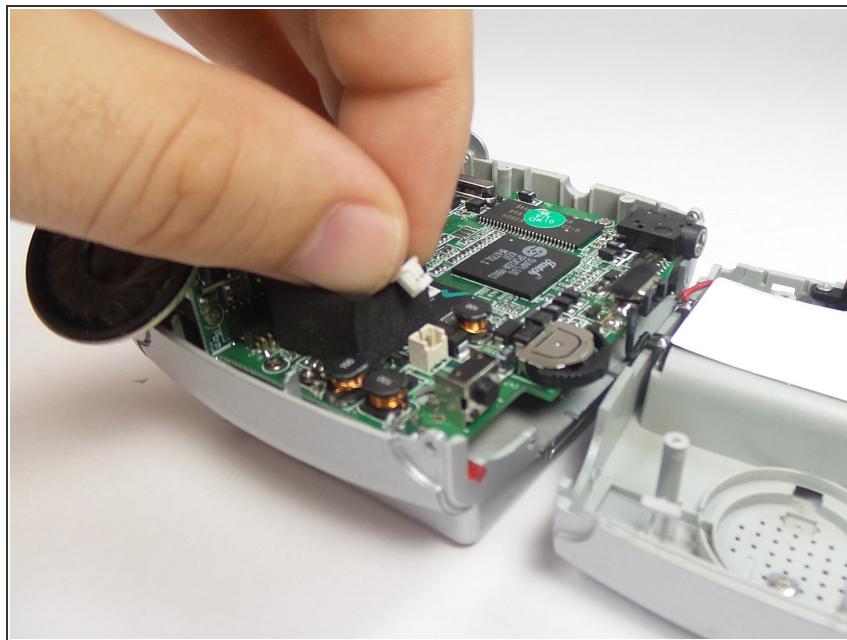

- Unplug and replace the speaker.

To reassemble your device, follow these instructions in reverse order.