



# Air Blasters Tek Six Reload Slider Spring Replacement

Replace the reload slider spring in case it is no longer working properly.

Written By: Alfredo Antolinez



## INTRODUCTION

The reload slider spring brings the reload slider back to the front once the blaster is ready to fire.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Remove screw of the grey slider



- Using a screwdriver, remove the two 11.6 mm phillips 00 screws holding the grey slider together.
- Remove grey slider from the main body of the blaster.

## Step 2 — Remove screws in main body



- Using a screwdriver, remove the six 9 mm phillips 00 screws holding the main body together.

## Step 3 — Take the main body apart



- Using the plastic opening tools, carefully take apart the main case of the blaster to leave the inside exposed.

## Step 4 — Remove metal pin



- Carefully grab the metal pin keeping the air system and top spring, and slide it outwards. This will release the air system with the plunger completely.

## Step 5 — Remove screw holding the top spring to reload slider



- Using a screwdriver, remove the 7.5 mm phillips 00 screw holding the top spring to the reload slider.

To reassemble your device, follow these instructions in reverse order.