


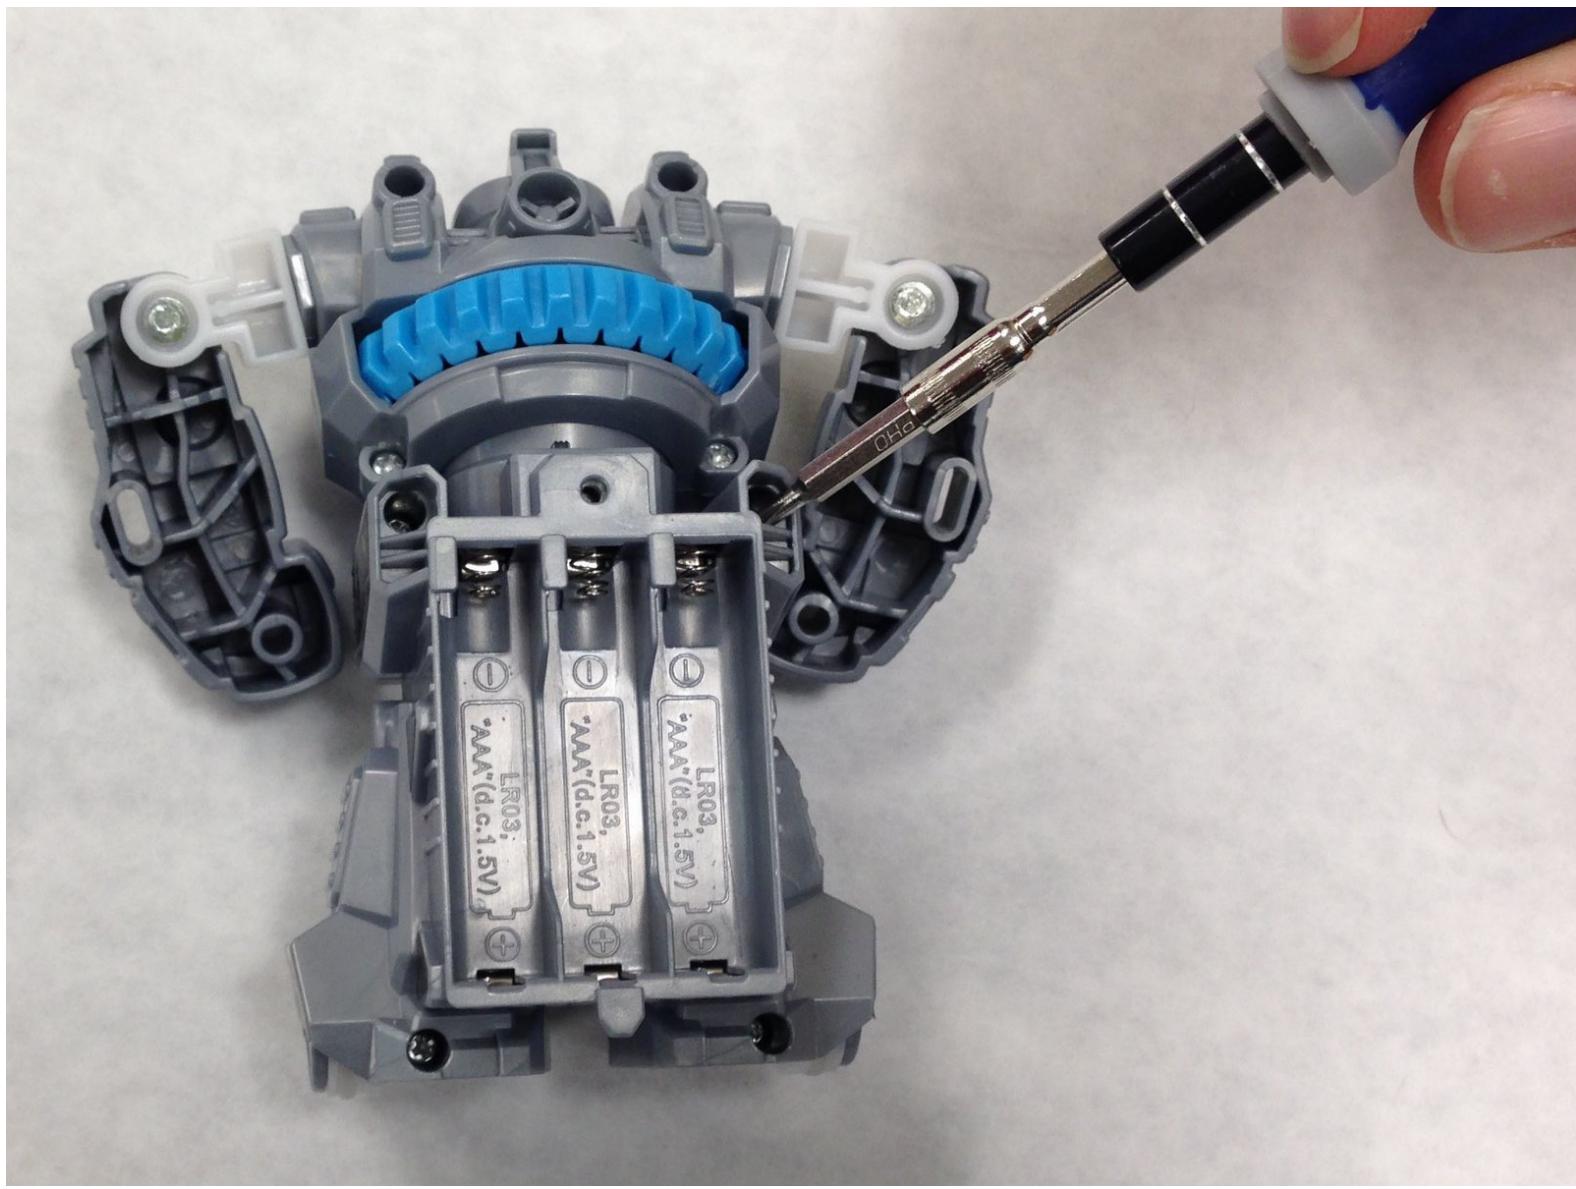

# Air Hog Smash Bots External Casing Replacement

This is a prerequisite only guide. The purpose of this guide is to open the Smash Bot Robot to reach internal parts.

Written By: Nick Ciulla



This document was generated on 2019-10-02 02:52:49 PM (MST).



## INTRODUCTION

The purpose of this guide is to open the Smash Bot Robot to reach internal parts.

### TOOLS:



- 8mm Socket Wrench Screwdriver (1)
- 4mm Nut Driver (1)
- Spudger (1)
- iFixit Precision Bit Driver, Aluminum (1)
- 64 Bit Driver Kit (1)

## Step 1 — External Casing

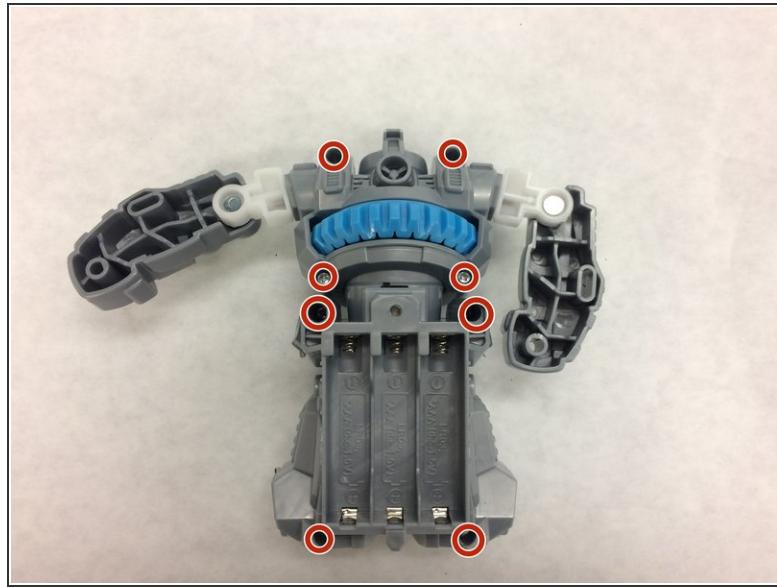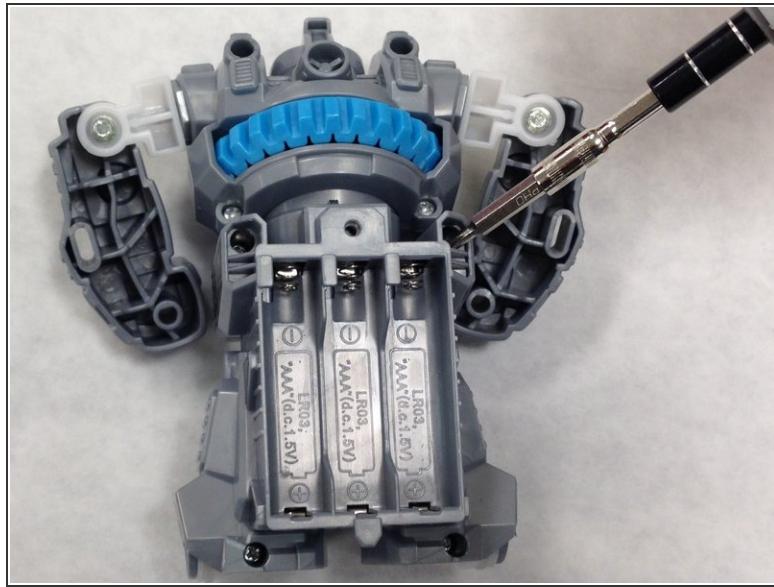


- Using a Phillip #0 screwdriver to remove the eight 8 mm screws.

## Step 2

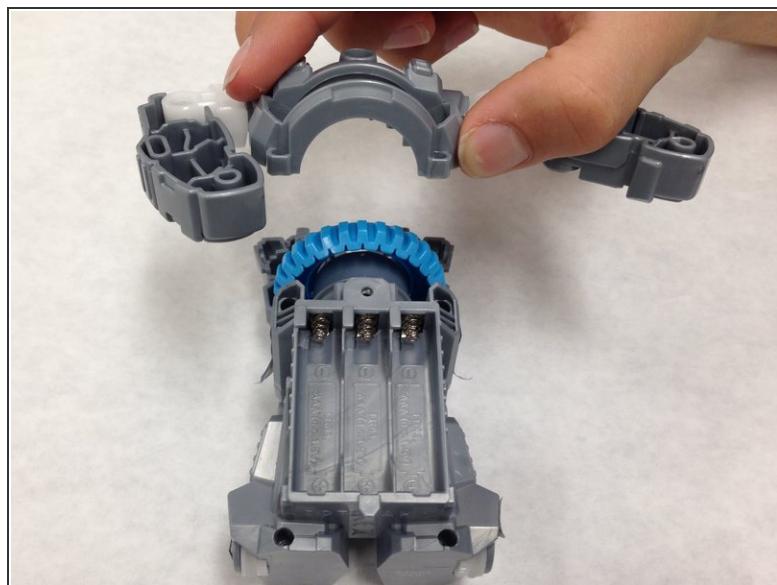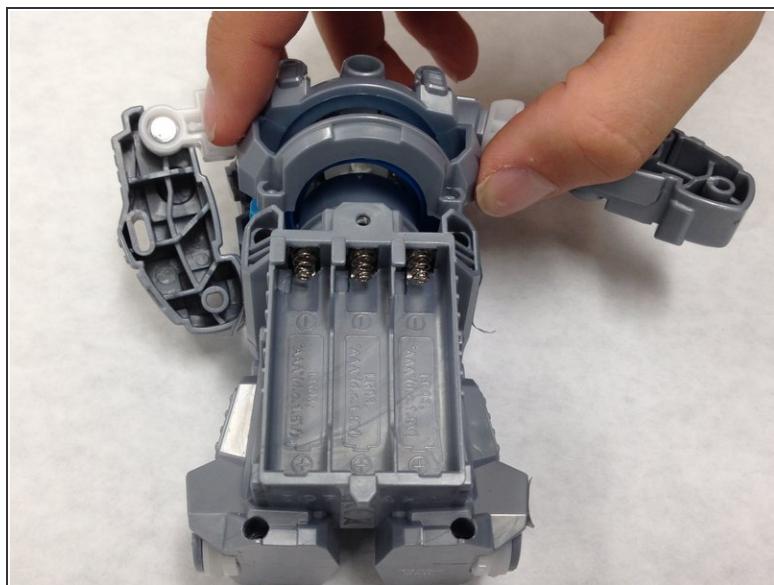

- Remove the upper armor of the Smash Bot.


## Step 3

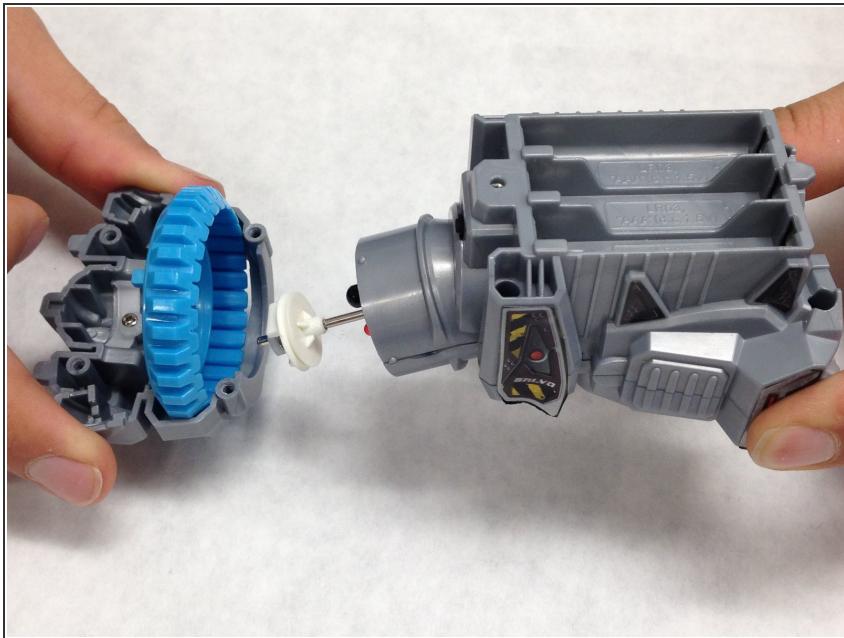

- Hold the upper body and slide out the bottom half of the Smash Bot.



*(i)* The motor extends from the lower-body into the upper-body. Be careful to not damage the motor.

## Step 4

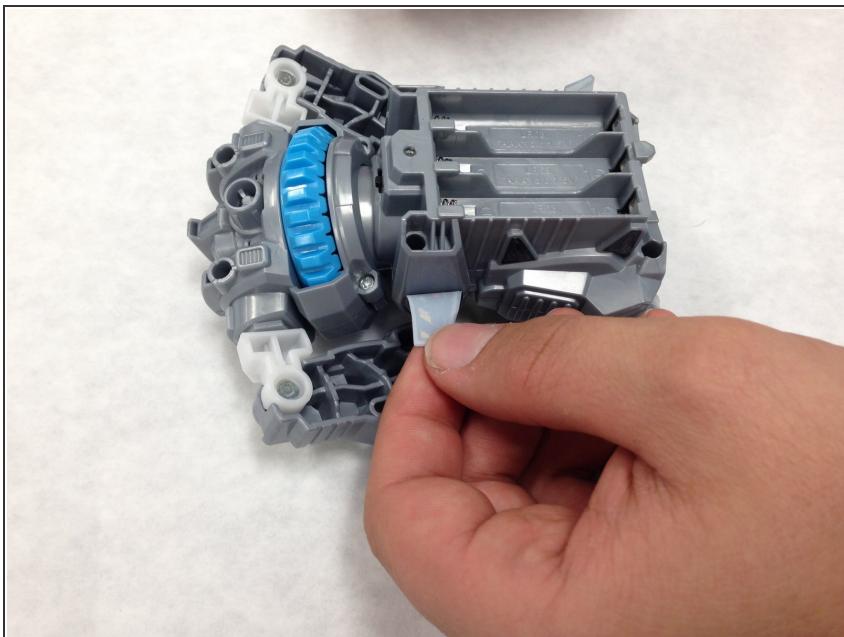

- Peel back the four decal stickers that hold the front and back of the bot together.

## Step 5

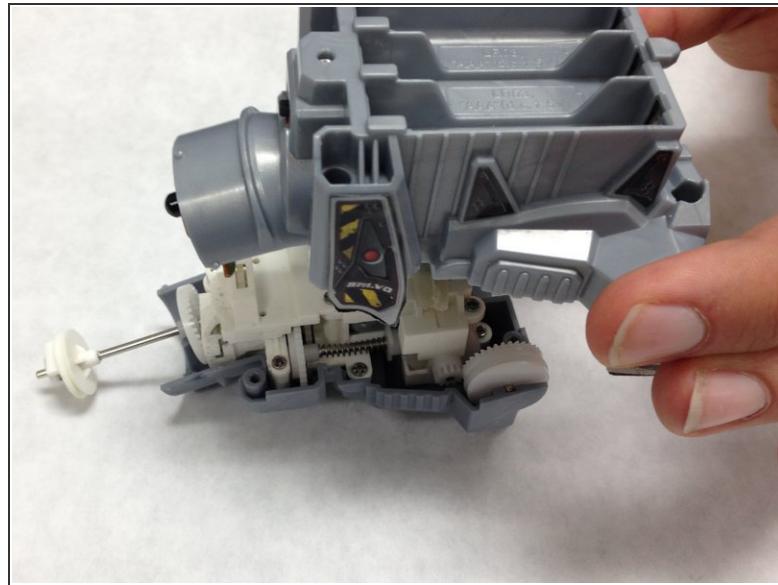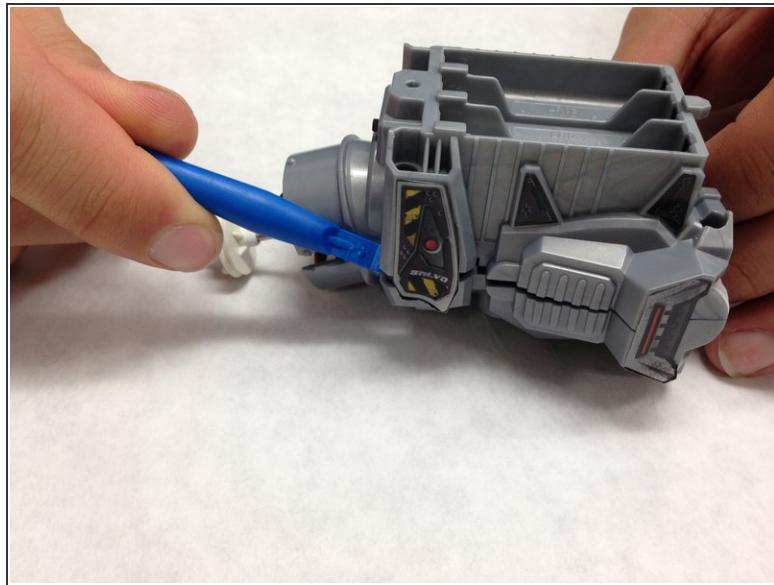

- Use the plastic opening tool to pry the front and back of the lower body apart.
- Carefully remove the back of the bot from the front.

To reassemble your device, follow these instructions in reverse order.