



Akaso EK7000 4K Button Replacement

If the up and down/Wi-Fi button is jammed or needs replacement, this guide will show you how to remove this button.

Written By: Annie Sun




INTRODUCTION

This is a guide to replacing the up and down buttons on your Akaso EK7000. Required tools are: a metal spudger or any other instrument used to pry or separate, and a Phillips #000 screwdriver.

TOOLS:

- [Metal Spudger \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — Battery

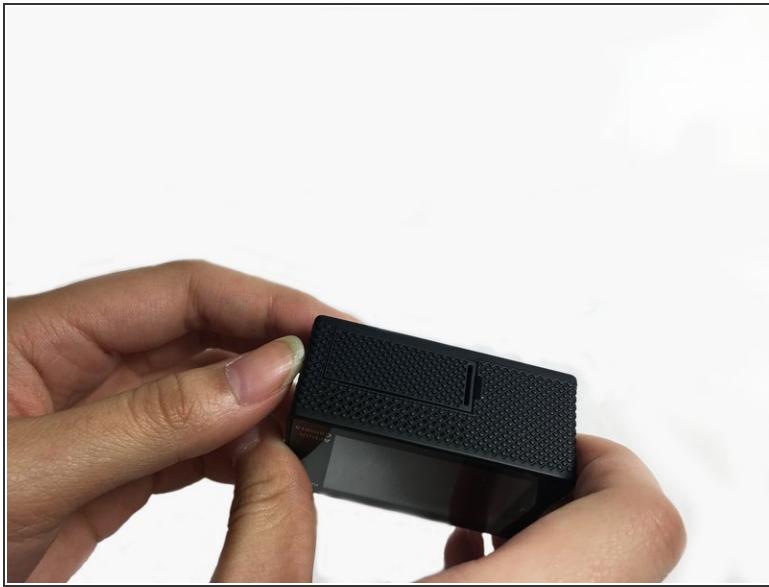


- Locate the battery cover at the bottom of the camera. Use your fingers to gently pry open the battery cover.

Step 2




- Locate the small plastic flap attached to the battery. Pull the battery out towards you.

Step 3 — Front Panel

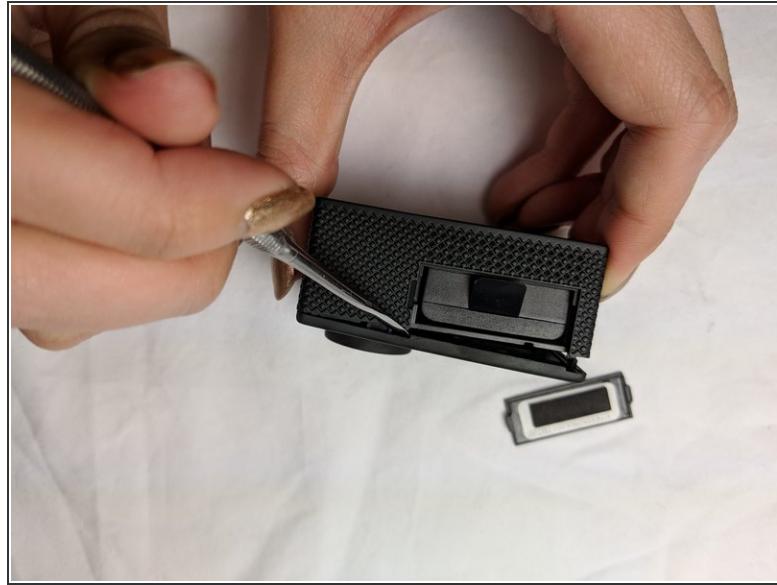


- Using the metal spudger, gently pry open the front panel from the exposed battery cartridge.

Step 4

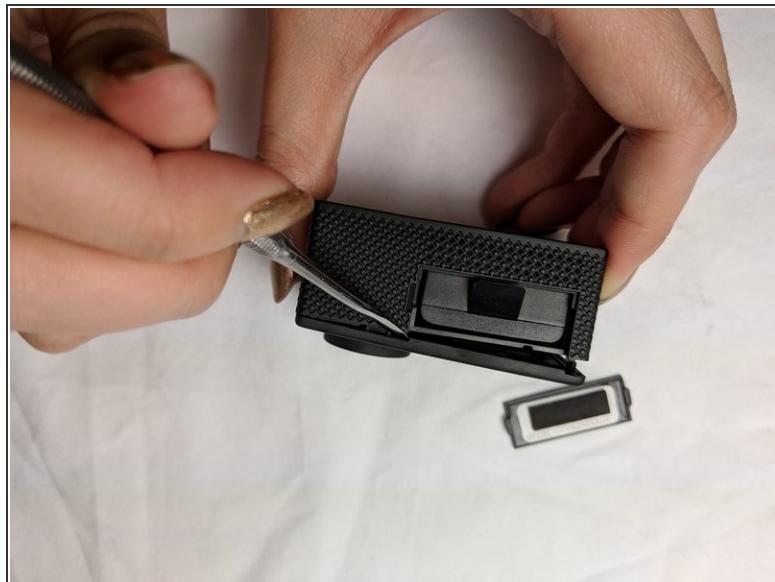


- Remove the rest of front panel with your fingers or with assistance from the spudger.

Step 5 — Button

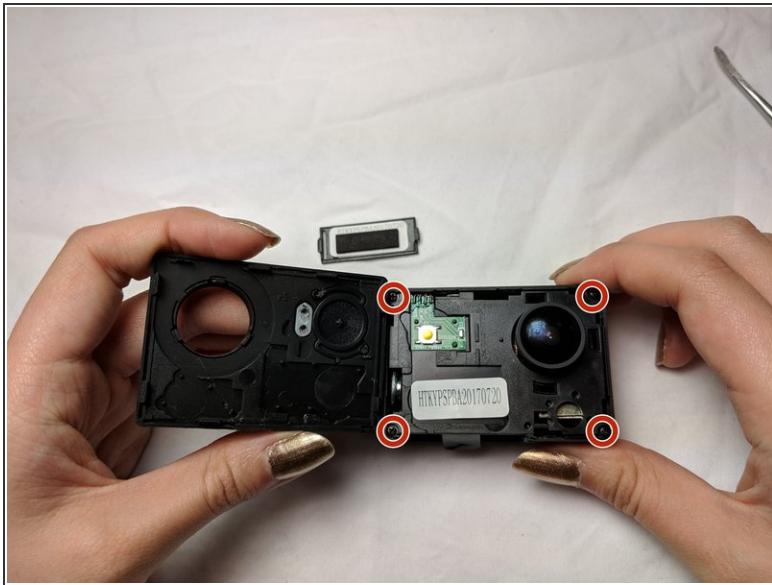

- Using a Phillips #000 screwdriver, remove the four screws securing the cover plate.

Step 6

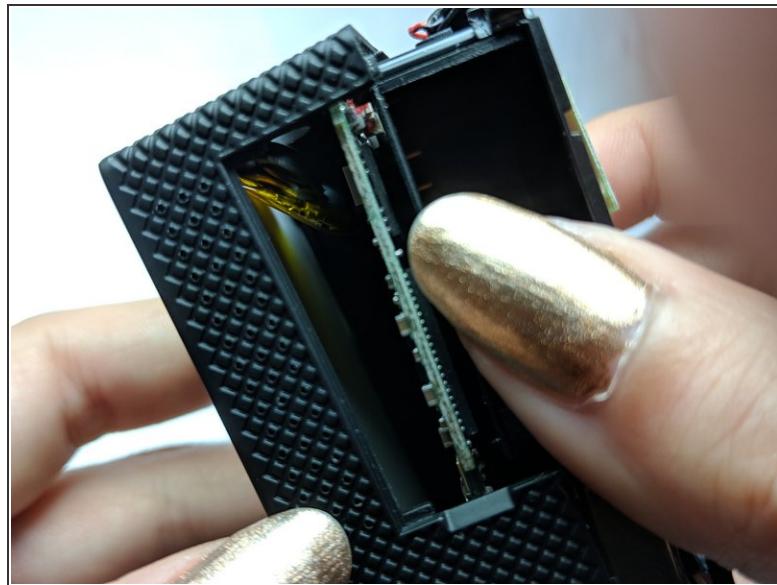



- Using your thumb or a spudger, gently push up from inside the battery cartridge.
- Gently lift the cover plate until you can see into the inside of the camera. The cover will not completely come off, so be careful not to damage any of the inner wiring.

Step 7



- Using the metal spudger, push down on the up and down button as shown in the picture. Dislodge the button and it should fall to the bottom of the camera.

Step 8

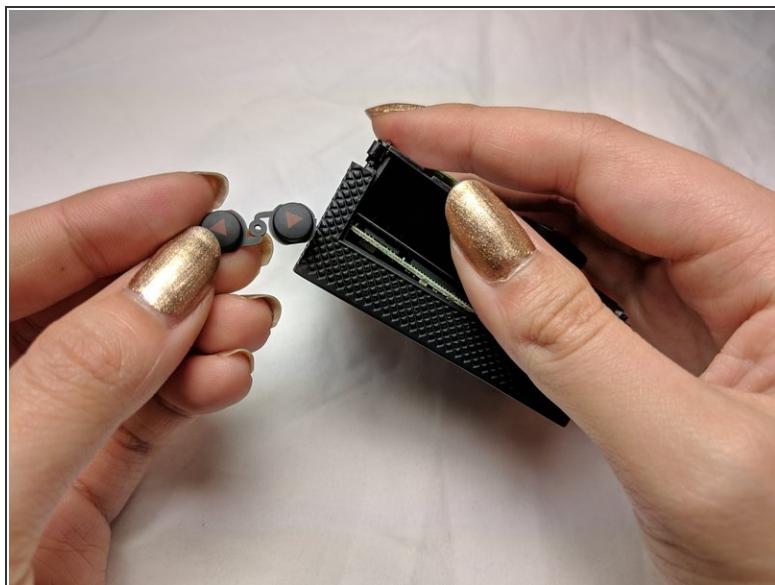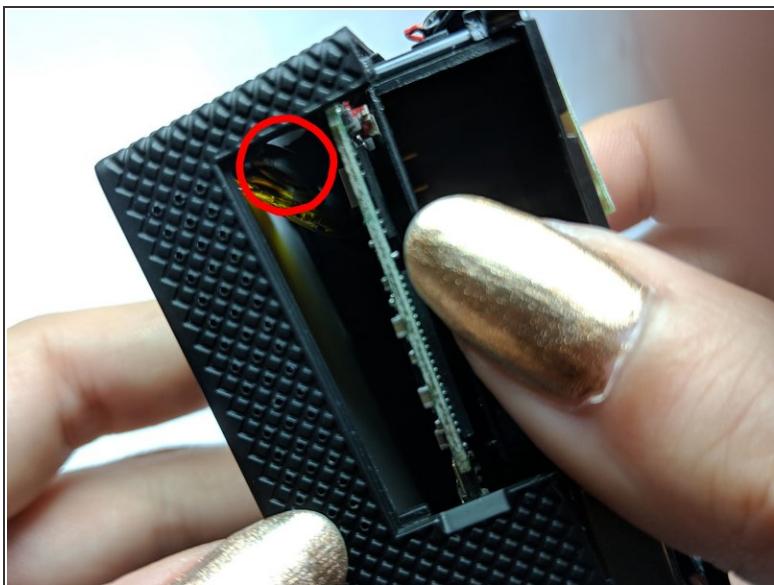

- Again, using the metal spudger, gently pull out the button from within the camera.

To reassemble your device, follow these instructions in reverse order.