



Akaso EK7000 4K Front Panel Replacement

If you need to replace your front panel for any reason (damaged front panel, maintenance, etc.), then this guide is for you.

Written By: Annie Sun




INTRODUCTION

This guide will help you remove the front panel of your Akaso EK7000. You will need a metal spudger or any other tool for prying and separating.

TOOLS:

- Metal Spudger (1)

Step 1 — Battery

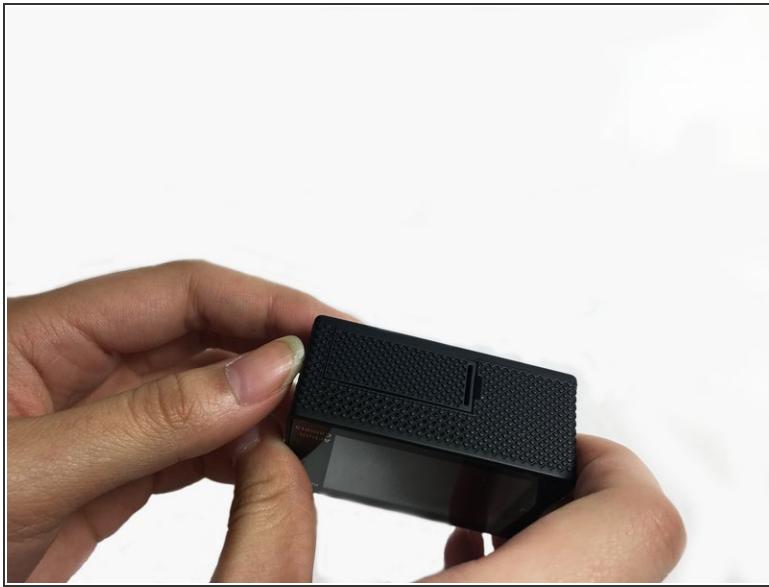


- Locate the battery cover at the bottom of the camera. Use your fingers to gently pry open the battery cover.

Step 2




- Locate the small plastic flap attached to the battery. Pull the battery out towards you.

Step 3 — Front Panel

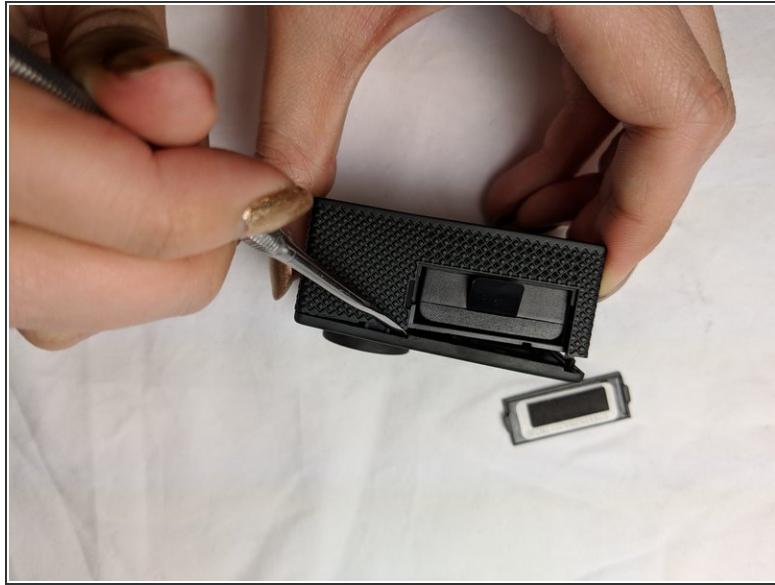

- Using the metal spudger, gently pry open the front panel from the exposed battery cartridge.

Step 4

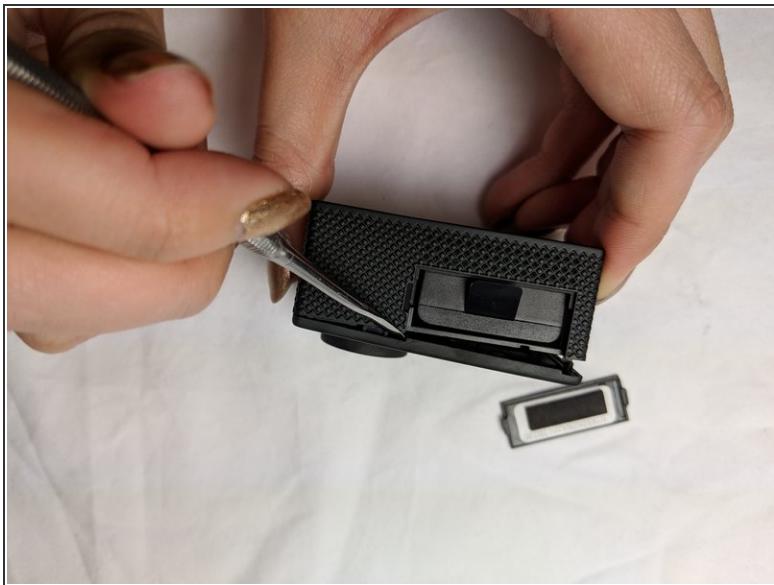

- Remove the rest of front panel with your fingers or with assistance from the spudger.

To reassemble your device, follow these instructions in reverse order.