




Alcatel Fierce 4 Display Replacement

This guide will explain how to replace the display in the Alcatel Fierce 4.

Written By: Mckenzie Dalley

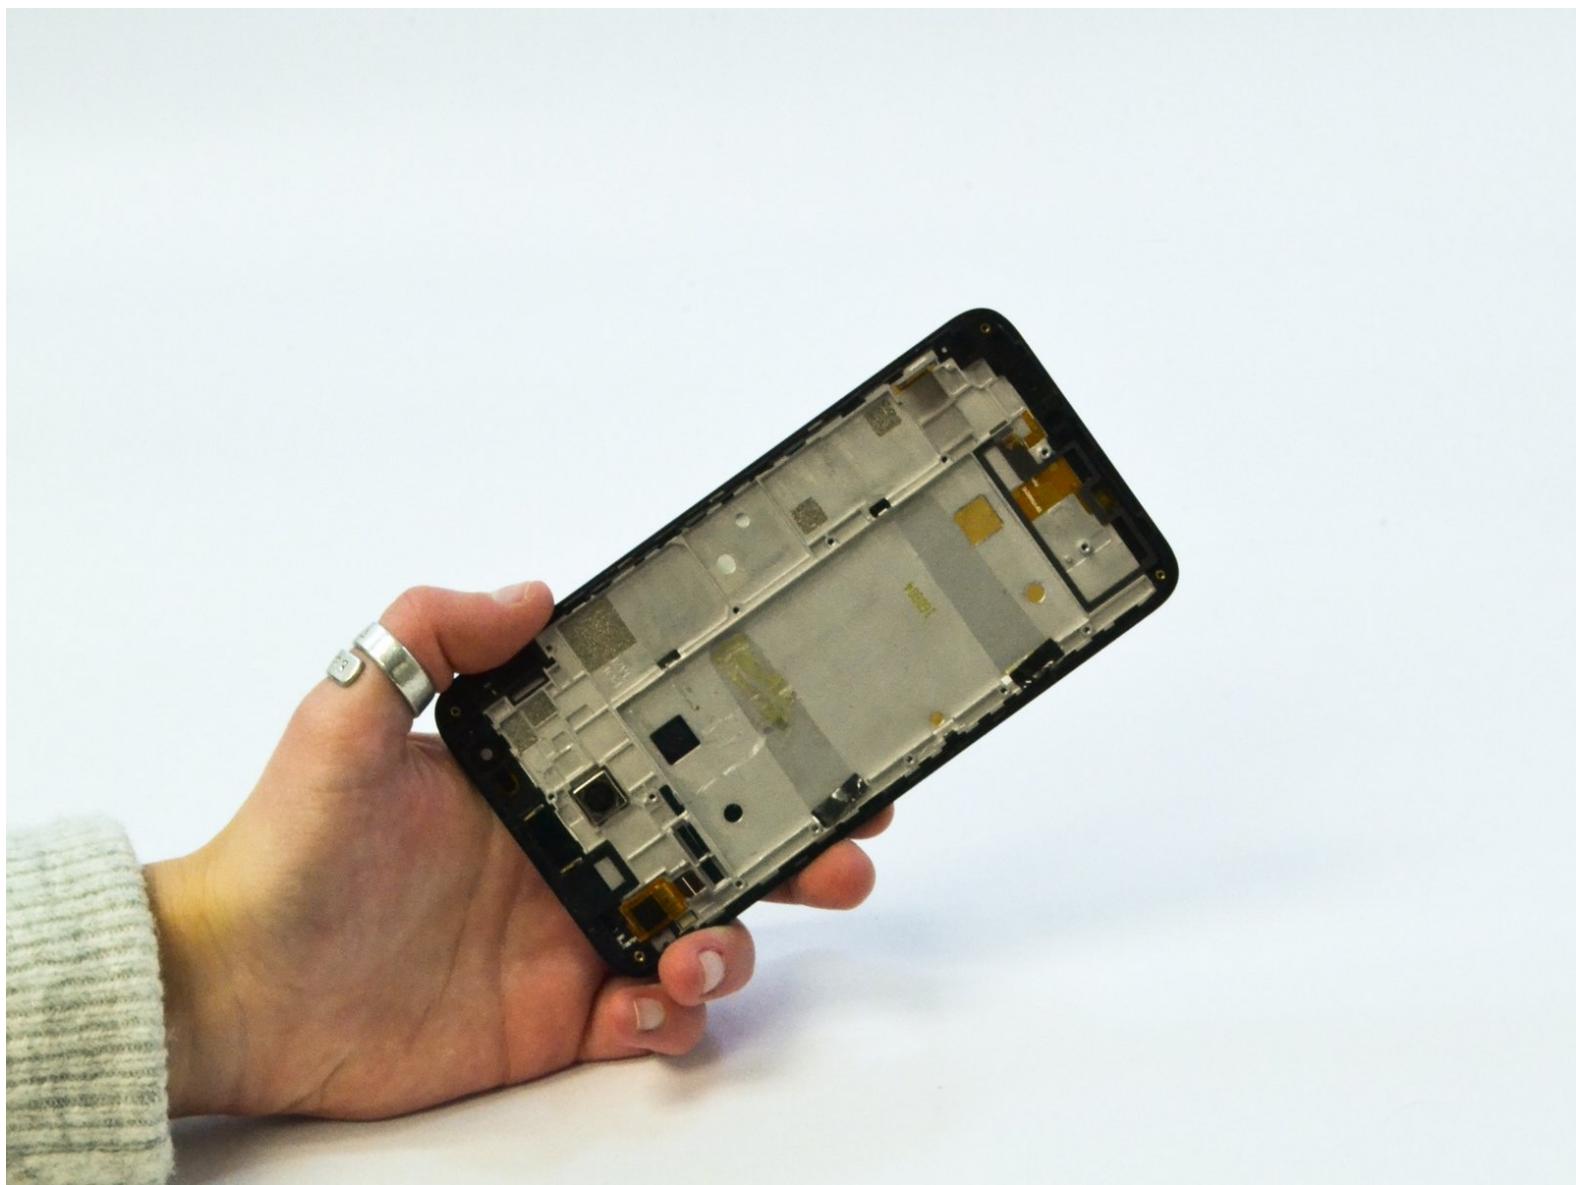

INTRODUCTION

If you notice your phone screen has gone blank or is flickering, it might be time to replace your phone display. Follow this guide from start to finish to learn how!

TOOLS:


- [Tweezers](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery




- Using a plastic opening tool, pry the back cover off of the phone.

Step 2

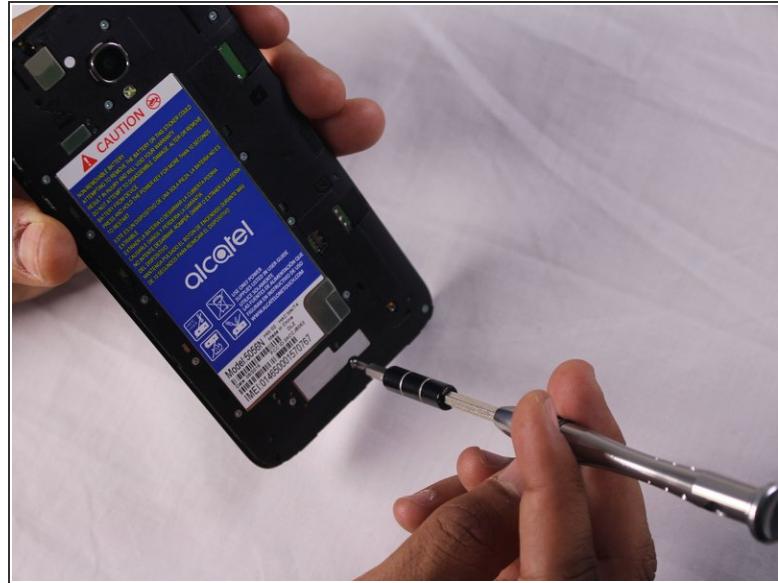



- Remove the seventeen Phillips #000 screws from the mid-frame.

Step 3

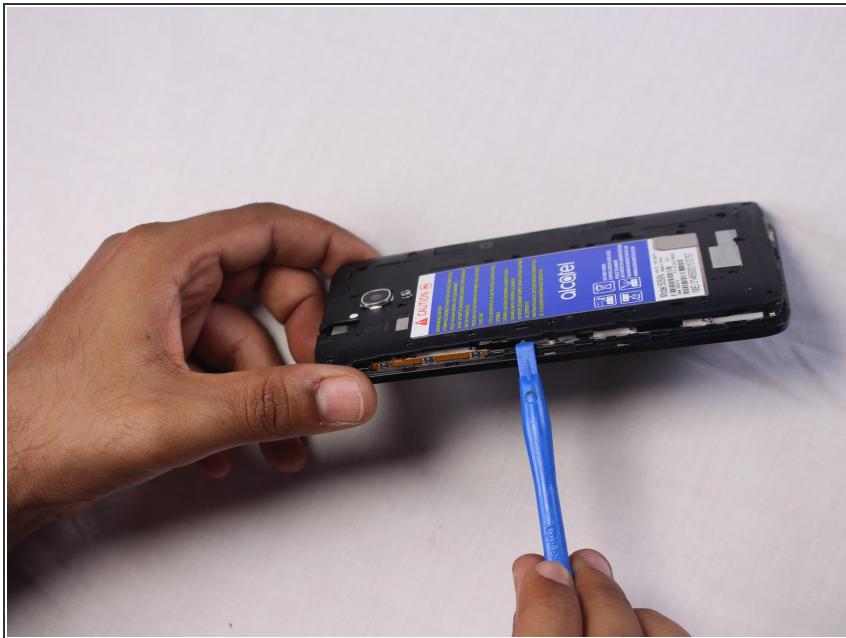


- Pry off the mid-frame using a plastic opening tool, working your way around the perimeter.

Step 4

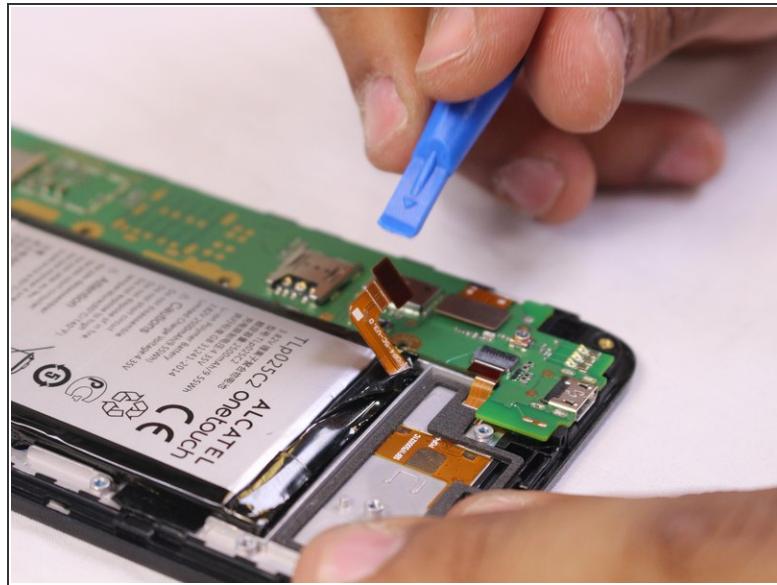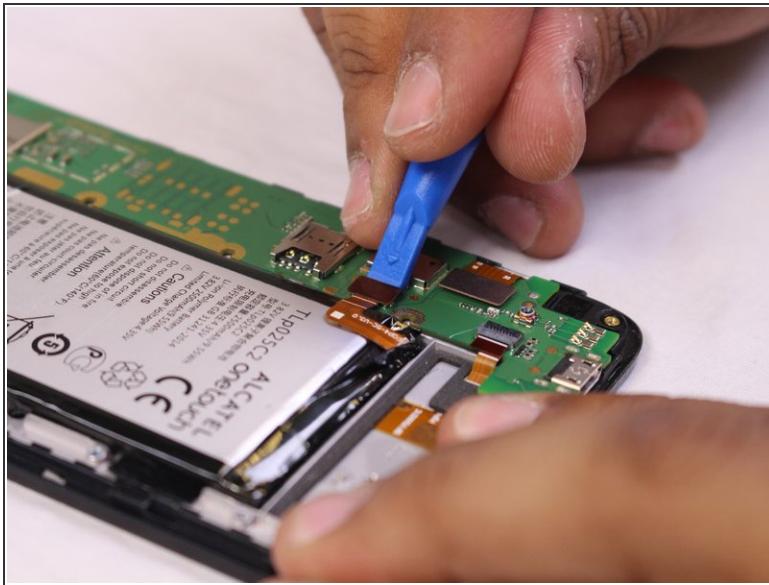

- Use a plastic opening tool to disconnect all of the cables on the motherboard.
- Use a spudger to flip up the retaining flap on the ribbon cable ZIF sockets.

Step 5

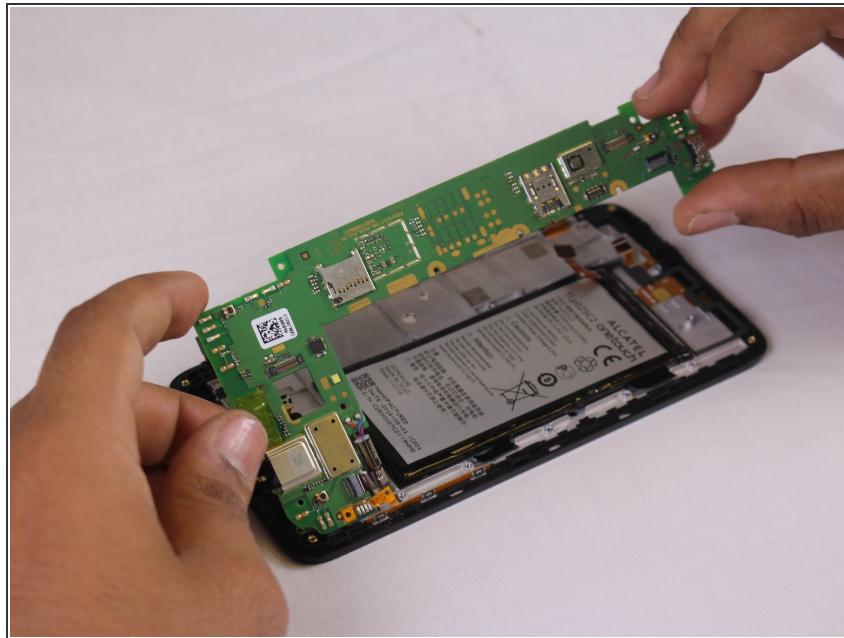

- Remove the motherboard from the phone.

Step 6



- Carefully pry up the battery with a plastic opening tool, or your hands.

Step 7 — Display



- Replace with new display assembly.

To reassemble your device, follow these instructions in reverse order.