




Alcatel Fierce 4 Earpiece Speaker Replacement

Follow this guide to replace the earpiece speaker in an Alcatel Fierce 4 smartphone.

Written By: Rawan

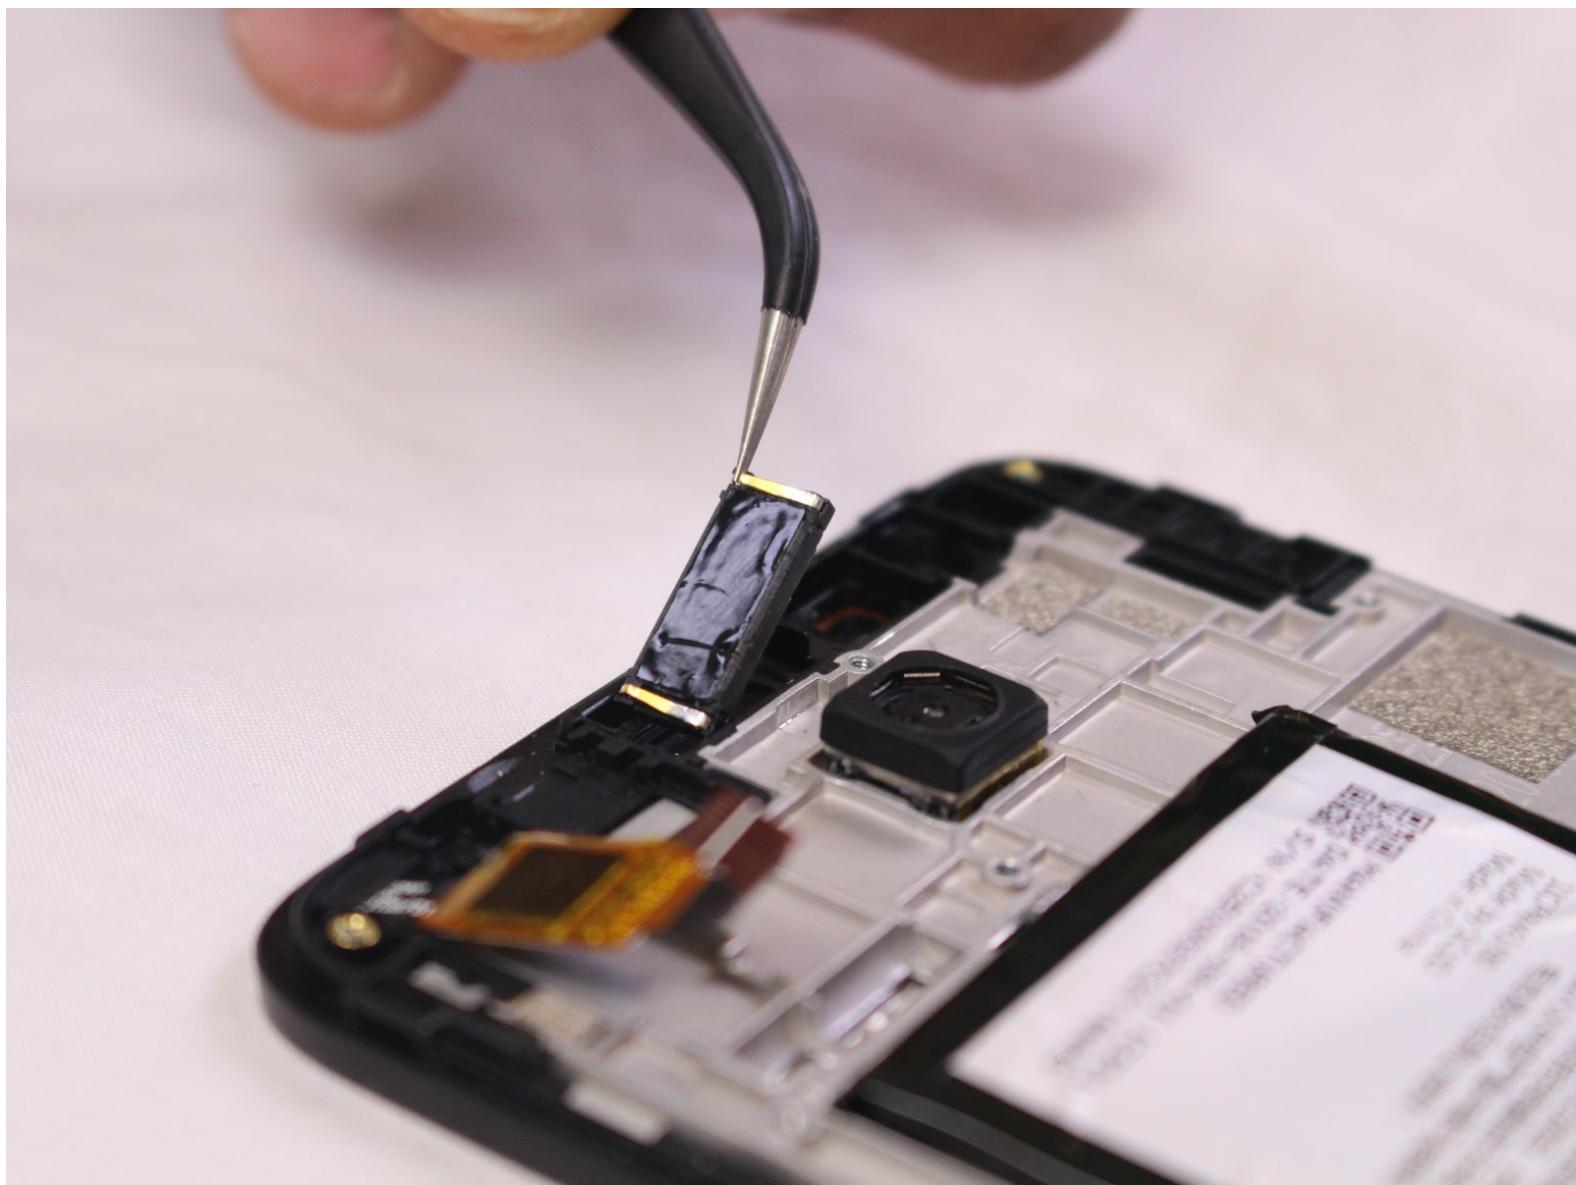

INTRODUCTION

If you're noticing that Alcatel Fierce 4's earpiece is getting bad and you can't hear well but you are not ready to upgrade your phone and you like it. It's the time to replace the earpiece. Follow this guide from start to finish!

TOOLS:

- [Tweezers \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

PARTS:

- [Alcatel Fierce 4 Earpiece Speaker \(1\)](#)

Step 1 — Battery




- Using a plastic opening tool, pry the back cover off of the phone.

Step 2




- Remove the seventeen Phillips #000 screws from the mid-frame.

Step 3

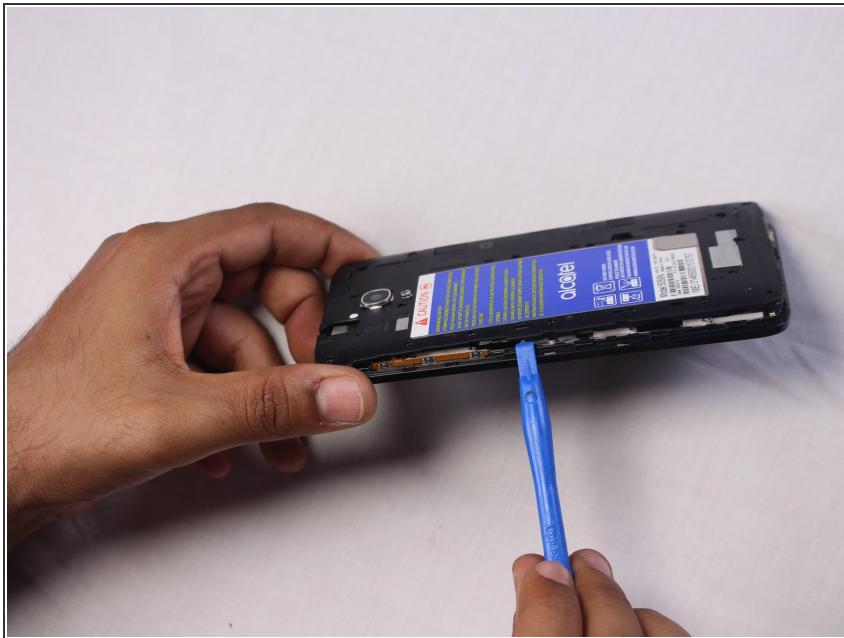

- Pry off the mid-frame using a plastic opening tool, working your way around the perimeter.

Step 4

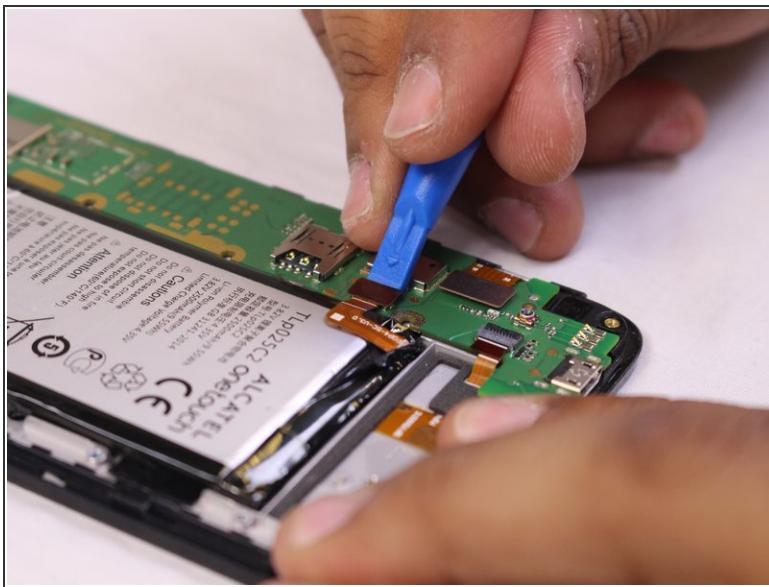

- Use a plastic opening tool to disconnect all of the cables on the motherboard.
- Use a spudger to flip up the retaining flap on the ribbon cable ZIF sockets.

Step 5




- Remove the motherboard from the phone.

Step 6



- Carefully pry up the battery with a plastic opening tool, or your hands.

Step 7 — Earpiece Speaker

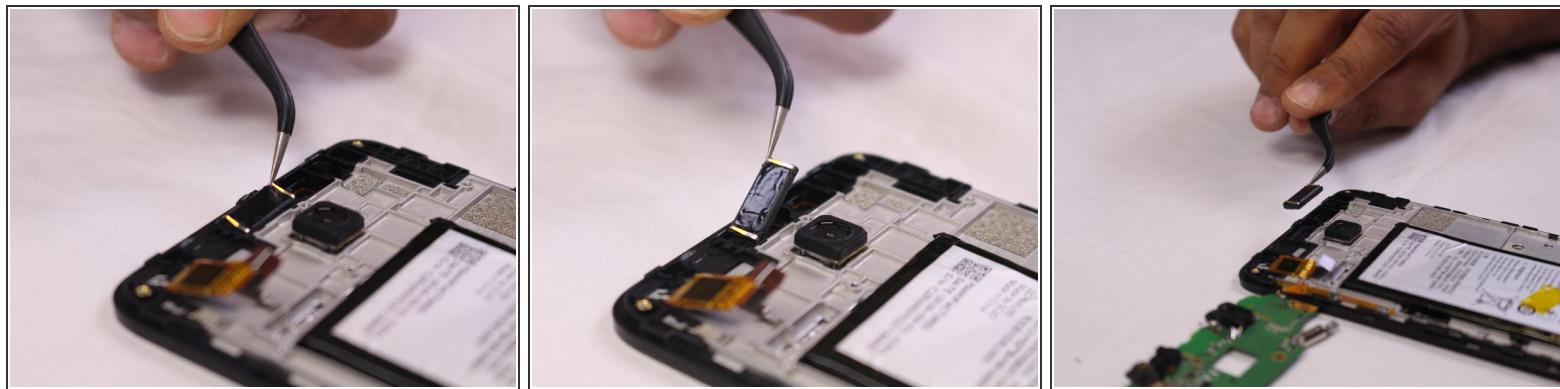

- Use tweezers to pull the earpiece speaker out of the phone.

To reassemble your device, follow these instructions in reverse order.