



Alcatel IdealXCITE Rear Speaker Replacement

How to replace the antenna in an Alcatel IdealXCITE.

Written By: Franklin Froehlich



INTRODUCTION

If you need to replace the rear speaker in your Alcatel IdealXCITE, you should use the following guide.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Jimmy](#) (1)
- [iFixit Opening Picks set of 6](#) (1)

Step 1 — Battery



- Place your finger in the small notch on the left corner of the phone.
- Use your finger to gently pull up on the back cover where the notch is located.
- Gently pull up on the back cover, working around the phone.
- Remove the cover from the phone, and set it aside for later installation.


Step 2



- Place your thumb in the small notch between the battery and the phone.
- Use your thumb to gently pry the battery up at the notch, releasing it from the phone.

 Take note of the contacts in the phone and on the battery for reinstallation.

Step 3 — Antenna

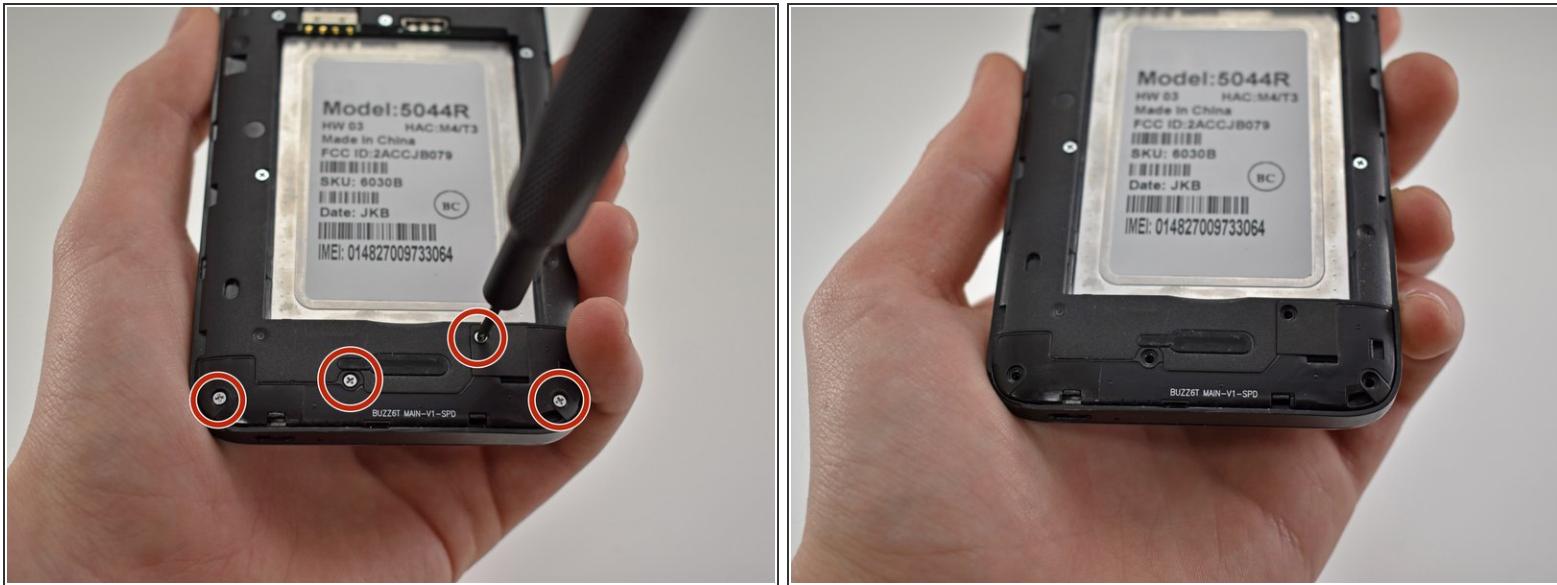

- Remove the four 4mm PH00 screws.

Step 4



- Using a spudger, pry upwards in the indentation on the bottom right corner of the phone.
- Work the tool gently around the antenna to release it.

Step 5 — Rear Speaker



- Remove the three 4mm PH00 screws holding the WiFi/GPS antenna in.
- Gently pry the WiFi/GPS antenna out using a Jimmy and set aside.

Step 6




- Remove the three remaining 4mm PH00 screws.
- Remove the two 3mm PH00 screws.

Step 7



- Using a spudger and an iFixit opening pick, pry the midframe up.

Step 8

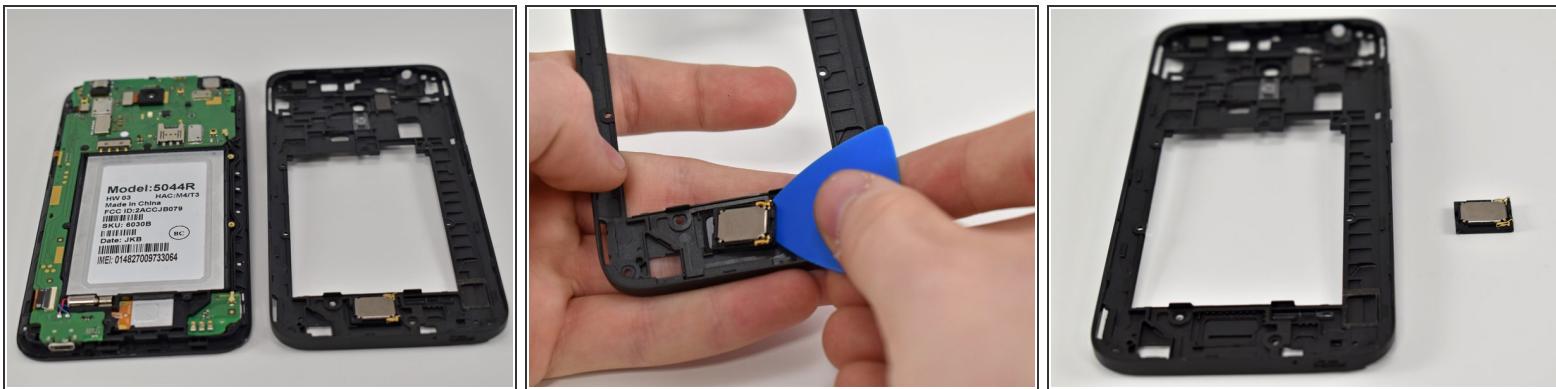

- Pry gently between the rear case and speaker using an iFixit opening pick.
- ➡ Reapply adhesive to the new speaker when reassembling the phone.

To reassemble your device, follow these instructions in reverse order.