



# Alcatel Pop 4 Plus Power/Volume Button Rocker Replacement

The correct way to replace the Power/Volume Button Rocker on Alcatel Pop 4 Plus.

Written By: Anna Gongre



## INTRODUCTION

### Caution: Handling of Sharp Objects


Please use caution when handling tweezers and keep out of reach of children.

If you notice that your phone has a delay in locking or turning the volume up and down, it is recommended that you change your Power/Volume button rocker.

### TOOLS:

- **Spudger** (1)
- **Tweezers** (1)

## Step 1 — Power/Volume Button Rocker Replacement

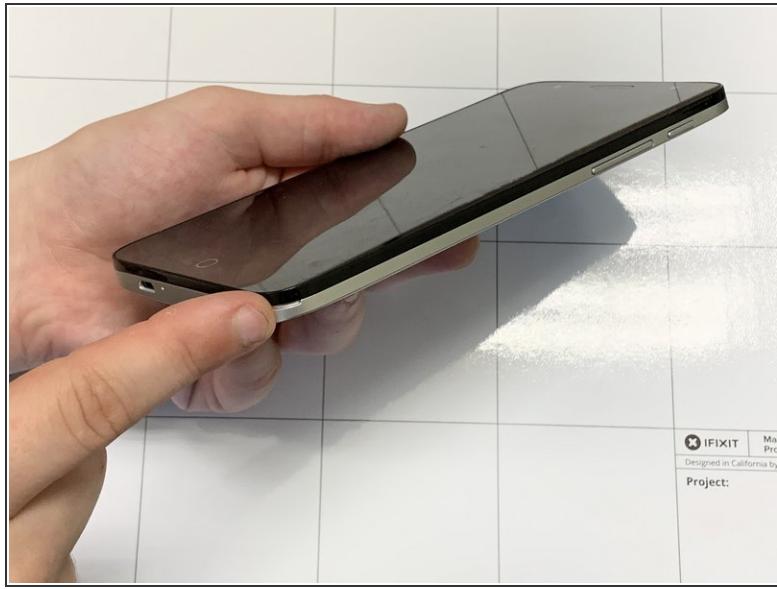

- Begin by removing the back of the phone. Press your nail or a thin object in the bottom right-hand corner of the phone and gently press to release the back of the phone from the front.

## Step 2




- Once removed completely, use the back portion to disassemble the Power/Volume Button Rocker.

## Step 3



- Remove the middle insert of the elastic on the Power/Volume button rocker with tweezers.

## Step 4

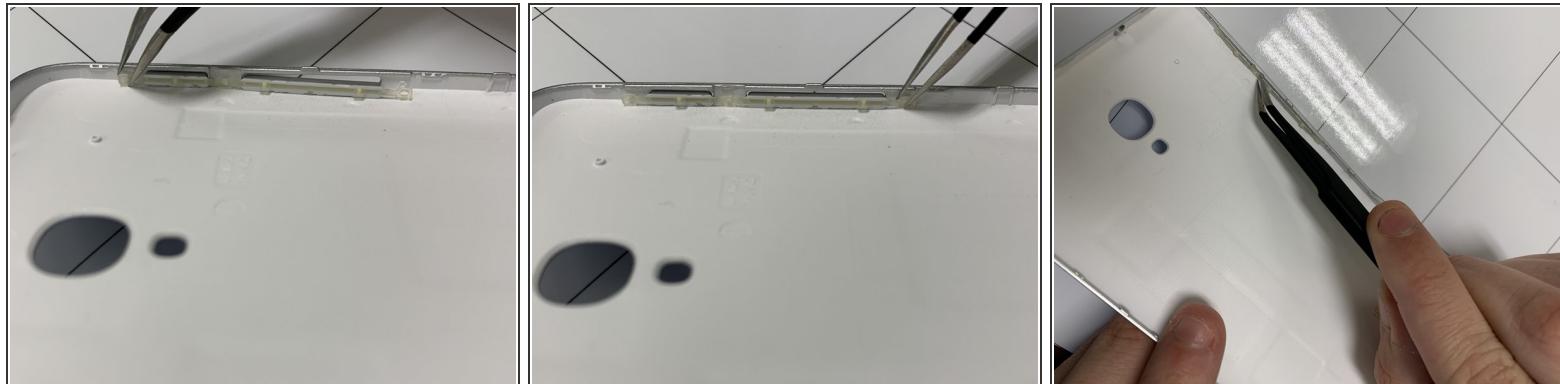

- Remove the 3 elastic bands holding the rocker in place with tweezers.

## Step 5



- Once removed, place new rocker in same elastic slots. Follow instructions backwards to reassemble.

To reassemble your device, follow these instructions in reverse order.